


Main Relay

FUEL INJECTION (FUEL SYSTEMS)


21.Main Relay

A: REMOVAL

- 1) Disconnect the ground cable from battery.

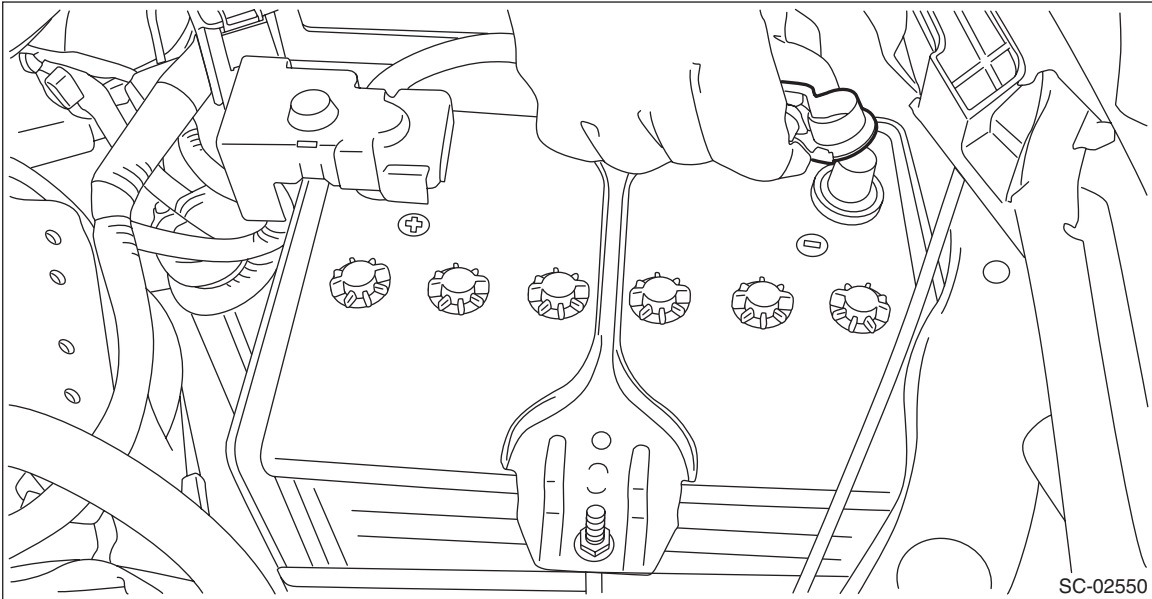

- 2) Remove the glove box. <Ref. to EI-78, REMOVAL, Glove Box.>
- 3) Remove the main relay from relay block.

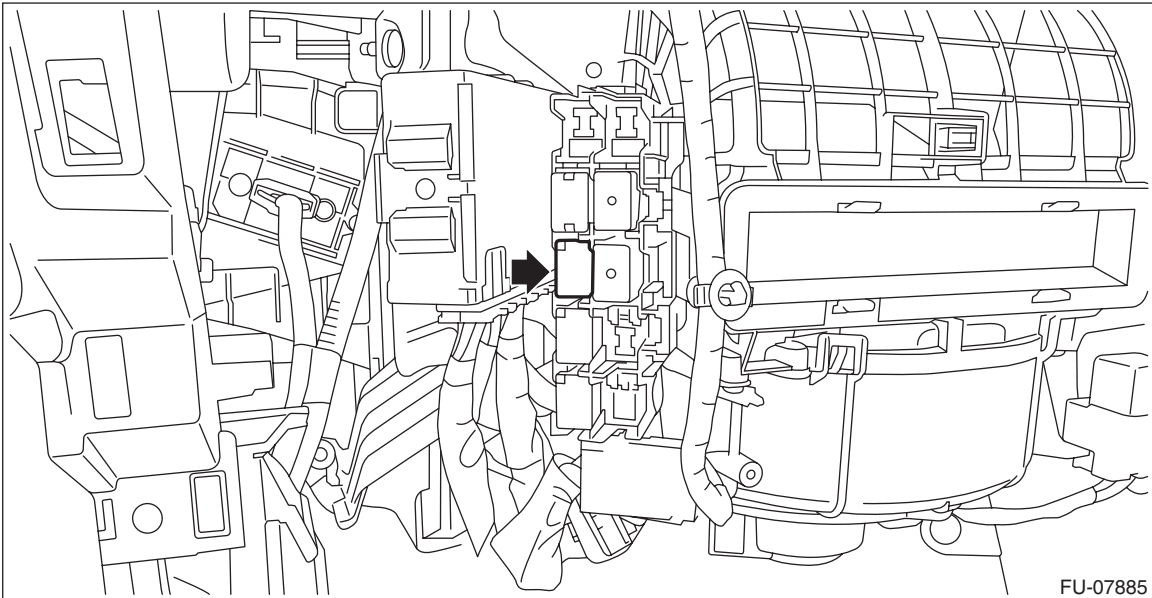

B: INSTALLATION

Install in the reverse order of removal.


C: INSPECTION

- 1) Check that the main relay has no deformation, cracks or other damages.

Main Relay


FUEL INJECTION (FUEL SYSTEMS)

2) Measure the resistance between main relay terminals.

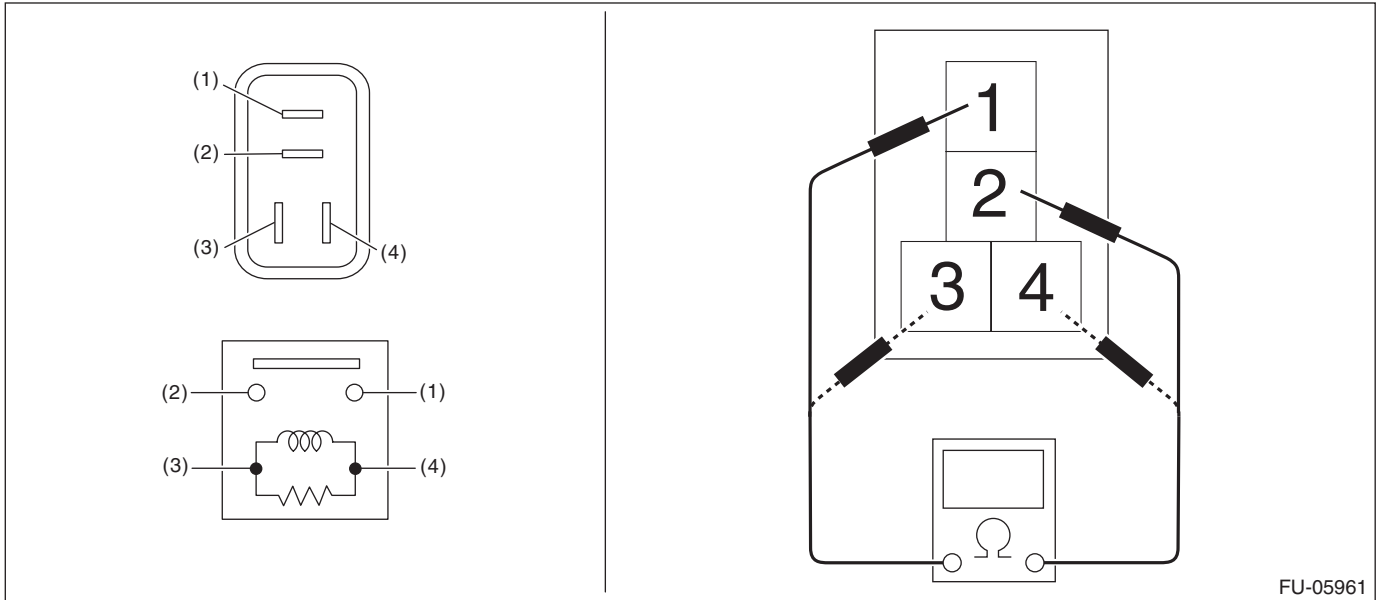

Terminal No.	Standard
1 and 2	1 M Ω or more
3 and 4	130.4 — 230.8 Ω (when 20°C (68°F))

3) Connect battery positive terminal to terminal No. 3 and battery ground terminal to terminal No. 4, and measure the resistance between the main relay terminals.

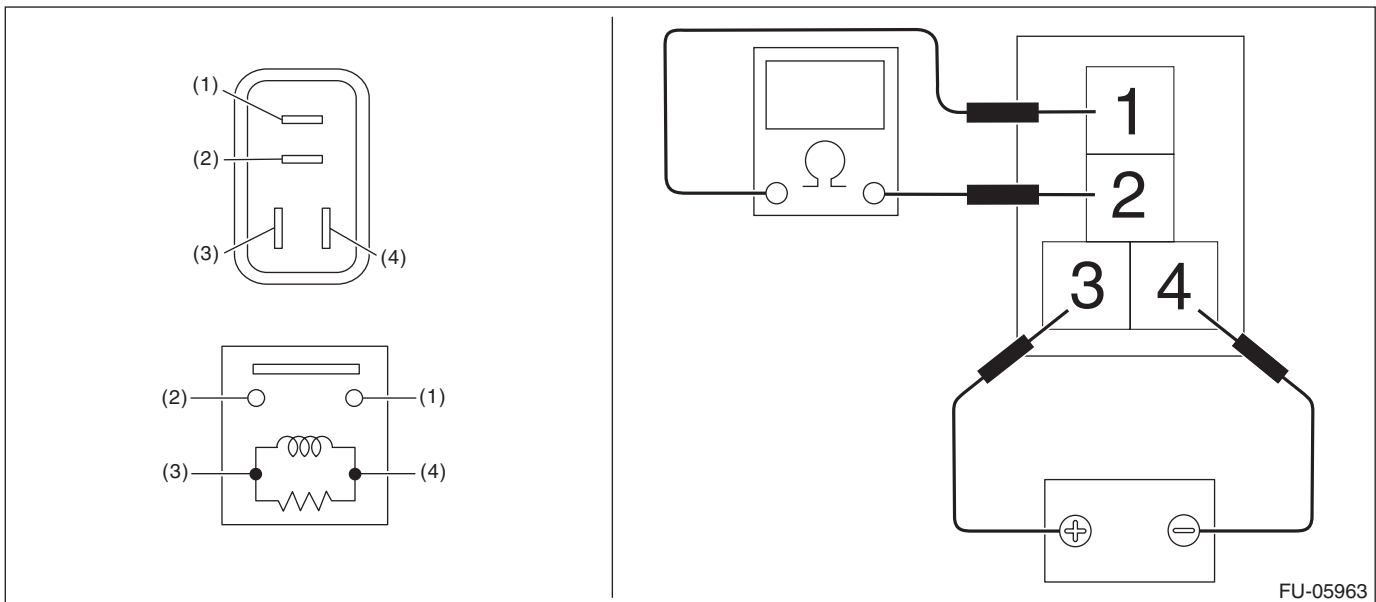

Terminal No.	Standard
1 and 2	Less than 1 Ω