

3. Ignition Coil

A: REMOVAL

Direct ignition type is adopted. Refer to “Spark Plug” for removal procedure. <Ref. to IG(H4DO(w/o HEV))-4, REMOVAL, Spark Plug.>

B: INSTALLATION

Direct ignition type is adopted. Refer to “Spark Plug” for the installation procedure. <Ref. to IG(H4DO(w/o HEV))-7, INSTALLATION, Spark Plug.>

C: INSPECTION

For inspection procedure, refer to “Diagnostics for Engine Starting Failure”. <Ref. to EN(H4DO w/o HEV)(diag)-87, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.> <Ref. to EN(H4DO HEV)(diag)-85, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>

STARTING/CHARGING SYSTEMS

SC(H4DO(w/o HEV))

	Page
1. General Description	2
2. Starter	8
3. Generator	32
4. Battery	52
5. Battery Current & Temperature Sensor	61