


Air Intake Boot

INTAKE (INDUCTION)

4. Air Intake Boot

A: REMOVAL

- 1) Remove the clip (A) from the air intake boot.
- 2) Loosen the clamp (B) securing the air cleaner case (rear) to the air intake boot.
- 3) Loosen the clamp (C) which secures the throttle body to the air intake boot.

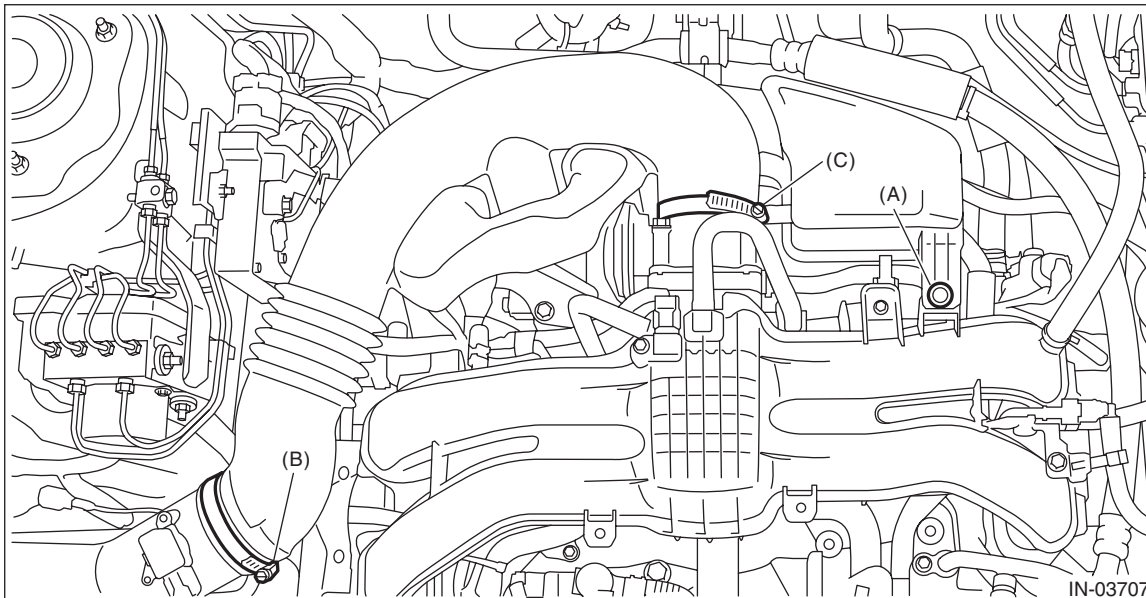

- 4) Disconnect the PCV hose and remove the air intake boot.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

3 N·m (0.3 kgf-m, 2.2 ft-lb)

C: INSPECTION

- 1) Check that the air intake boot has no deformation, cracks or other damages.
- 2) Inspect that no foreign objects are mixed in the air intake boot.