

4. Oil Pump

A: SPECIFICATION

The oil pump cannot be disassembled.

Refer to “Chain Cover” for removal and installation procedures. <Ref. to ME(H4DO(w/o HEV))-149, REMOVAL, Chain Cover.> <Ref. to ME(H4DO(w/o HEV))-156, INSTALLATION, Chain Cover.>