

## 10.Engine Mounting

### A: REMOVAL

- 1) Remove the front crossmember. <Ref. to FS-18, REMOVAL, Front Crossmember.>
- 2) Remove the engine mounting from the engine.

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

***35 N·m (3.6 kgf-m, 25.8 ft-lb)***

### C: INSPECTION

Make sure that there are no cracks or other damages.