

19. Camshaft

A: REMOVAL

1. CAMSHAFT RH

The camshaft RH and cam carrier are designed as removing as a unit. Refer to “Cam Carrier” for removal procedures of camshaft RH. <Ref. to ME(H4DO(w/o HEV))-220, CAM CARRIER RH, REMOVAL, Cam Carrier.> <Ref. to ME(H4DO(w/o HEV))-250, CAM CARRIER RH, DISASSEMBLY, Cam Carrier.>

2. CAMSHAFT LH

The camshaft LH and cam carrier are designed as removing as a unit. Refer to “Cam Carrier” for removal procedures of camshaft LH. <Ref. to ME(H4DO(w/o HEV))-225, CAM CARRIER LH, REMOVAL, Cam Carrier.> <Ref. to ME(H4DO(w/o HEV))-252, CAM CARRIER LH, DISASSEMBLY, Cam Carrier.>

B: INSTALLATION

1. CAMSHAFT RH

The camshaft RH and cam carrier are designed as installing as a unit. Refer to “Cam Carrier” for installation procedures of camshaft RH. <Ref. to ME(H4DO(w/o HEV))-253, CAM CARRIER RH, ASSEMBLY, Cam Carrier.> <Ref. to ME(H4DO(w/o HEV))-230, CAM CARRIER RH, INSTALLATION, Cam Carrier.>

2. CAMSHAFT LH

The camshaft LH and cam carrier are designed as installing as a unit. Refer to “Cam Carrier” for installation procedures of camshaft LH. <Ref. to ME(H4DO(w/o HEV))-255, CAM CARRIER LH, ASSEMBLY, Cam Carrier.> <Ref. to ME(H4DO(w/o HEV))-240, CAM CARRIER LH, INSTALLATION, Cam Carrier.>