

23.Intake and Exhaust Valve

A: SPECIFICATION

Refer to “Cylinder Head” for removal and installation procedures of the intake and exhaust valves. <Ref. to ME(H4DO(w/o HEV))-263, REMOVAL, Cylinder Head.> <Ref. to ME(H4DO(w/o HEV))-265, INSTALLATION, Cylinder Head.>