

25.Connecting Rod

A: SPECIFICATION

Refer to “Cylinder Block” for removal and installation procedures of connecting rod.

<Ref. to ME(H4DO(w/o HEV))-304, REMOVAL, Cylinder Block.> <Ref. to ME(H4DO(w/o HEV))-323, INSTALLATION, Cylinder Block.>