

General Description

PERIODIC MAINTENANCE SERVICES

1. General Description

A: GENERAL DESCRIPTION

Be sure to perform periodic maintenance in order to maintain vehicle performance and find problems before they occur.

Schedule

PERIODIC MAINTENANCE SERVICES

2. Schedule

A: MAINTENANCE SCHEDULE

1. MODEL WITH US SPECIFICATION

Maintenance item		Maintenance interval [Number of months or km (miles), whichever occurs first]													Remarks
	Months	3	6	12	18	24	30	36	42	48	54	60	66	To be continued to the next table.	
	× 1,000 km	4.8	9.6	19.2	28.8	38.4	48	57.6	67.2	76.8	86.4	96	105.6		
	× 1,000 miles	3	6	12	18	24	30	36	42	48	54	60	66		
1	Engine oil		R	R	R	R	R	R	R	R	R	R	R		Note 1.
2	Engine oil filter		R	R	R	R	R	R	R	R	R	R	R		Note 1.
3	Spark plug											R			
4	V-belt						I					I			
5	Fuel line						I					I			Note 6. Note 7.
6	Fuel filter														Note 2. Note 7.
7	Air cleaner element						R					R			Note 8.
8	Cooling system						I					I			Note 10.
9	Engine coolant	Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter													Note 10.
10	Clutch system			I		I		I		I		I			
11	Transmission gear oil						I					I			Note 3.
12	CVTF						I					I			Note 4.
13	Front & rear differential gear oil						I					I			Note 3.
14	Brake line			I		I		I		I		I			Note 6.
15	Brake fluid / clutch fluid (MT model only)						R					R			Note 5.
16	Disc brake pad and disc			I		I		I		I		I			Note 6.
17	Parking brake			I		I		I		I		I			Note 6.
18	Suspension			I		I		I		I		I			Note 6.
19	Wheel bearing											I			
20	Axle boots and joints			I		I		I		I		I			Note 6.
21	Tire rotation		P	P	P	P	P	P	P	P	P	P	P		Note 9.
22	Steering system (Power steering)			I		I		I		I		I			Note 6.
23	A/C filter	Replace every 12 months or 19,200 km (12,000 miles)													Note 8.

Schedule

PERIODIC MAINTENANCE SERVICES

Maintenance item		Maintenance interval [Number of months or km (miles), whichever occurs first]												Remarks
	Months	Continued from previous table	72	78	84	90	96	102	108	114	120	126	132	
	× 1,000 km		115.2	124.8	134.4	144	153.6	163.2	172.8	182.4	192	201.6	211.2	
	× 1,000 miles		72	78	84	90	96	102	108	114	120	126	132	
1	Engine oil		R	R	R	R	R	R	R	R	R	R	R	Note 1.
2	Engine oil filter		R	R	R	R	R	R	R	R	R	R	R	Note 1.
3	Spark plug										R			
4	V-belt					I					I			
5	Fuel line					I					I			Note 6. Note 7.
6	Fuel filter		R											Note 2. Note 7.
7	Air cleaner element					R					R			Note 8.
8	Cooling system					I					I			Note 10.
9	Engine coolant	Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter												Note 10.
10	Clutch system		I		I		I		I		I		I	
11	Transmission gear oil					I					I			Note 3.
12	CVTF					I					I			Note 4.
13	Front & rear differential gear oil					I					I			Note 3.
14	Brake line		I		I		I		I		I		I	Note 6.
15	Brake fluid / clutch fluid (MT model only)					R					R			Note 5.
16	Disc brake pad and disc		I		I		I		I		I		I	Note 6.
17	Parking brake		I		I		I		I		I		I	Note 6.
18	Suspension		I		I		I		I		I		I	Note 6.
19	Wheel bearing										I			
20	Axle boots and joints		I		I		I		I		I		I	Note 6.
21	Tire rotation		P	P	P	P	P	P	P	P	P	P	P	Note 9.
22	Steering system (Power steering)		I		I		I		I		I		I	Note 6.
23	A/C filter	Replace every 12 months or 19,200 km (12,000 miles)												Note 8.

Symbol

R: Replace

I: Inspection

P: Perform