

3. Engine Oil

A: INSPECTION

Refer to “LU” section for engine oil inspection.
<Ref. to LU(H4DO(w/o HEV))-12, INSPECTION,
Engine Oil.>

B: REPLACEMENT

Refer to “LU” section for engine oil replacement.
<Ref. to LU(H4DO(w/o HEV))-13, REPLACE-
MENT, Engine Oil.>