

### 7. Fuel Line

#### A: INSPECTION

The fuel line is located mostly internally, so check pipes, areas near pipes, and engine compartment piping for rust, hose and tube damage, loose band, etc. If faulty parts are found, repair or replace them. <Ref. to FU(H4DO(w/o HEV))-170, INSPECTION, Fuel Delivery and Evaporation Lines.> <Ref. to FU(H4DO(HEV))-157, INSPECTION, Fuel Delivery and Evaporation Lines.>