

8. Fuel Filter

A: REPLACEMENT

For fuel filter replacement procedure, refer to “FU” section. <Ref. to FU(H4DO(w/o HEV))-153, Fuel Filter.> <Ref. to FU(H4DO(HEV))-138, Fuel Filter.>

B: INSPECTION

Replace if the filter is clogged, or time for replacement has come.