

## **14.CVTF**

### **A: INSPECTION**

Refer to “CVT (TR580)” section for CVTF inspection. <Ref. to CVT(TR580)-36, INSPECTION, CVTF.> <Ref. to CVT(TH58A)-41, INSPECTION, CVTF.>

### **B: REPLACEMENT**

Refer to “CVT (TR580)” section for CVTF replacement. <Ref. to CVT(TR580)-38, REPLACEMENT, CVTF.> <Ref. to CVT(TH58A)-43, REPLACEMENT, CVTF.>