

15. Front & Rear Differential Gear Oil

A: INSPECTION

1. FRONT DIFFERENTIAL (MT MODEL)

Front differential gear oil of MT model lubricates the transmission and differential together. Refer to “Transmission Gear Oil” for inspection procedures. <Ref. to 5MT-21, INSPECTION, Transmission Gear Oil.>

2. FRONT DIFFERENTIAL (CVT MODEL)

Refer to “CVT (TR580)” or “CVT (TH58A)” section for front differential gear oil inspection of CVT model. <Ref. to CVT(TR580)-41, INSPECTION, Differential Gear Oil.> <Ref. to CVT(TH58A)-45, INSPECTION, Differential Gear Oil.>

3. REAR DIFFERENTIAL

Refer to “DI” section for rear differential gear oil inspection. <Ref. to DI-19, INSPECTION, Differential Gear Oil.>

B: REPLACEMENT

1. FRONT DIFFERENTIAL (MT MODEL)

Front differential gear oil of MT model lubricates the transmission and differential together. Refer to “5MT” section for replacement procedure. <Ref. to 5MT-21, REPLACEMENT, Transmission Gear Oil.>

2. FRONT DIFFERENTIAL (CVT MODEL)

Refer to “CVT (TR580)” or “CVT (TH58A)” section for front differential gear oil replacement. <Ref. to CVT(TR580)-43, REPLACEMENT, Differential Gear Oil.> <Ref. to CVT(TH58A)-47, REPLACEMENT, Differential Gear Oil.>

3. REAR DIFFERENTIAL

Refer to “DI” section for rear differential gear oil replacement. <Ref. to DI-19, REPLACEMENT, Differential Gear Oil.>