

25.A/C Filter

A: REPLACEMENT

Refer to “AC” section for A/C filter replacement.
<Ref. to AC-109, REPLACEMENT, A/C Filter.>

ENGINE 1 SECTION

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUEL INJECTION (FUEL SYSTEMS)

FU(H4DO(w/o
HEV))EMISSION CONTROL
(AUX. EMISSION CONTROL DEVICES)EC(H4DO(w/o
HEV))

INTAKE (INDUCTION)

IN(H4DO(w/o
HEV))

MECHANICAL

ME(H4DO(w/o
HEV))

EXHAUST

EX(H4DO(w/o
HEV))

COOLING

CO(H4DO(w/o
HEV))

LUBRICATION

LU(H4DO(w/o
HEV))

SPEED CONTROL SYSTEMS

SP(H4DO(w/o
HEV))

IGNITION

IG(H4DO(w/o
HEV))

STARTING/CHARGING SYSTEMS

SC(H4DO(w/o
HEV))

ENGINE (DIAGNOSTICS)

EN(H4DO w/o
HEV)(diag)

GENERAL DESCRIPTION

GD(H4DO w/o
HEV)

FUEL INJECTION (FUEL SYSTEMS)

FU(H4DO(w/o HEV))

	Page
1. General Description	2
2. Throttle Body	14
3. Intake Manifold	19
4. Engine Wiring Harness	43
5. Engine Coolant Temperature Sensor	51
6. Engine Oil Temperature Sensor	53
7. Crankshaft Position Sensor	55
8. Crankshaft Position Sensor Plate	58
9. Camshaft Position Sensor	59
10. Oil Control Solenoid	64
11. Knock Sensor	68
12. Throttle Position Sensor	72
13. Mass Air Flow and Intake Air Temperature Sensor	73
14. Manifold Absolute Pressure Sensor	76
15. Fuel Injector	79
16. Tumble Generator Valve Assembly	85
17. Tumble Generator Valve Actuator	90
18. Front Oxygen (A/F) Sensor	92
19. Rear Oxygen Sensor	96
20. Engine Control Module (ECM)	100
21. Main Relay	102
22. Fuel Pump Relay	104
23. Electronic Throttle Control Relay	106
24. Fuel	109
25. Fuel Tank Protector	114
26. Fuel Tank	116
27. Fuel Filler Pipe	132
28. Fuel Pump	137
29. Fuel Level Sensor	143
30. Fuel Sub Level Sensor	146
31. Fuel Filter	153
32. Fuel Delivery and Evaporation Lines	164
33. Fuel System Trouble in General	171