

Clear Memory Mode

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

8. Clear Memory Mode

A: OPERATION

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.

CAUTION:

- If the AT learning value is cleared, learned control memory is cleared.
- If the AT learning value is cleared, perform learning. <Ref. to CVT(HEV)(diag)-26, Learning Control.>