

24. Drive Motor Control Module

A: REMOVAL

NOTE:

For removal of the drive motor control module, refer to “HEV” section. <Ref. to HEV-74, Drive Motor Control Module.>

B: INSTALLATION

NOTE:

For installation of the drive motor control module, refer to HEV section. <Ref. to HEV-74, Drive Motor Control Module.>