


Transfer Driven Gear

CONTINUOUSLY VARIABLE TRANSMISSION

34.Transfer Driven Gear


A: REMOVAL

- 1) Remove the transmission assembly from the vehicle. <Ref. to CVT(TH58A)-63, REMOVAL, Automatic Transmission Assembly.>
- 2) Remove the extension case. <Ref. to CVT(TH58A)-182, REMOVAL, Extension Case.>
- 3) Remove the transfer clutch assembly. <Ref. to CVT(TH58A)-186, REMOVAL, Transfer Clutch.>
- 4) Remove the transfer driven gear assembly.

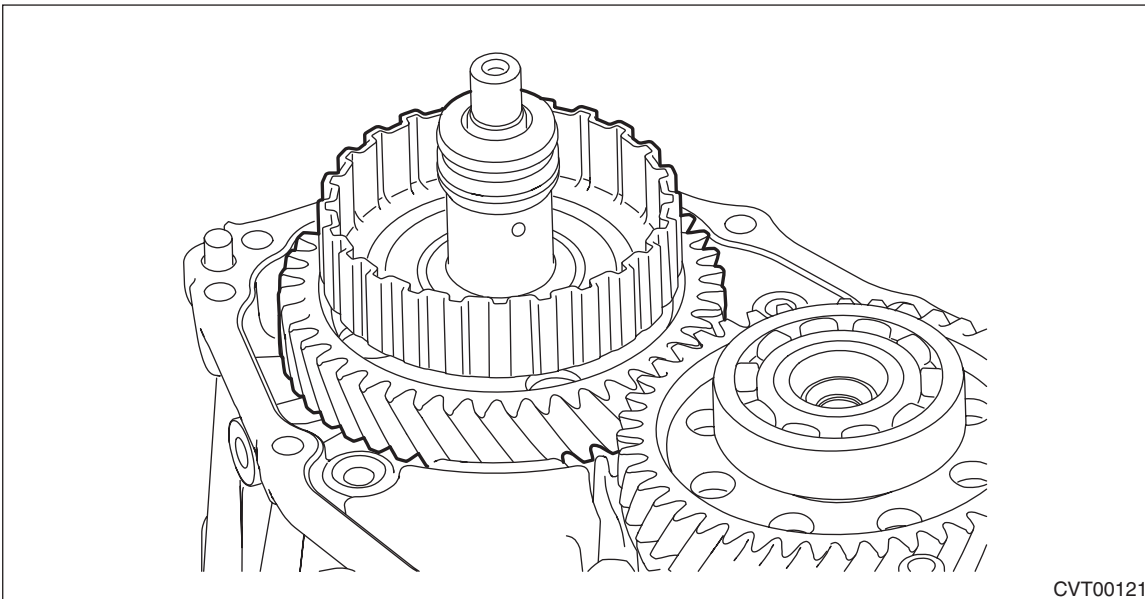

CVT00121


- 5) Remove the seal ring from the transfer driven gear assembly.

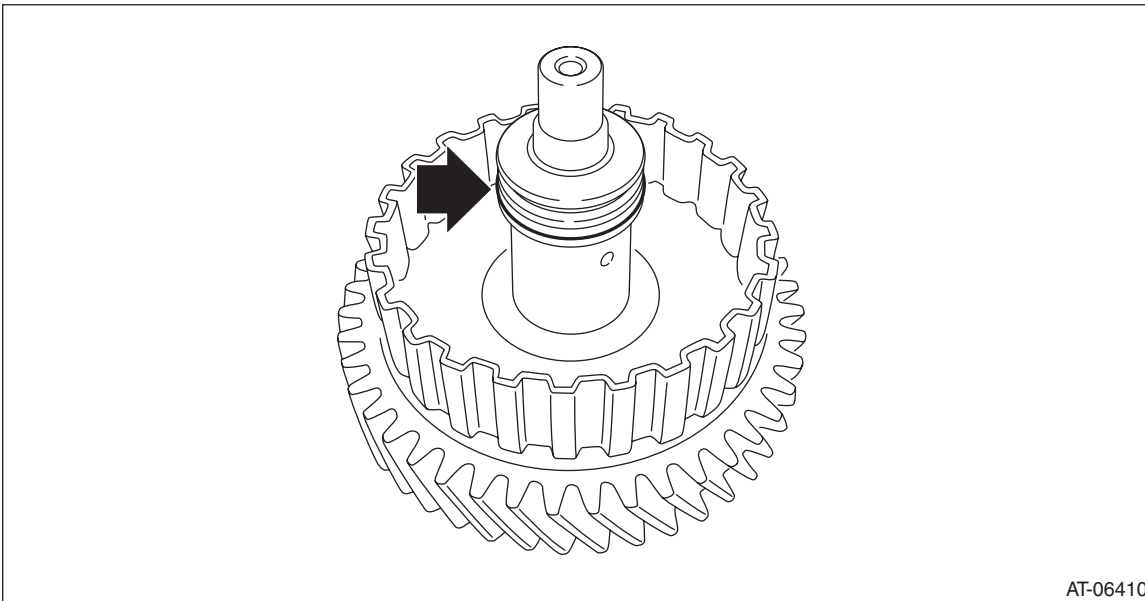

AT-06410

B: INSTALLATION


- 1) Install the transfer driven gear assembly.

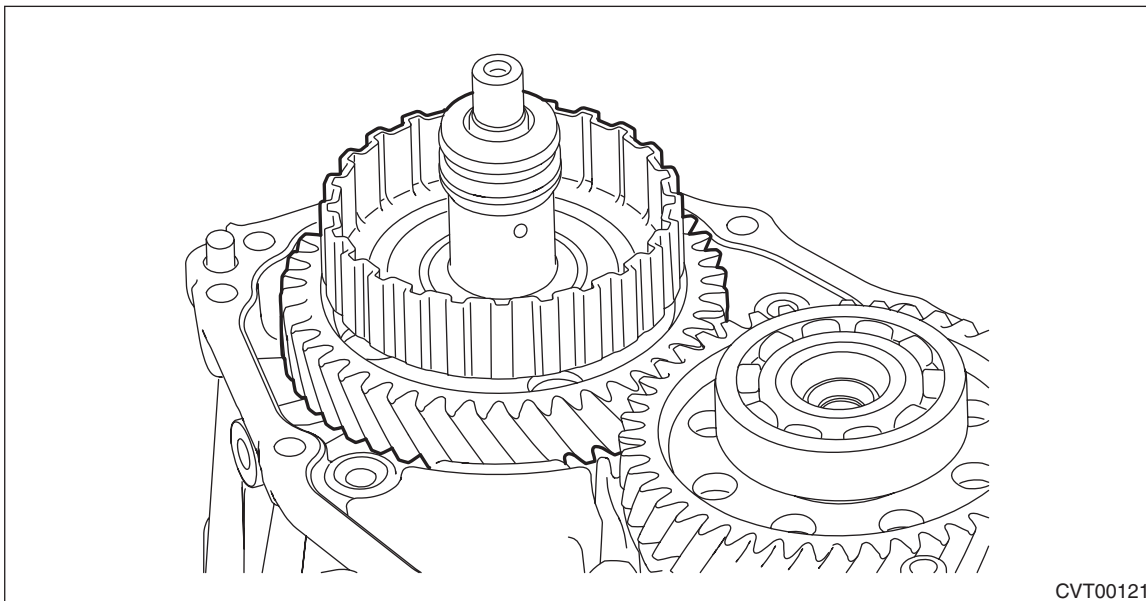

- 2) Install the transfer clutch assembly. <Ref. to CVT(TH58A)-188, INSTALLATION, Transfer Clutch.>
- 3) Select the transfer driven gear shim. <Ref. to CVT(TH58A)-198, ADJUSTMENT, Transfer Clutch.>
- 4) Install the extension case. <Ref. to CVT(TH58A)-183, INSTALLATION, Extension Case.>
- 5) Install the transmission assembly to the vehicle. <Ref. to CVT(TH58A)-77, INSTALLATION, Automatic Transmission Assembly.>

C: DISASSEMBLY

- 1) Remove the ball bearing using ST.
ST1 18767AA020 BEARING REMOVER
ST2 18723AA000 REMOVER
ST3 899864100 REMOVER

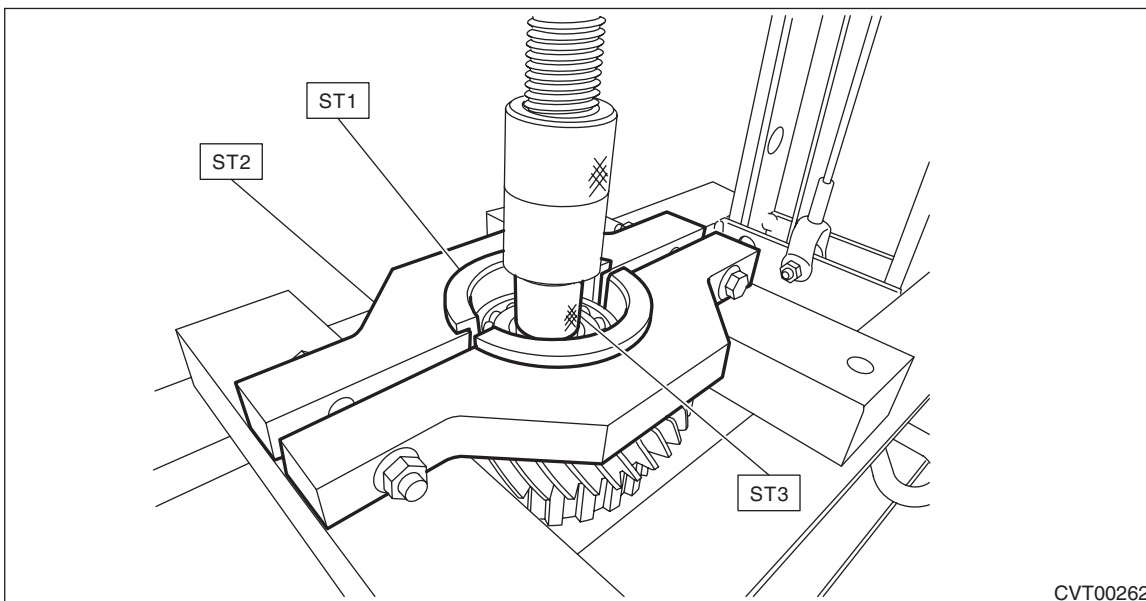


Transfer Driven Gear

CONTINUOUSLY VARIABLE TRANSMISSION

D: ASSEMBLY

1) Using the ST, install the ball bearing.

ST 18651AA000 INSTALLER

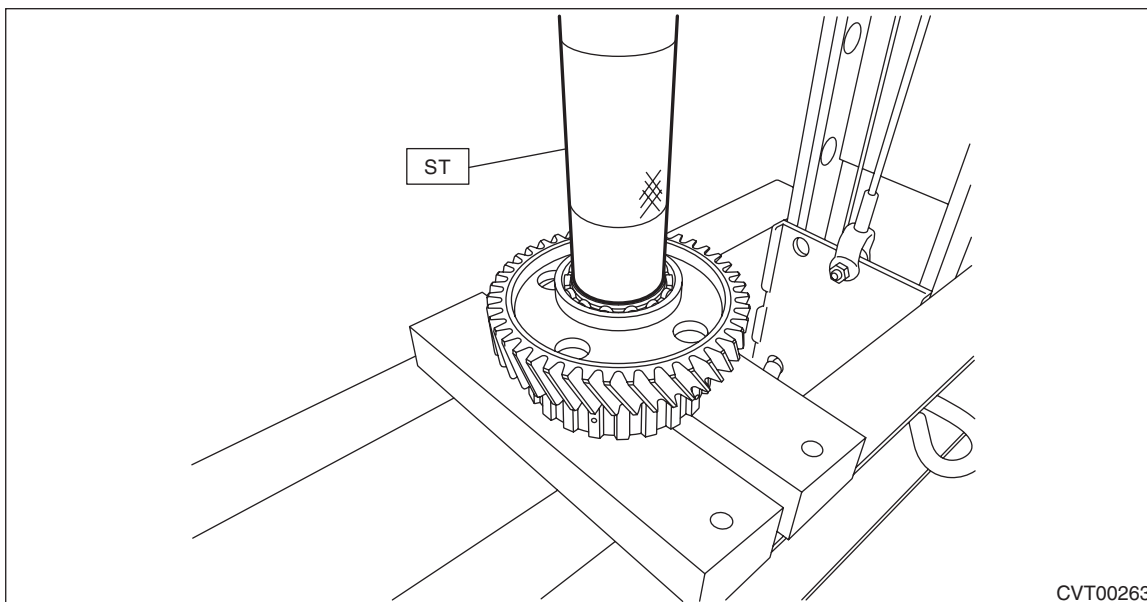

CVT00263

E: INSPECTION

- Check the ball bearing for smooth rotation.
- Check the ball bearing for excessive looseness.
- Check the transfer driven gear for breakage or damage.

F: ADJUSTMENT

NOTE:

When the transfer driven gear or bearing is replaced, select the transfer driven gear shim. <Ref. to CVT(TH58A)-198, ADJUSTMENT, Transfer Clutch.>