


24. Air Breather Hose


A: REMOVAL

1. FRONT DIFFERENTIAL SIDE


- 1) Remove the clip (A) from the air intake boot.
- 2) Loosen the clamp (B) connecting the air intake boot and air cleaner case (rear).
- 3) Loosen the clamp (C) which connects the air intake boot and throttle body.

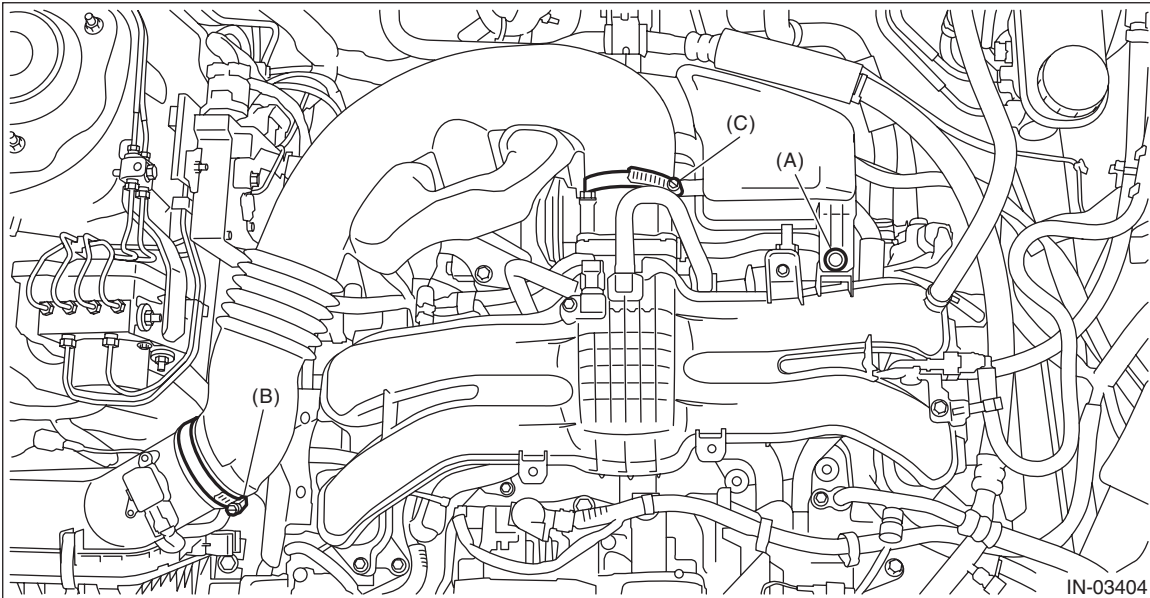

- 4) Remove the air intake boot from the throttle body, and move it to the left side wheel apron.

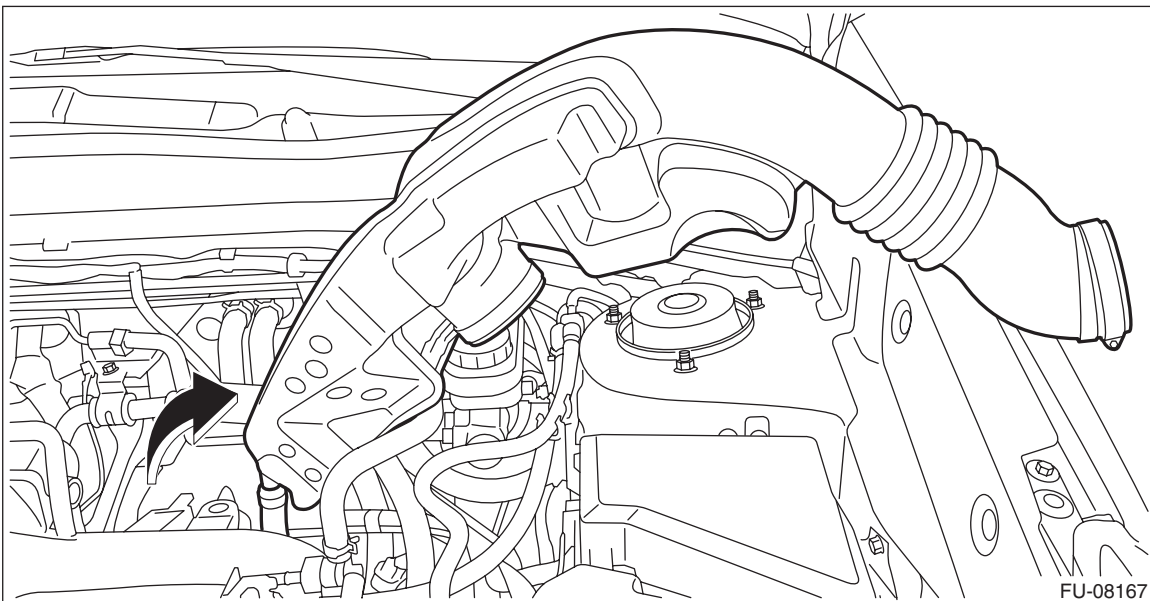


5) Remove the air breather hose.

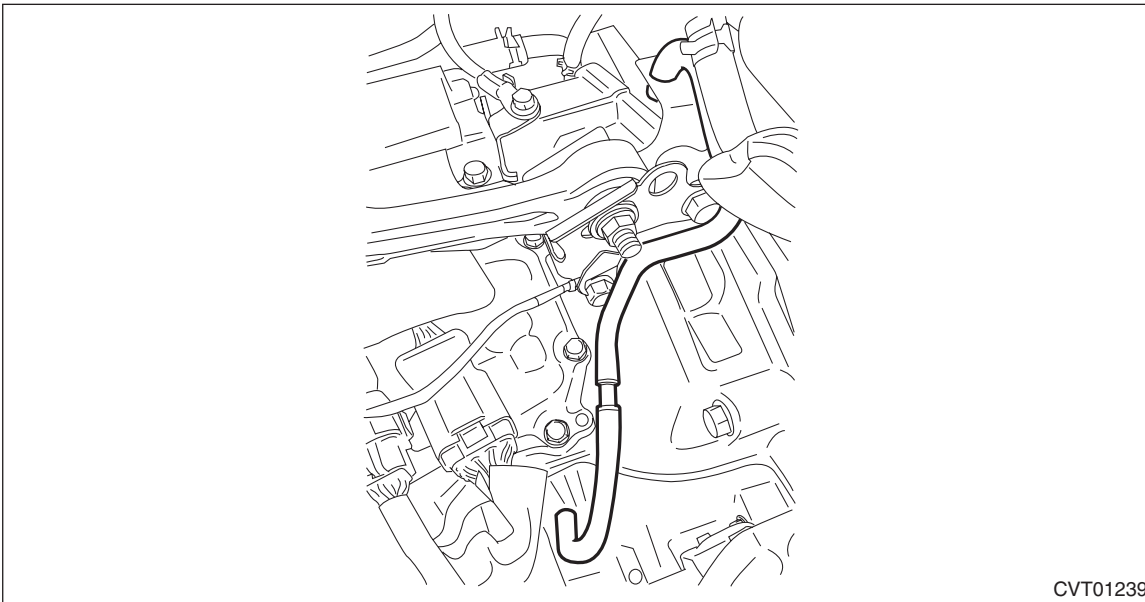

2. TRANSMISSION CASE SIDE

1) Remove the transmission assembly. <Ref. to CVT(TR580)-60, REMOVAL, Automatic Transmission Assembly.>


2) Remove the transmission case cover.

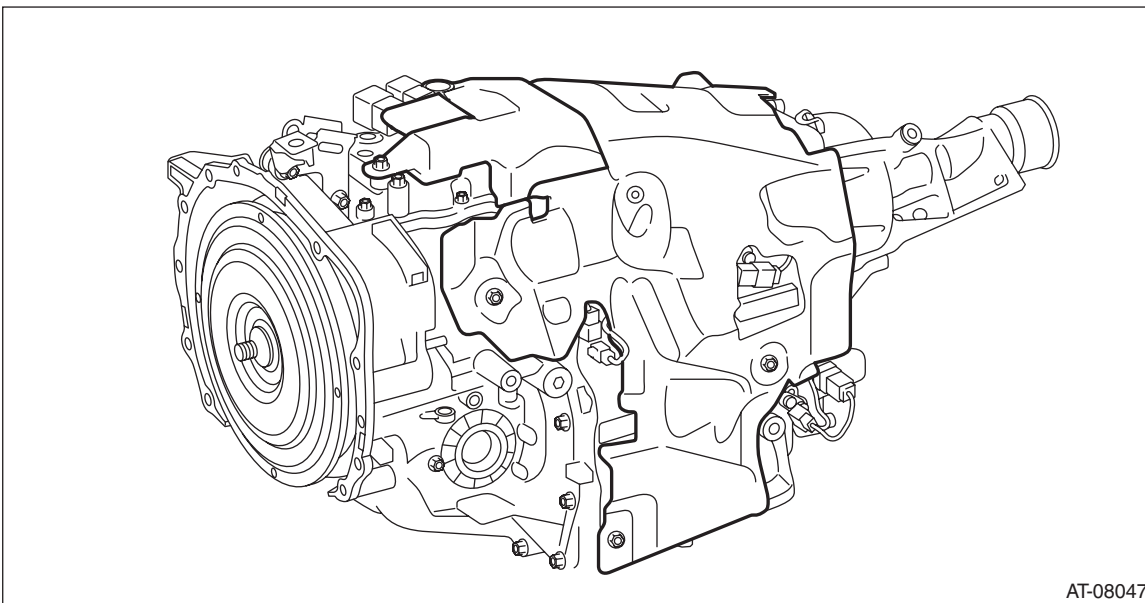

Air Breather Hose

CONTINUOUSLY VARIABLE TRANSMISSION

3) Remove the air breather hose.

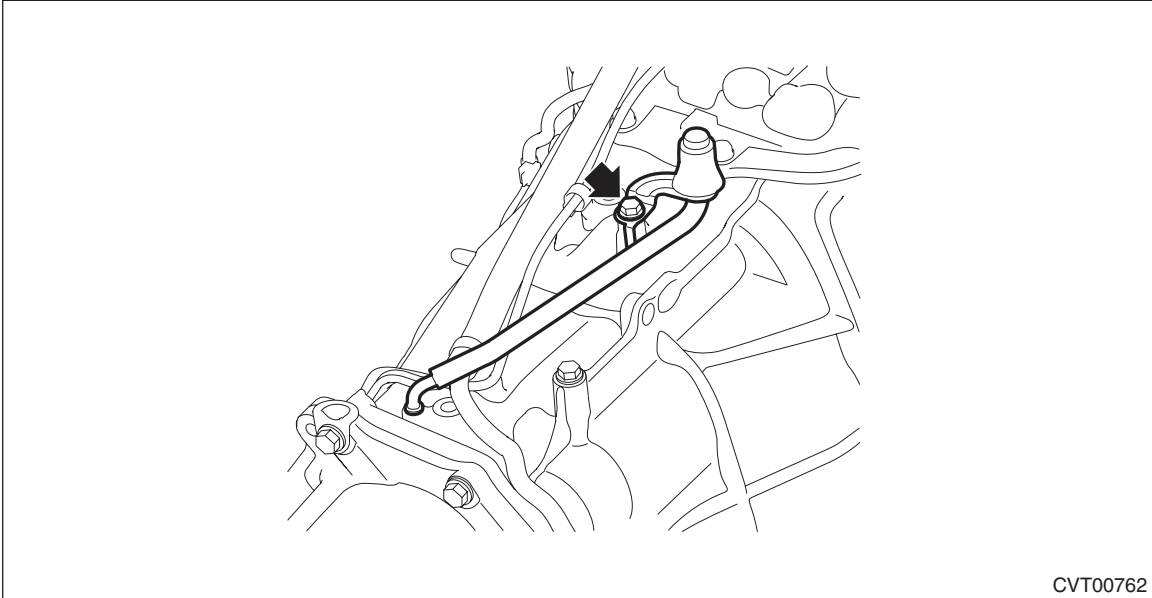

CVT00762

4) Remove the air breather cap.


B: INSTALLATION

1. FRONT DIFFERENTIAL SIDE

Install in the reverse order of removal.

NOTE:

Securely insert the air breather hose until the hose end contacts the catch of the pitching stopper bracket.

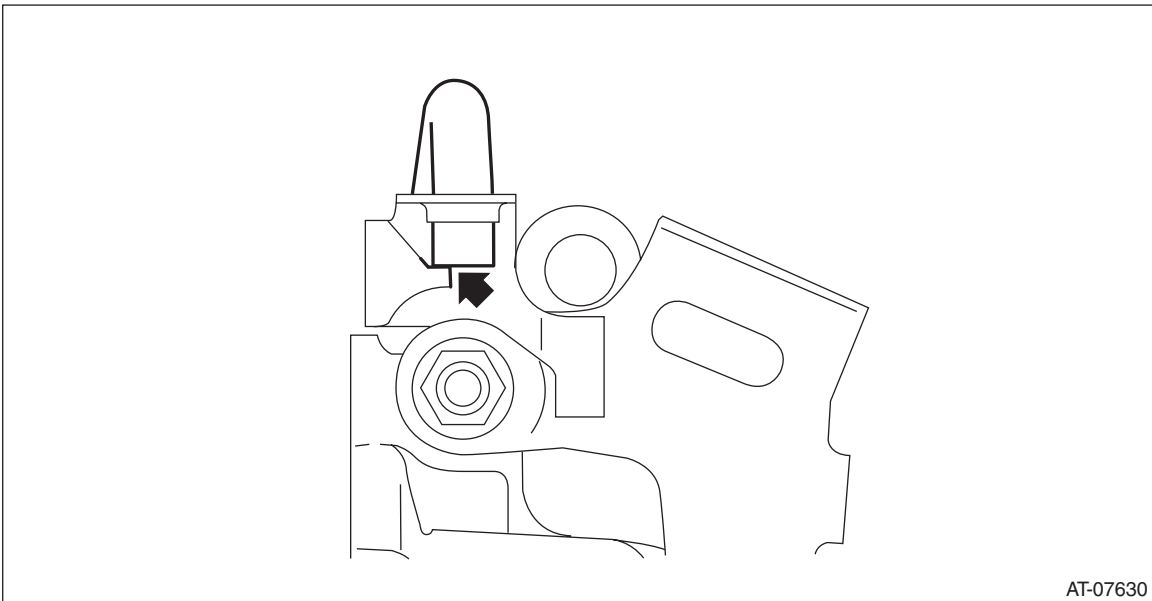

AT-07630

2. TRANSMISSION CASE SIDE

Install in the reverse order of removal.

Tightening torque:

Transmission case cover:


8 N·m (0.8 kgf-m, 5.9 ft-lb)

Air breather hose:

5 N·m (0.5 kgf-m, 3.7 ft-lb)

NOTE:

After the transmission case cover (large) is installed, insert the transmission case cover (small) between the transmission case cover (large) and the transmission to install.

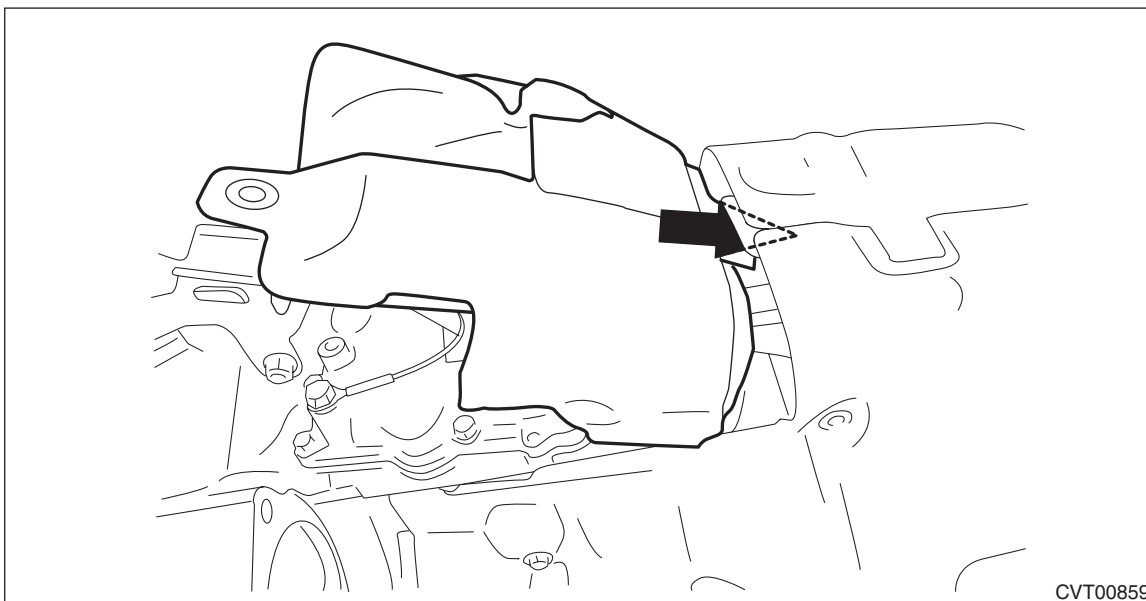

CVT00859

C: INSPECTION

Check the hose for peeling, crack or clogging.