

## 35.CVTF Filter

### A: REMOVAL

NOTE:

- Although CVTF filter is a maintenance-free part, replace it if a large quantity of wear debris and metal particles are found in CVTF and CVTF filter.
- For removal of CVTF filter, refer to “Transmission Case”. <Ref. to CVT(TR580)-205, REMOVAL, Transmission Case.> <Ref. to CVT(TR580)-211, DISASSEMBLY, Transmission Case.>

### B: INSTALLATION

NOTE:

For installation of CVTF filter, refer to “Transmission Case”. <Ref. to CVT(TR580)-214, ASSEMBLY, Transmission Case.> <Ref. to CVT(TR580)-208, INSTALLATION, Transmission Case.>

### C: INSPECTION

- Check if a large quantity of wear debris or metal particles are in CVTF and CVTF filter.
- Check for broken part or damaged O-ring.