


Oil Pump

CONTINUOUSLY VARIABLE TRANSMISSION


44.Oil Pump

A: REMOVAL

- 1) Remove the transmission assembly from the vehicle. <Ref. to CVT(TR580)-60, REMOVAL, Automatic Transmission Assembly.>
- 2) Remove the torque converter assembly. <Ref. to CVT(TR580)-164, REMOVAL, Torque Converter Assembly.>
- 3) Remove the oil pump chain cover. <Ref. to CVT(TR580)-327, REMOVAL, Oil Pump Chain.>
- 4) Remove the oil pump and the plate.

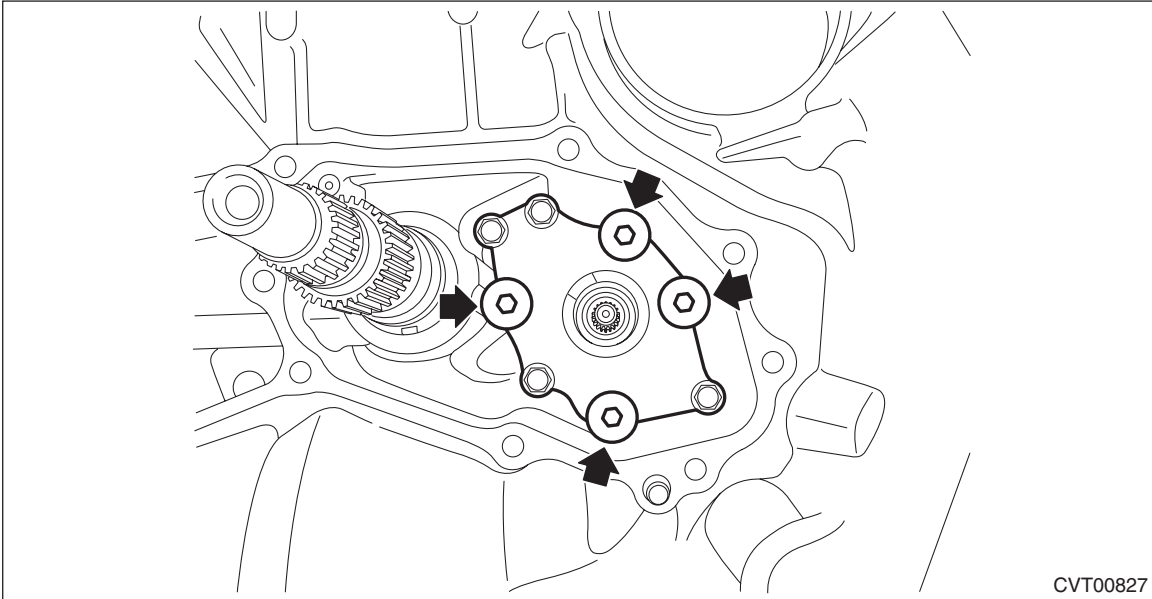

- 5) Remove the O-ring.

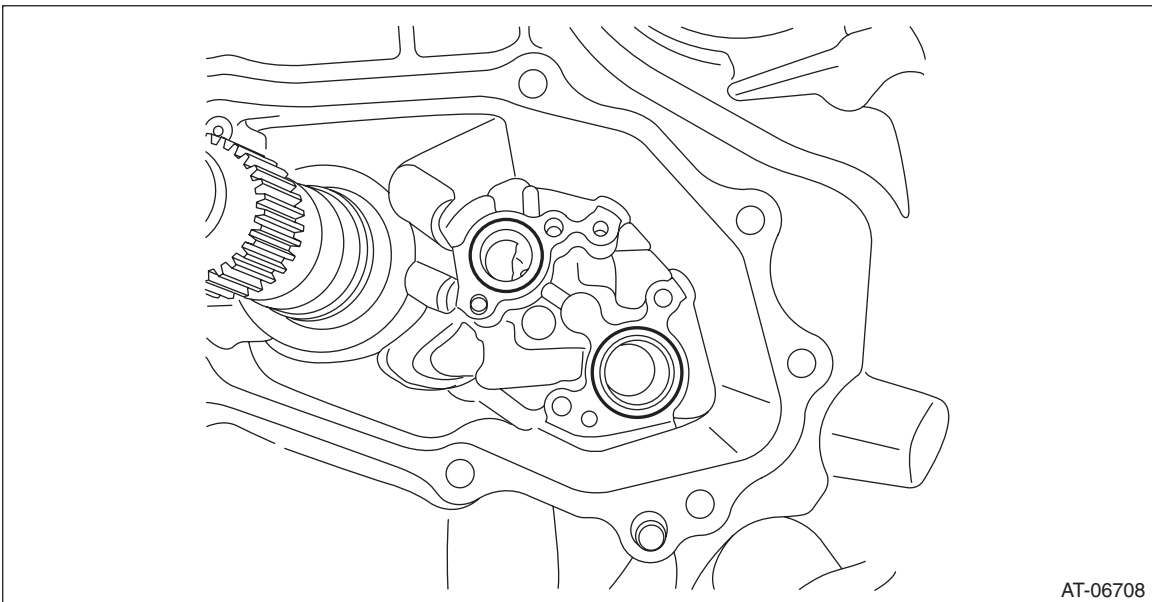


B: INSTALLATION

1) Install the O-ring.

NOTE:

- Use new O-rings.
- Apply CVTF to the O-ring.

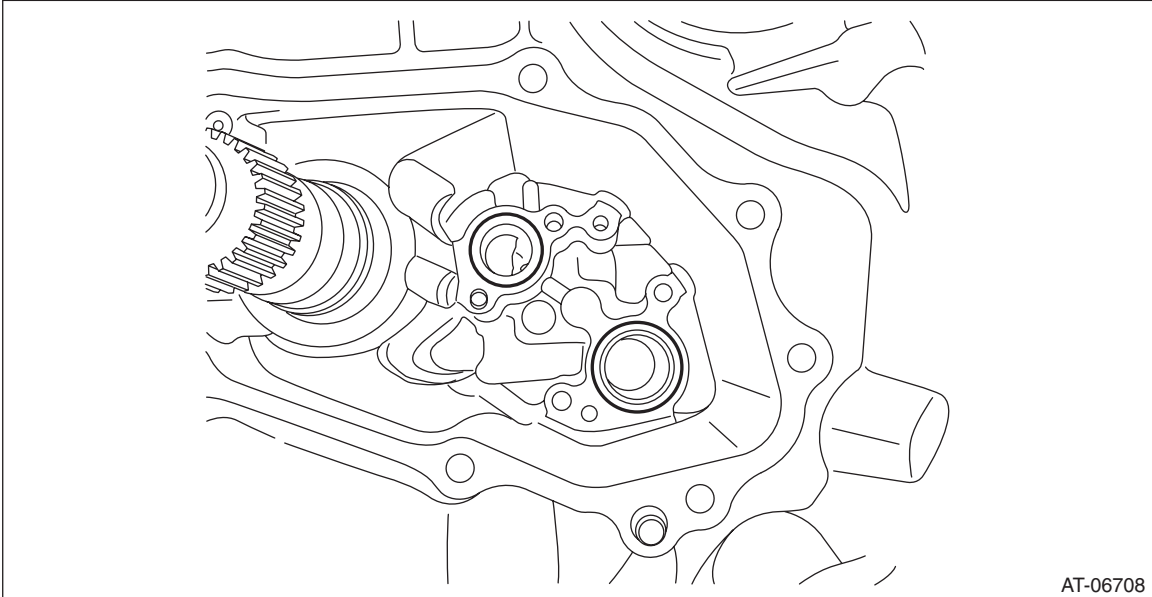


2) Install the plate and the oil pump.

NOTE:

Apply CVTF to the bolt.

Tightening torque:

8.5 N·m (0.9 kgf-m, 6.3 ft-lb)

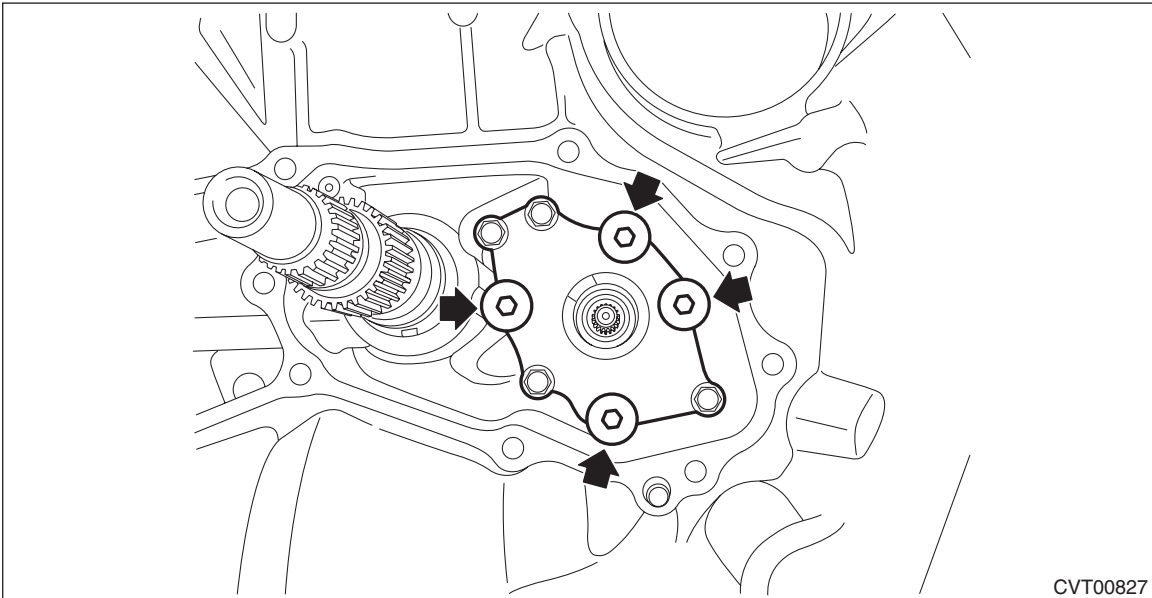

3) Install the oil pump chain cover. <Ref. to CVT(TR580)-330, INSTALLATION, Oil Pump Chain.>

4) Install the torque converter assembly. <Ref. to CVT(TR580)-165, INSTALLATION, Torque Converter Assembly.>

5) Install the transmission assembly to the vehicle. <Ref. to CVT(TR580)-72, INSTALLATION, Automatic Transmission Assembly.>

C: INSPECTION

Check the following items.

- Check the oil pump for damage and wear.
 - Rotate the oil pump by hand, and check that it rotates smoothly.
- 1) Measure the secondary pressure. <Ref. to CVT(TR580)-49, INSPECTION, Secondary Pressure (Line Pressure) Test.>
 - 2) Remove the oil pan and oil strainer. <Ref. to CVT(TR580)-117, REMOVAL, Control Valve Body.>
 - 3) Check oil strainer for clogging.
- When oil strainer has no clogging, replace the oil pump.