

System Operation Check Mode

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

11. System Operation Check Mode

A: OPERATION

CAUTION:

- Make sure that the system operation check mode is performed when the engine is not running.
- After System Operation Check Mode is run, perform the Clear Memory Mode.

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Transmission Control System}.
- 3) Select {Work Support} in the «Transmission Control System» display.
- 4) On «Work Support» display, select {System Operation Check Mode}.

NOTE:

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.

Item	SSM display	Execution condition
Activating the actuator ON/OFF	F&R Clutch Solenoid	When all of the following conditions are met <ul style="list-style-type: none">• P range• Ignition switch is ON (engine stops)• Battery voltage is 10.9 V or more
	Secondary Solenoid	
	Primary Down Solenoid	
	Primary Up Solenoid	
	AWD Solenoid	
	Lock-Up Duty Solenoid	