


25.Trunk Room Trim

A: REMOVAL


1. TRUNK LID TRIM

- 1) Open the trunk lid.
- 2) Remove the clips, and remove the trim panel - trunk lid.

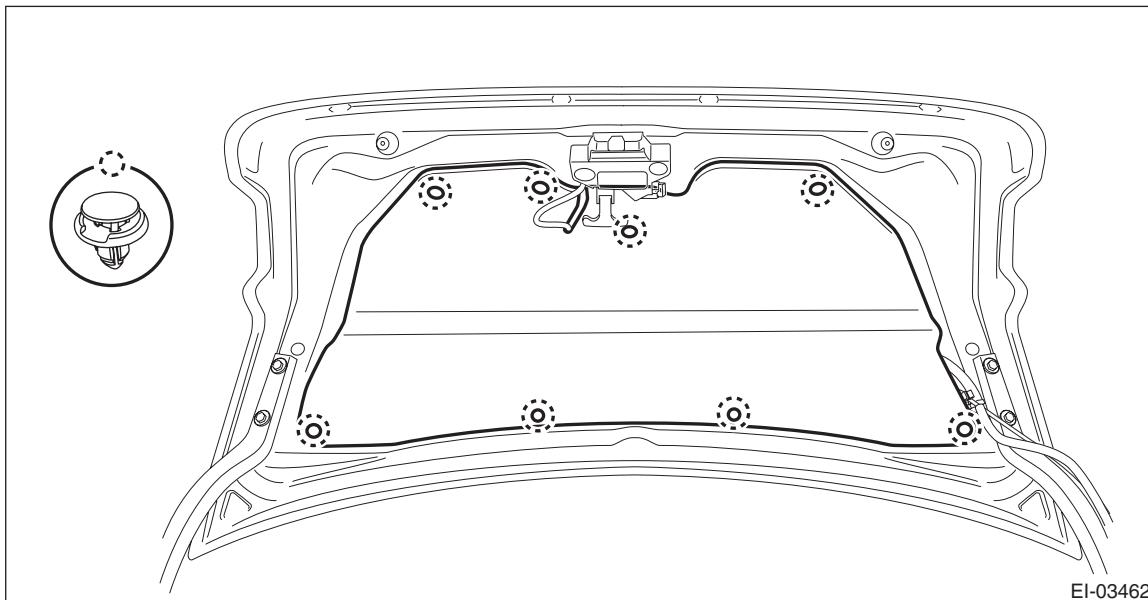

2. TRUNK ROOM TRIM


- 1) Tilt the backrest assembly forward.
- 2) Remove the mat - trunk.
- 3) Remove the trim panel - trunk rear.
 - (1) Remove the clip.
 - (2) Release the claws, and remove the trim panel - trunk rear.

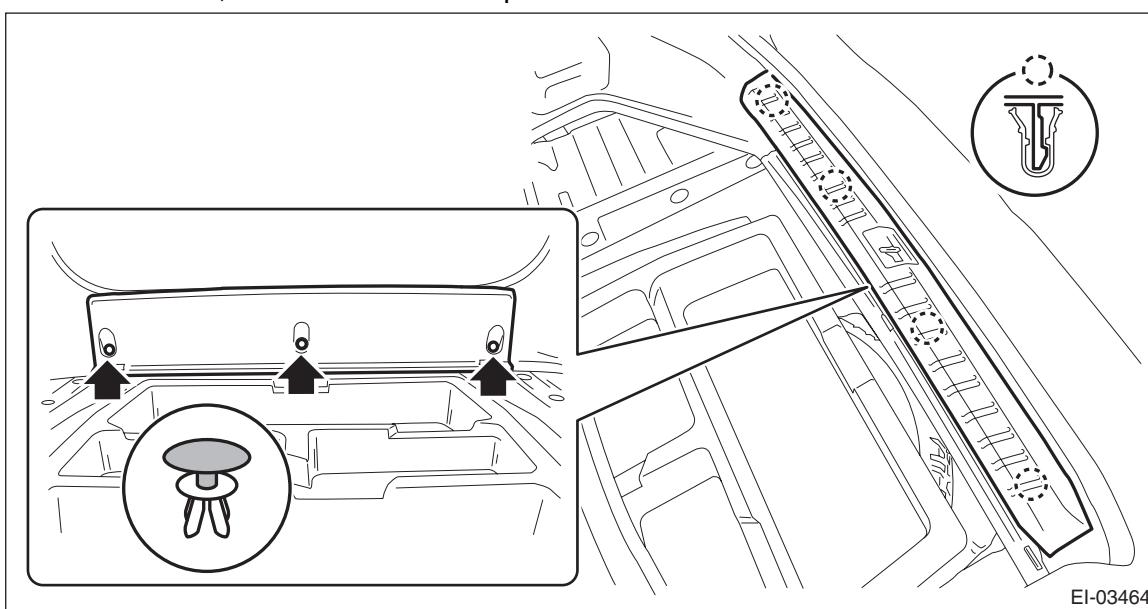

Trunk Room Trim

EXTERIOR/INTERIOR TRIM

- 4) Remove the clips, and remove the trim panel - trunk side.

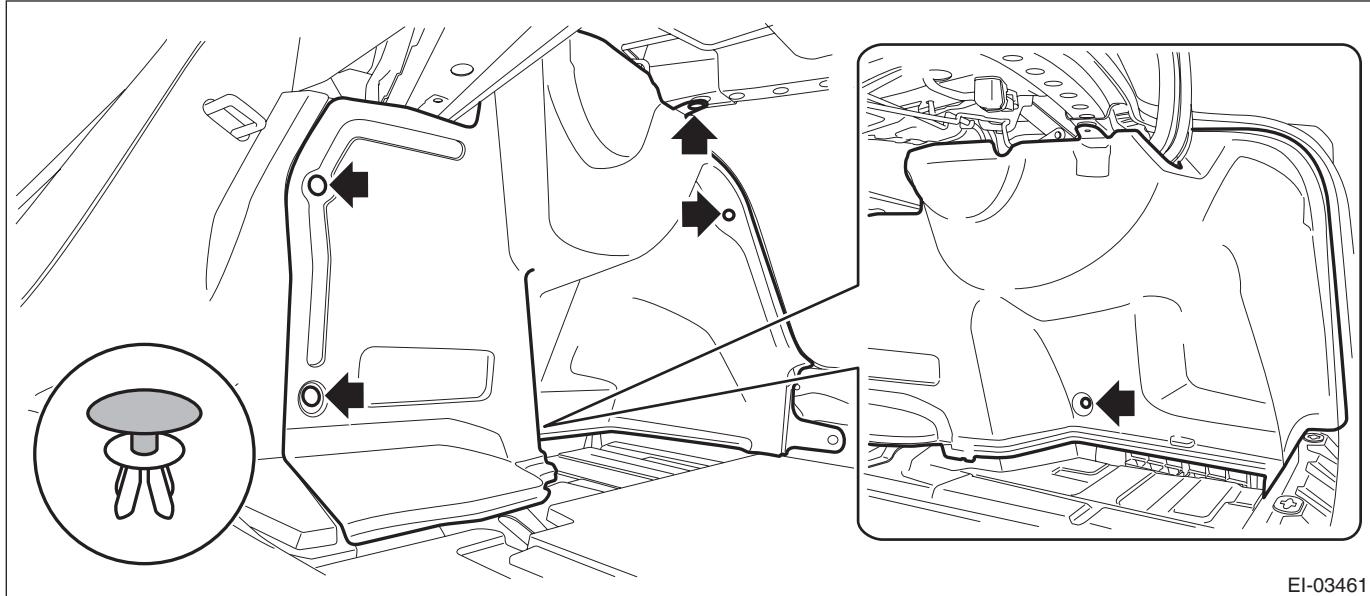

EI-03461

B: INSTALLATION

Install each part in the reverse order of removal.