


26.Sun Visor

A: REMOVAL

- 1) Remove the sun visor assembly.
 - (1) Remove the cap - sun visor, and then remove the screws.
 - (2) Disconnect the connector and remove the sun visor assembly.
- 2) Remove the hook - sun visor.
 - (1) Press both sides using a flat tip screwdriver.
 - (2) Remove the hook - sun visor by pulling it toward you.

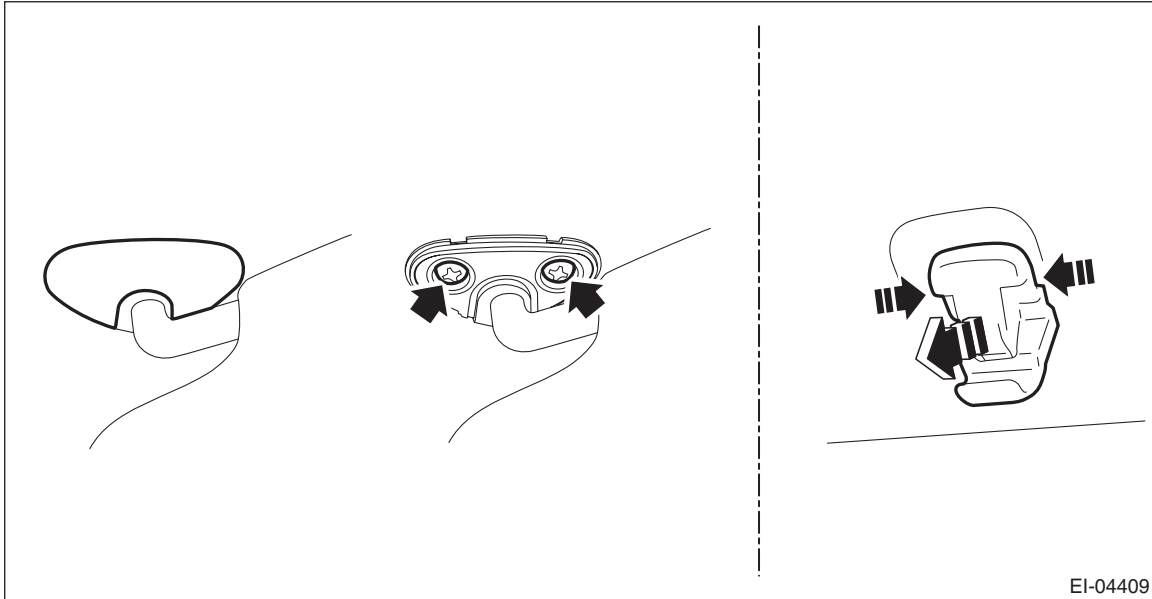

B: INSTALLATION

Install each part in the reverse order of removal.