


## 45.Reverse Brake Assembly

### A: REMOVAL

- 1) Remove the transmission assembly from the vehicle. <Ref. to CVT(TH58A)-63, REMOVAL, Automatic Transmission Assembly.>
- 2) Remove the air breather hose. <Ref. to CVT(TH58A)-171, REMOVAL, Air Breather Hose.>
- 3) Remove the transmission harness. <Ref. to CVT(TH58A)-143, REMOVAL, Transmission Harness.>
- 4) Remove the main control valve body. <Ref. to CVT(TH58A)-115, REMOVAL, Control Valve Body.>
- 5) Remove the turbine speed sensor. <Ref. to CVT(TH58A)-104, REMOVAL, Turbine Speed Sensor.>
- 6) Remove the secondary speed sensor. <Ref. to CVT(TH58A)-106, REMOVAL, Secondary Speed Sensor.>
- 7) Remove the front wheel speed sensor. <Ref. to CVT(TH58A)-108, REMOVAL, Front Wheel Speed Sensor.>
- 8) Remove the inhibitor switch. <Ref. to CVT(TH58A)-101, REMOVAL, Inhibitor Switch.>
- 9) Remove the extension case. <Ref. to CVT(TH58A)-182, REMOVAL, Extension Case.>
- 10) Remove the transfer clutch assembly. <Ref. to CVT(TH58A)-186, REMOVAL, Transfer Clutch.>
- 11) Remove the transfer driven gear assembly. <Ref. to CVT(TH58A)-200, REMOVAL, Transfer Driven Gear.>
- 12) Remove the transfer drive gear assembly. <Ref. to CVT(TH58A)-203, REMOVAL, Transfer Drive Gear.>
- 13) Remove the parking pawl. <Ref. to CVT(TH58A)-208, REMOVAL, Parking Pawl.>
- 14) Remove the oil pan and oil strainer. <Ref. to CVT(TH58A)-112, REMOVAL, Oil Pan and Strainer.>
- 15) Remove the transmission control device. <Ref. to CVT(TH58A)-210, REMOVAL, Transmission Control Device.>
- 16) Remove the drive motor assembly. <Ref. to CVT(TH58A)-217, REMOVAL, Drive Motor Assembly.>
- 17) Remove the output clutch assembly. <Ref. to CVT(TH58A)-228, REMOVAL, Output Clutch Assembly.>
- 18) Remove the transmission case. <Ref. to CVT(TH58A)-245, REMOVAL, Transmission Case.>
- 19) Remove the reduction drive gear. <Ref. to CVT(TH58A)-258, REMOVAL, Reduction Drive Gear.>
- 20) Remove the primary pulley, secondary pulley and variator chain. <Ref. to CVT(TH58A)-263, REMOVAL, Primary Pulley and Secondary Pulley.>
- 21) Remove the oil pump shaft and the snap ring.

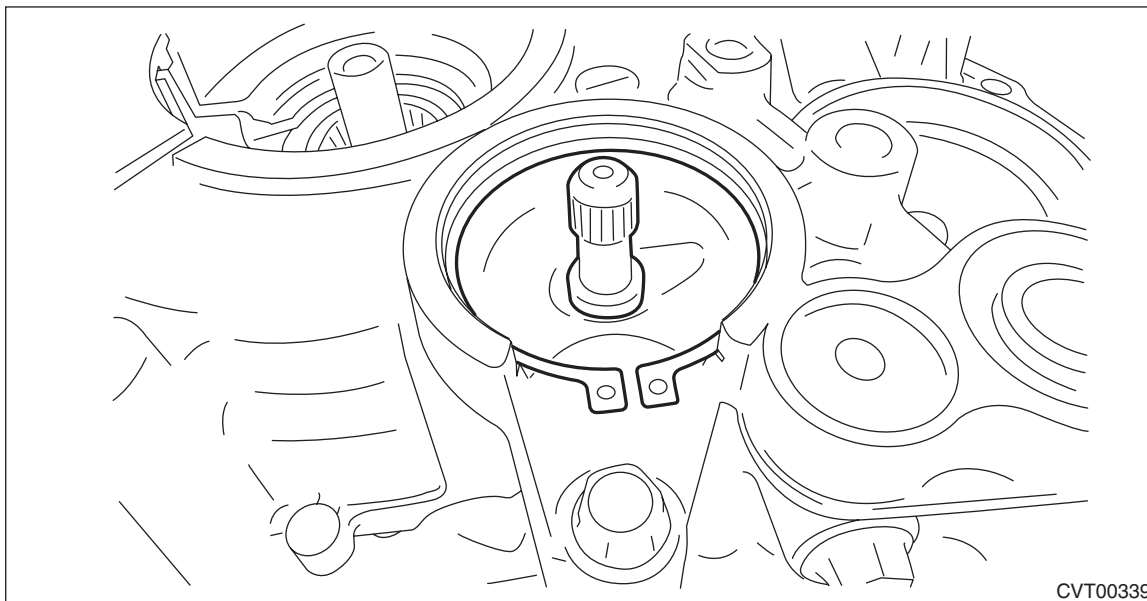


CVT00339

## Reverse Brake Assembly


### CONTINUOUSLY VARIABLE TRANSMISSION

---

22) Remove the manual valve assembly.

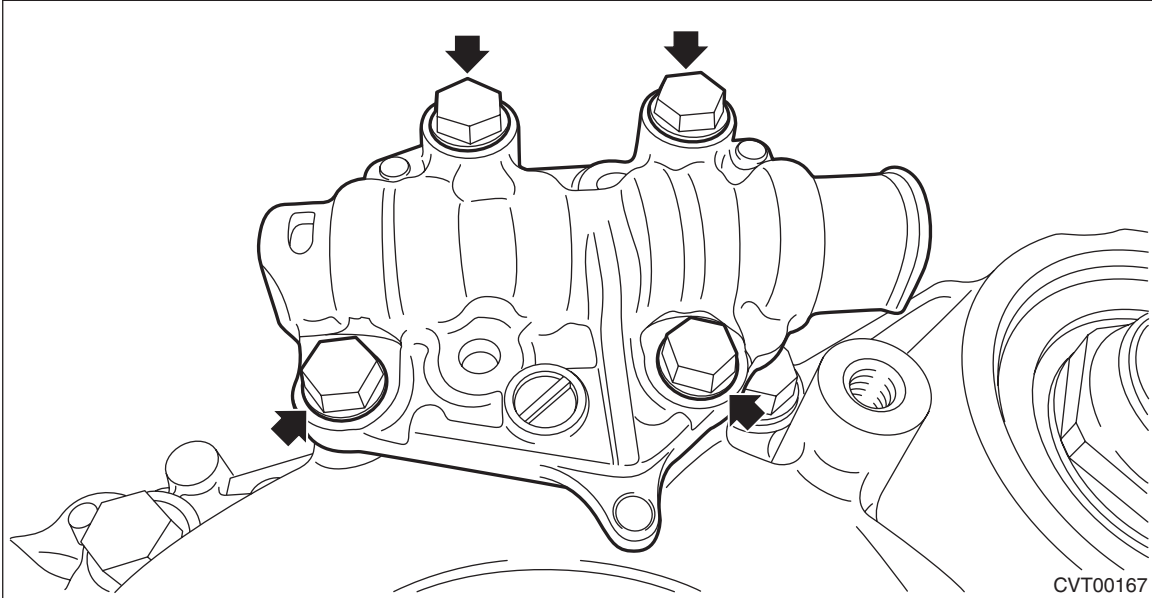

23) Remove the oil guide and lubrication pipe.

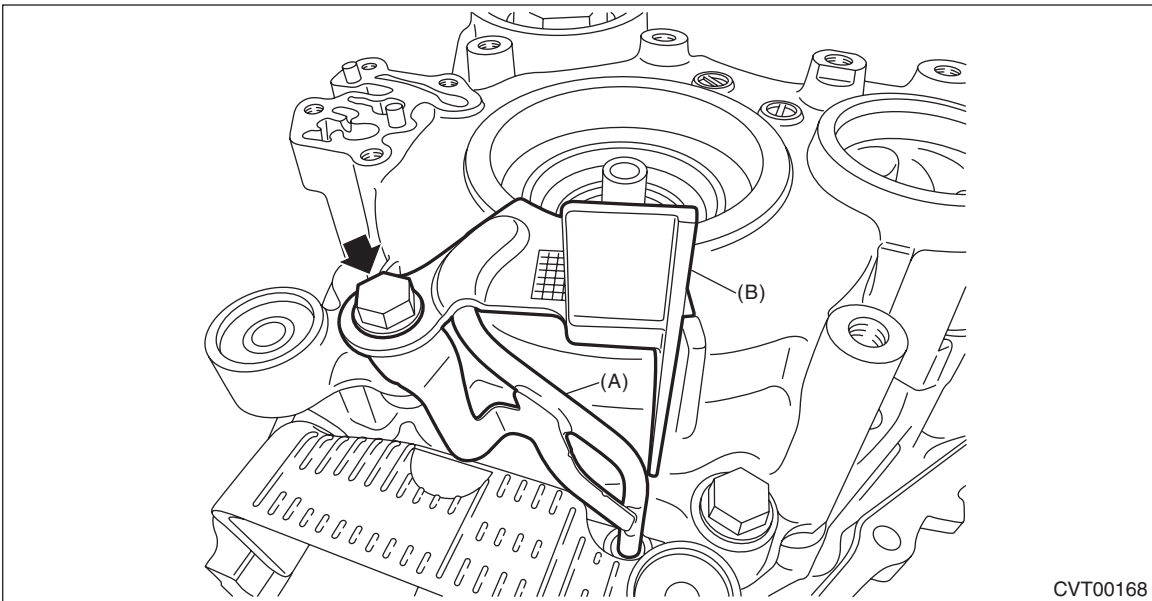


- (A) Lubrication pipe
- (B) Oil guide


## Reverse Brake Assembly

CONTINUOUSLY VARIABLE TRANSMISSION

24) Remove the O-ring from lubrication pipe.

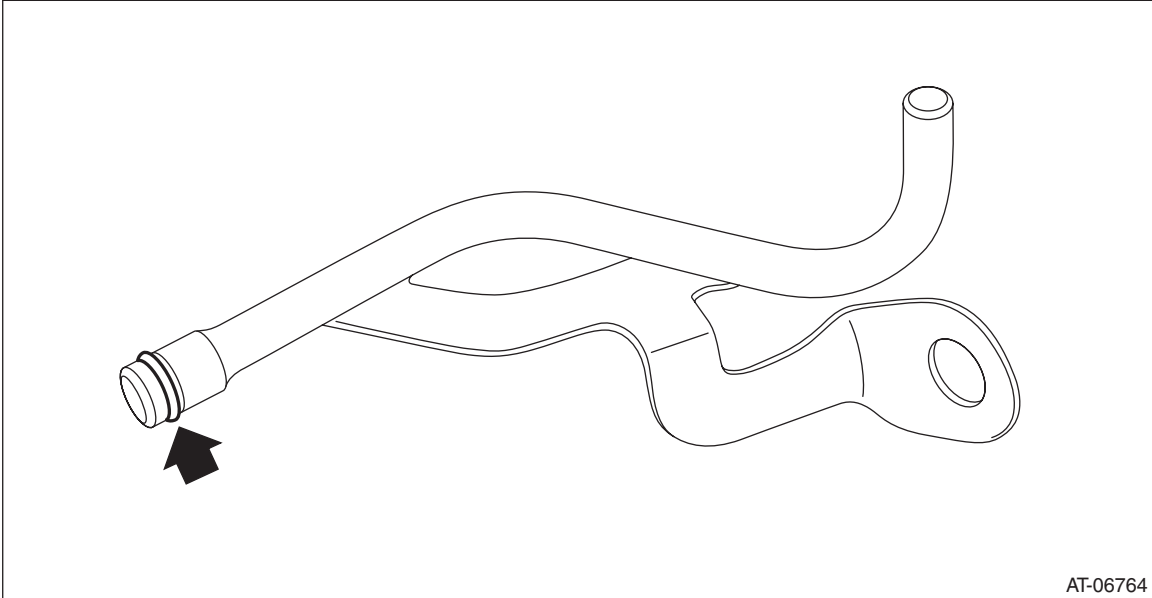


25) Remove the reverse brake assembly.

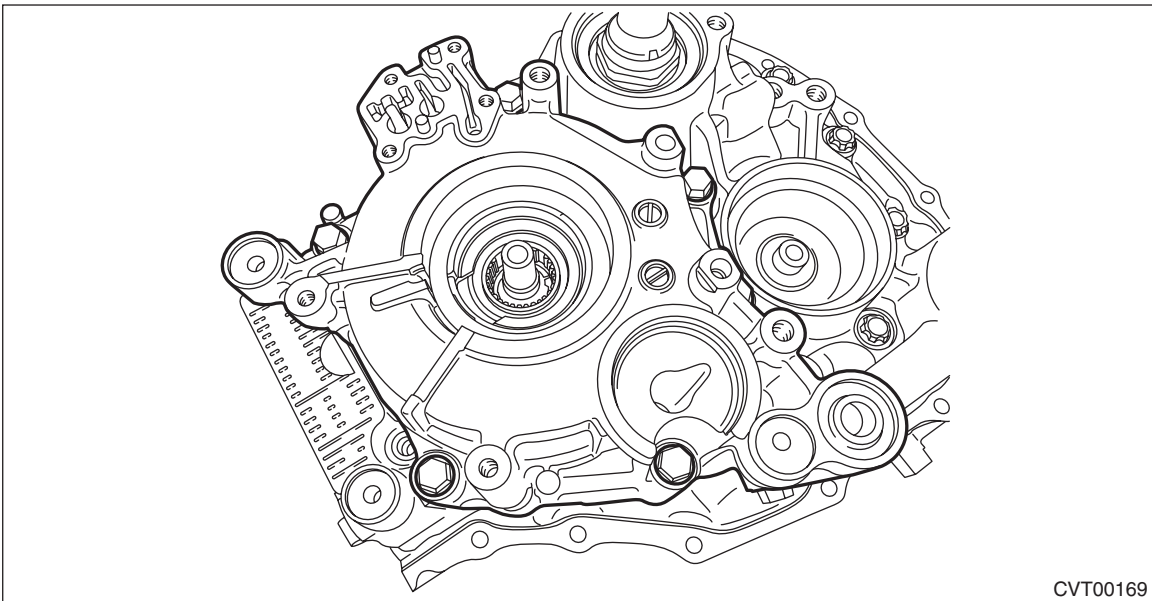

# Reverse Brake Assembly


## CONTINUOUSLY VARIABLE TRANSMISSION

26) Remove the O-ring.

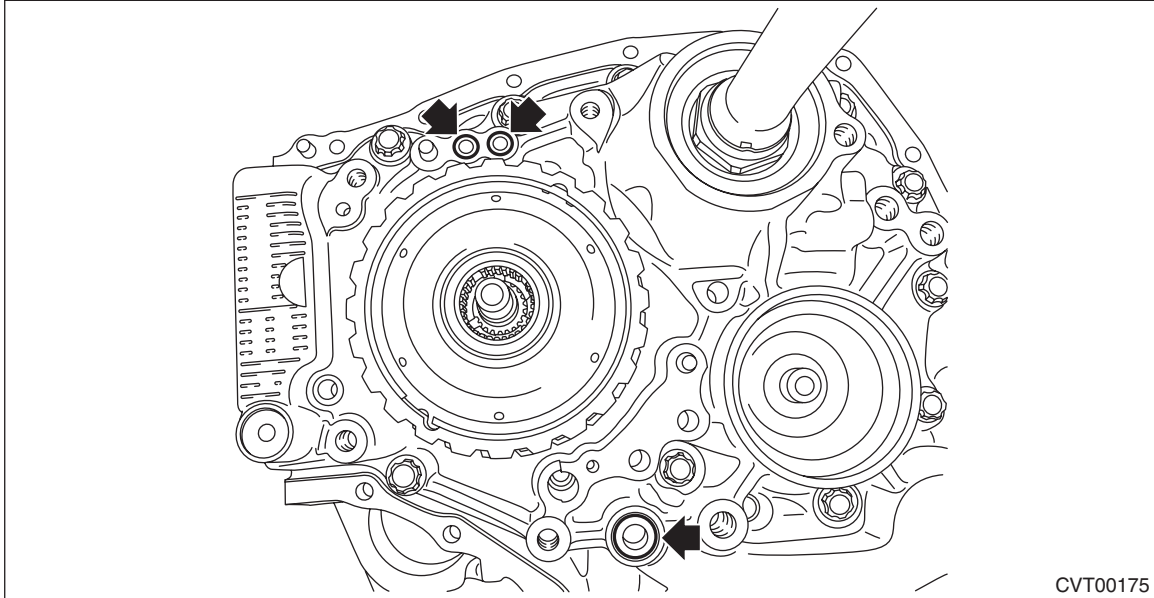

### B: INSTALLATION

- 1) Select a washer. <Ref. to CVT(TH58A)-321, ADJUSTMENT, Forward Clutch Assembly.>
- 2) When replacing the reverse brake housing and the snap ring which secures the oil pump sprocket rear, select the oil pump shaft. <Ref. to CVT(TH58A)-387, ADJUSTMENT, Oil Pump.>
- 3) Install the selected washer to the reverse brake housing.

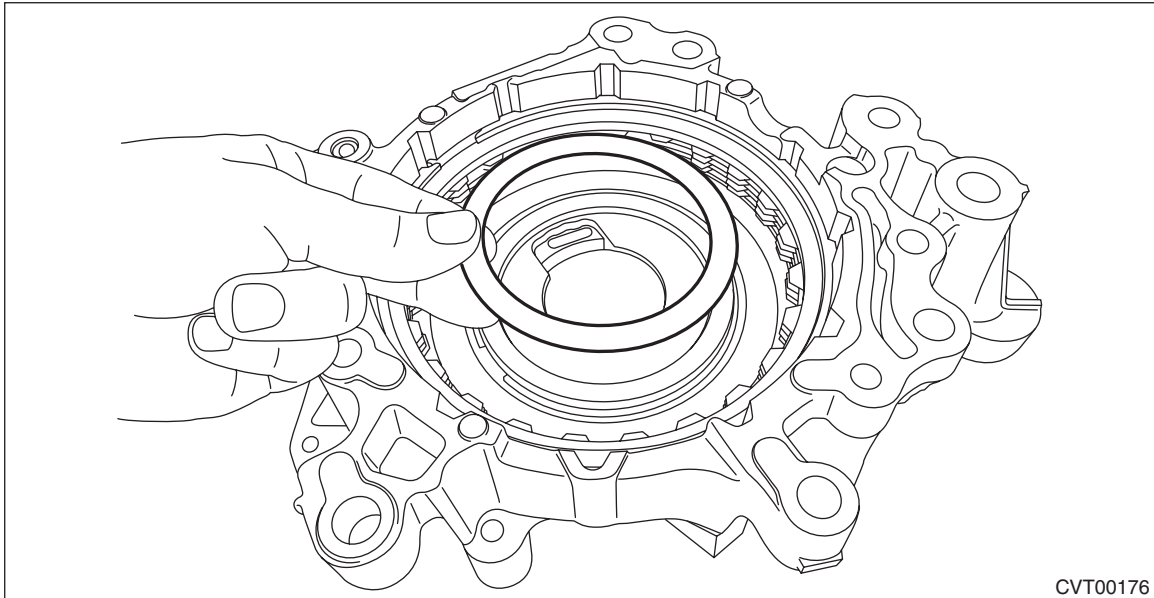


## Reverse Brake Assembly

CONTINUOUSLY VARIABLE TRANSMISSION


4) Install the thrust bearing to the reverse brake housing.

NOTE:

Face the temper color surface to the reverse brake side.

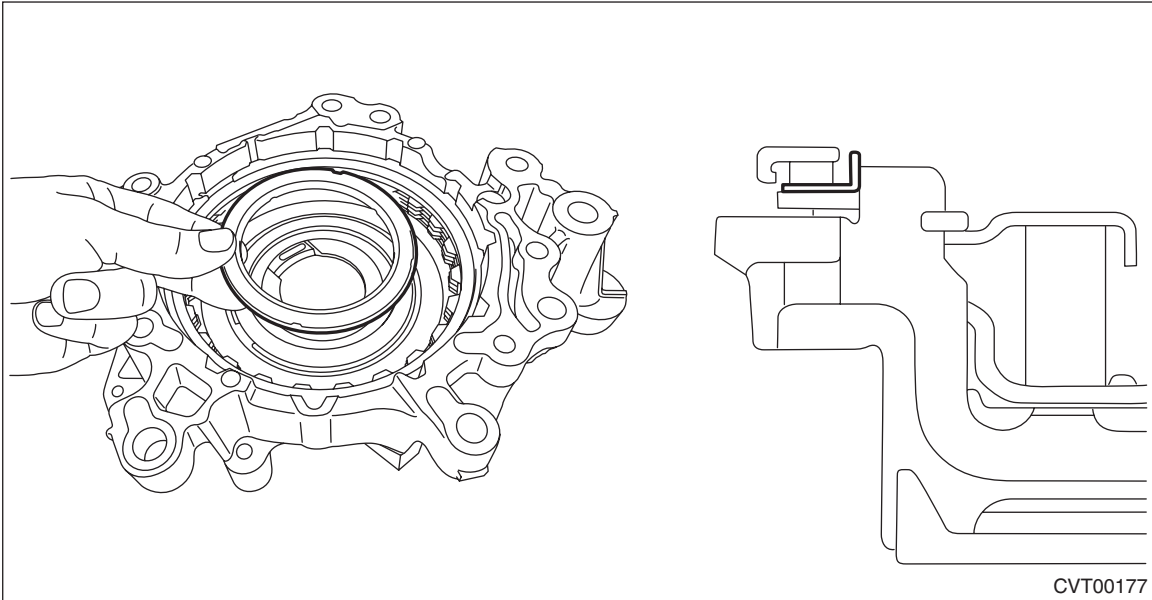

5) Remove the internal gear from the forward clutch assembly, and install it to the reverse brake housing.

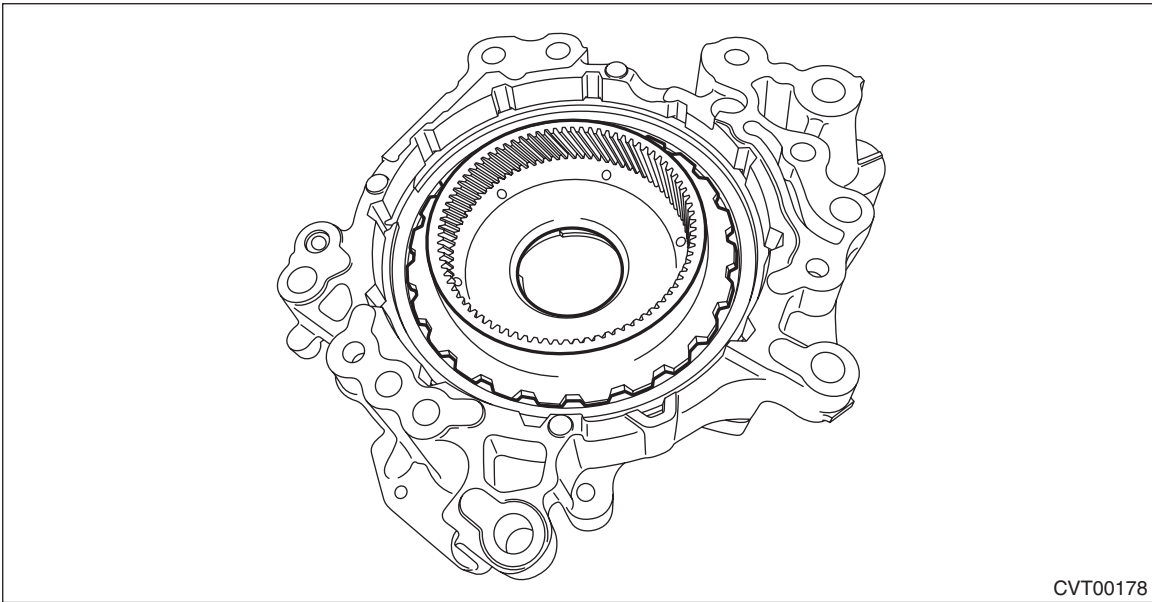

## Reverse Brake Assembly


### CONTINUOUSLY VARIABLE TRANSMISSION

---

6) Install the O-ring.

NOTE:

- Install a new O-ring.
- Apply CVTF to the O-ring.

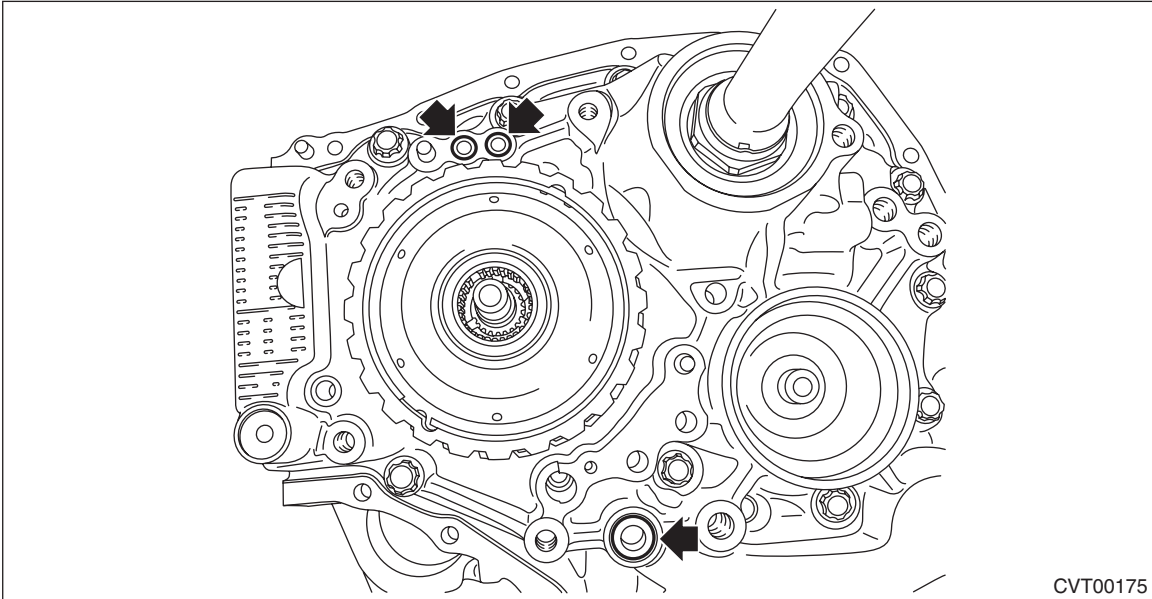


7) Install the reverse brake assembly and internal gear as a unit to the drive pinion retainer.

NOTE:

Slowly rotate the input shaft by hand to engage the internal gear and pinion gear of planetary carrier.

**Tightening torque:**

**37 N·m (3.8 kgf-m, 27.3 ft-lb)**

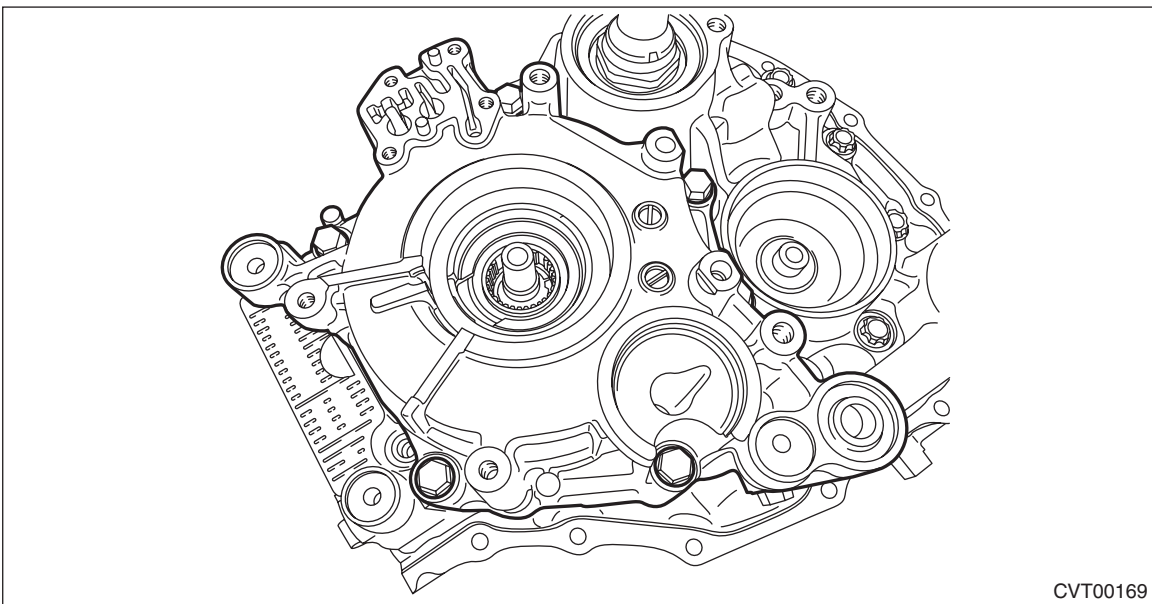


# Reverse Brake Assembly

CONTINUOUSLY VARIABLE TRANSMISSION

8) Install the O-ring to the lubrication pipe.

NOTE:


- Install a new O-ring.
- Apply CVTF to the O-ring.

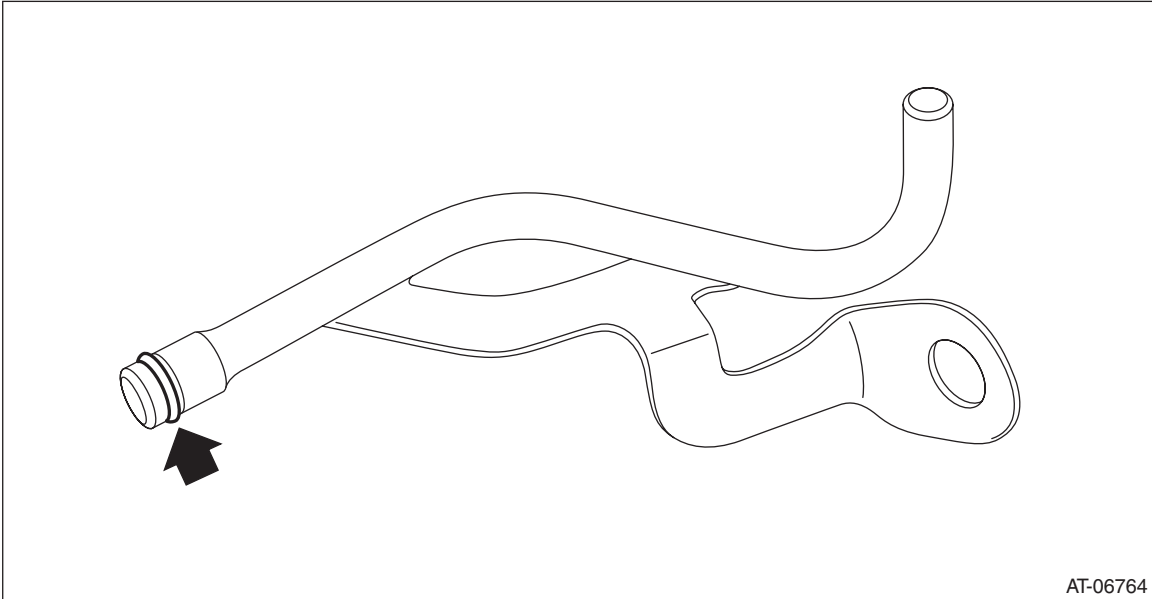

9) Install the lubrication pipe and oil guide.

**Tightening torque:**

**16 N·m (1.6 kgf-m, 11.8 ft-lb)**

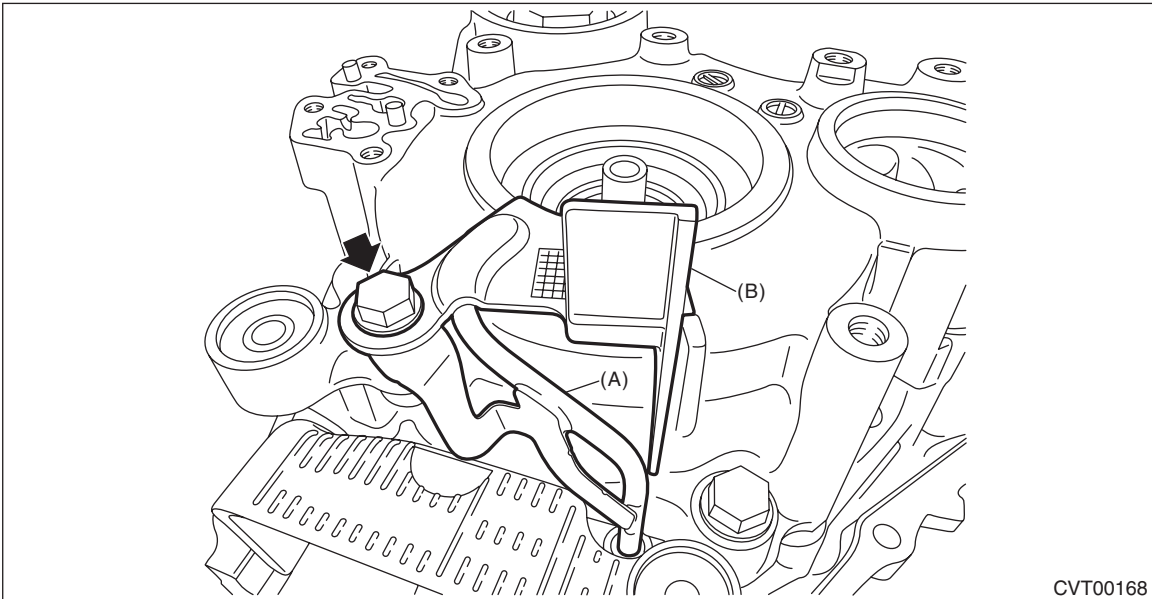

(A) Lubrication pipe

(B) Oil guide



## Reverse Brake Assembly


### CONTINUOUSLY VARIABLE TRANSMISSION

---

10) Install the manual valve assembly and separator plate.

**Tightening torque:**

**9 N·m (0.9 kgf-m, 6.6 ft-lb)**

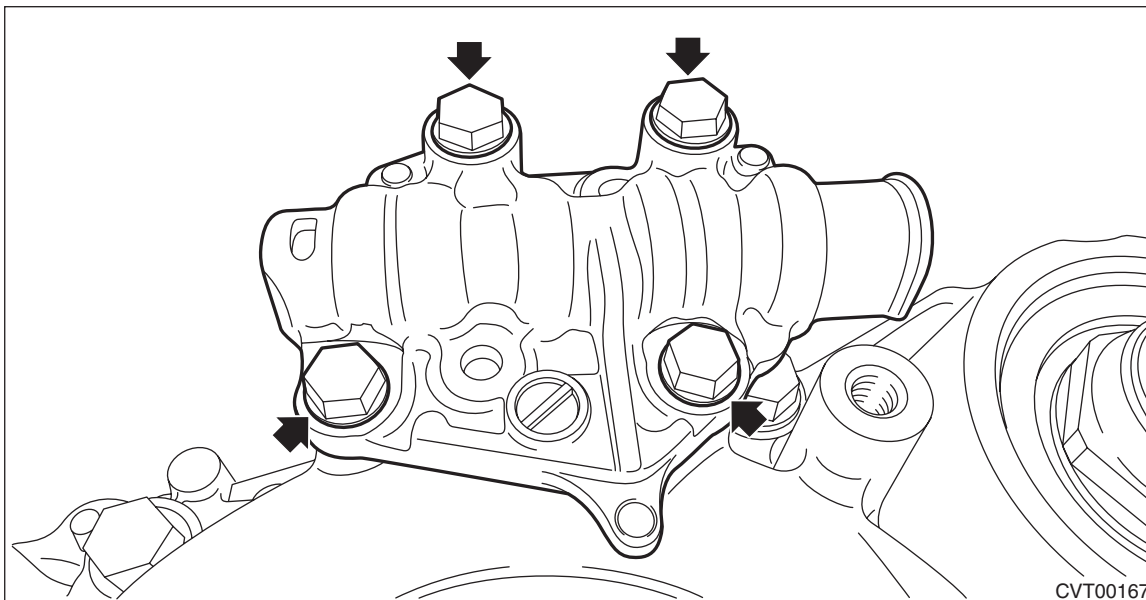

11) Install the primary pulley, secondary pulley and variator chain. <Ref. to CVT(TH58A)-271, INSTALLATION, Primary Pulley and Secondary Pulley.>

12) Install the reduction drive gear. <Ref. to CVT(TH58A)-259, INSTALLATION, Reduction Drive Gear.>

13) Install the transmission case. <Ref. to CVT(TH58A)-248, INSTALLATION, Transmission Case.>

14) Install the output clutch assembly. <Ref. to CVT(TH58A)-229, INSTALLATION, Output Clutch Assembly.>

15) Install the drive motor assembly. <Ref. to CVT(TH58A)-221, INSTALLATION, Drive Motor Assembly.>

16) Install the transmission control device. <Ref. to CVT(TH58A)-213, INSTALLATION, Transmission Control Device.>

17) Install the oil strainer and oil pan. <Ref. to CVT(TH58A)-114, INSTALLATION, Oil Pan and Strainer.>

18) Install the parking pawl. <Ref. to CVT(TH58A)-208, INSTALLATION, Parking Pawl.>

19) Install the transfer drive gear assembly. <Ref. to CVT(TH58A)-204, INSTALLATION, Transfer Drive Gear.>

20) Install the transfer driven gear assembly. <Ref. to CVT(TH58A)-201, INSTALLATION, Transfer Driven Gear.>

21) Install the transfer clutch assembly. <Ref. to CVT(TH58A)-188, INSTALLATION, Transfer Clutch.>

22) Install the extension case. <Ref. to CVT(TH58A)-183, INSTALLATION, Extension Case.>

23) Install the inhibitor switch. <Ref. to CVT(TH58A)-102, INSTALLATION, Inhibitor Switch.>

24) Install the secondary speed sensor. <Ref. to CVT(TH58A)-106, INSTALLATION, Secondary Speed Sensor.>

25) Install the front wheel speed sensor. <Ref. to CVT(TH58A)-108, INSTALLATION, Front Wheel Speed Sensor.>

26) Install the turbine speed sensor. <Ref. to CVT(TH58A)-104, INSTALLATION, Turbine Speed Sensor.>

27) Install the main control valve body. <Ref. to CVT(TH58A)-123, INSTALLATION, Control Valve Body.>

28) Install the transmission harness. <Ref. to CVT(TH58A)-151, INSTALLATION, Transmission Harness.>

29) Install the air breather hose. <Ref. to CVT(TH58A)-173, INSTALLATION, Air Breather Hose.>

30) Install the transmission assembly to the vehicle. <Ref. to CVT(TH58A)-77, INSTALLATION, Automatic Transmission Assembly.>




# Reverse Brake Assembly

CONTINUOUSLY VARIABLE TRANSMISSION


## C: DISASSEMBLY

1) Remove the snap ring, retaining plate, drive plate, driven plate and dish plate.

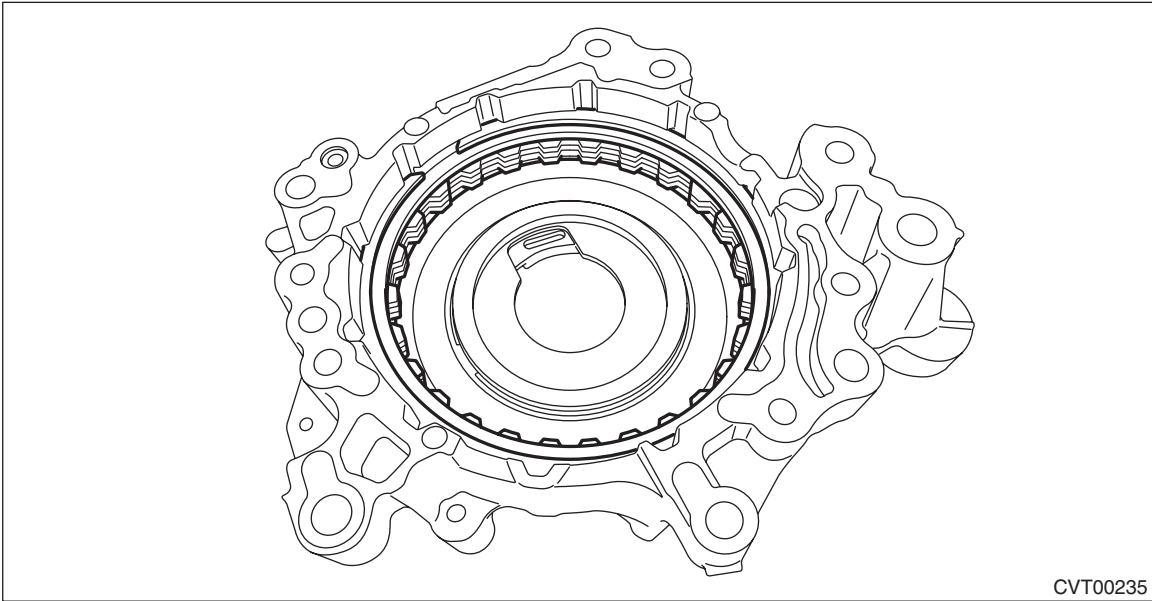

CVT00235

2) Compress the return spring using the ST to remove the snap ring.  
ST 18762AA001 COMPRESSOR SPECIAL TOOL

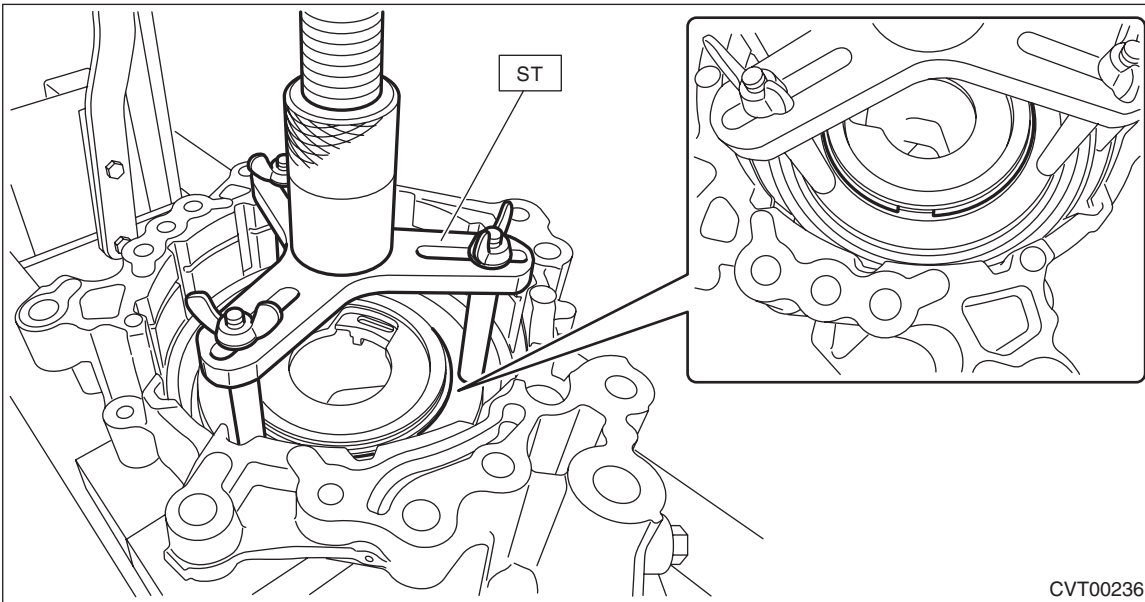


CVT00236

## Reverse Brake Assembly


### CONTINUOUSLY VARIABLE TRANSMISSION

---

3) Using the ST, remove the snap ring and spring retainer.

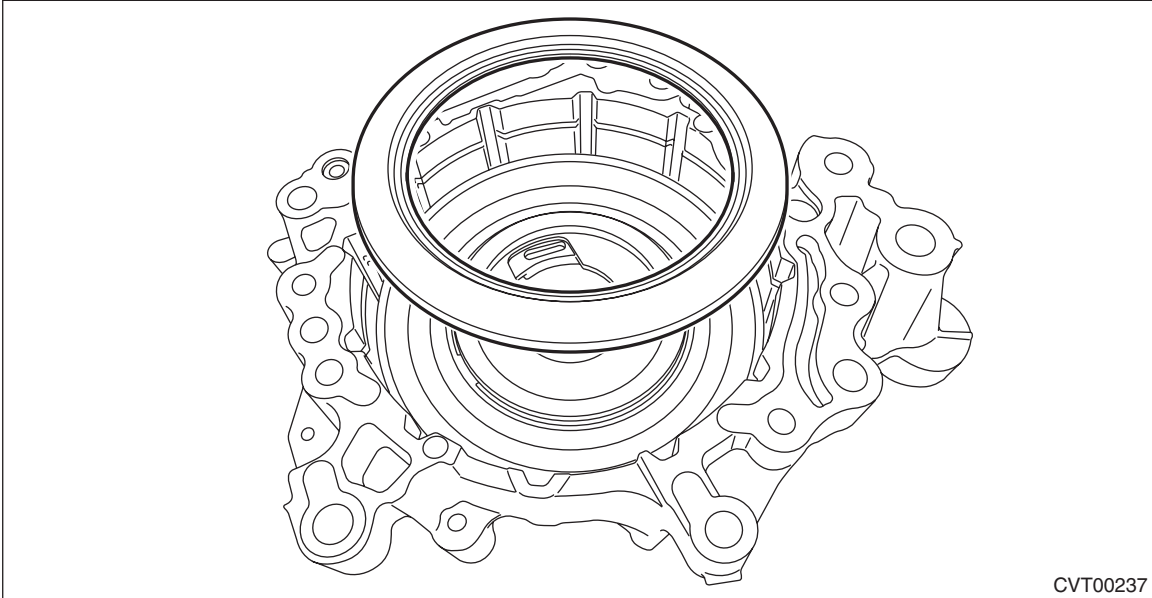


4) Remove the return spring.

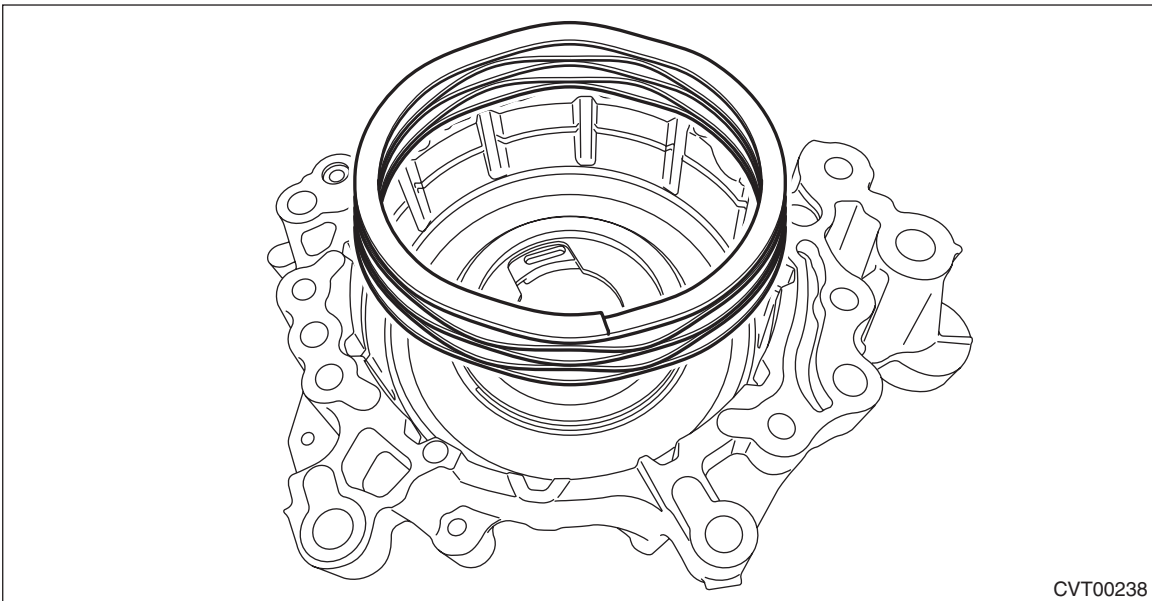

## Reverse Brake Assembly

CONTINUOUSLY VARIABLE TRANSMISSION

5) Remove the reverse brake piston by blowing compressed air intermittently from the reverse brake housing hole.

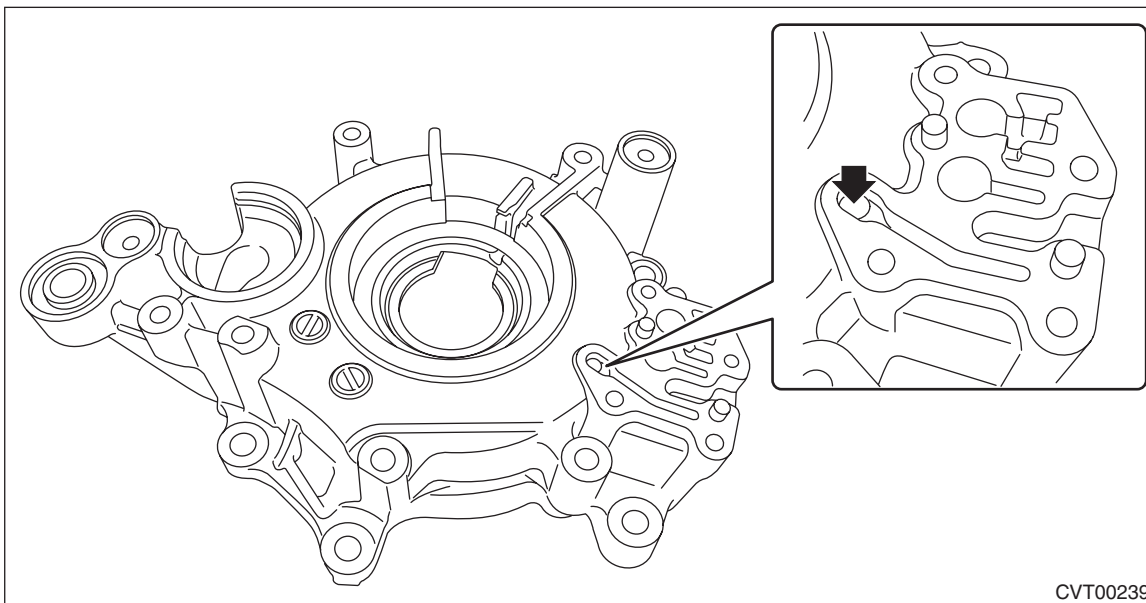

CVT00239

6) Remove the plug.

# Reverse Brake Assembly

CONTINUOUSLY VARIABLE TRANSMISSION

## D: ASSEMBLY

1) Install the plugs.

NOTE:

Use new O-rings.


**Tightening torque:**

**16 N·m (1.6 kgf-m, 11.8 ft-lb)**


2) Install the reverse brake piston.

NOTE:

Apply CVTF to the sealing area of reverse brake piston.

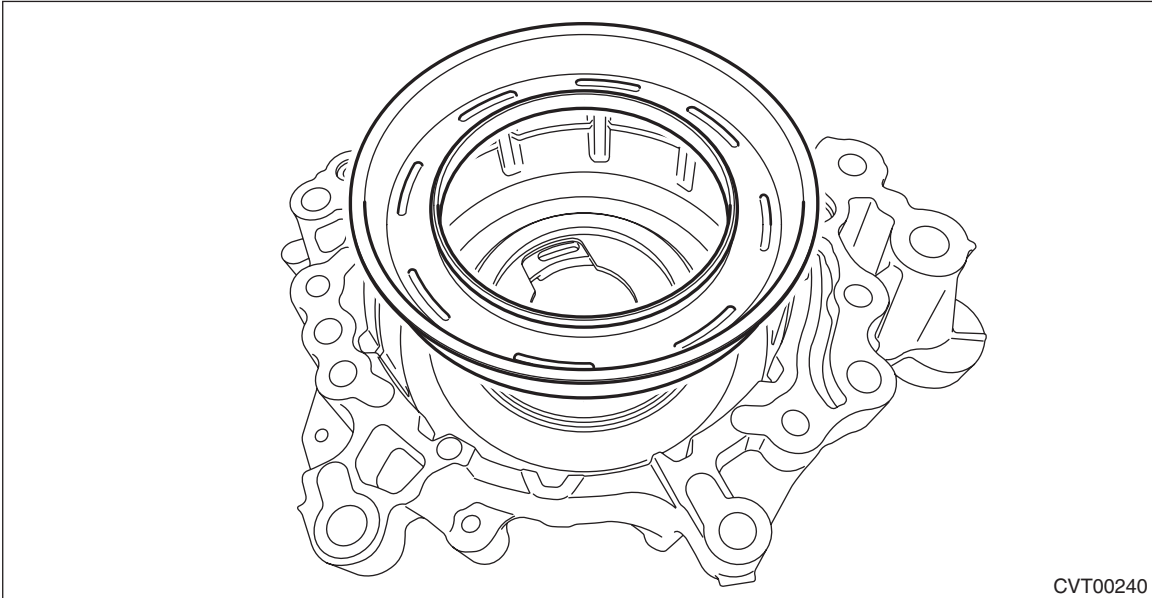


3) Install the return spring.

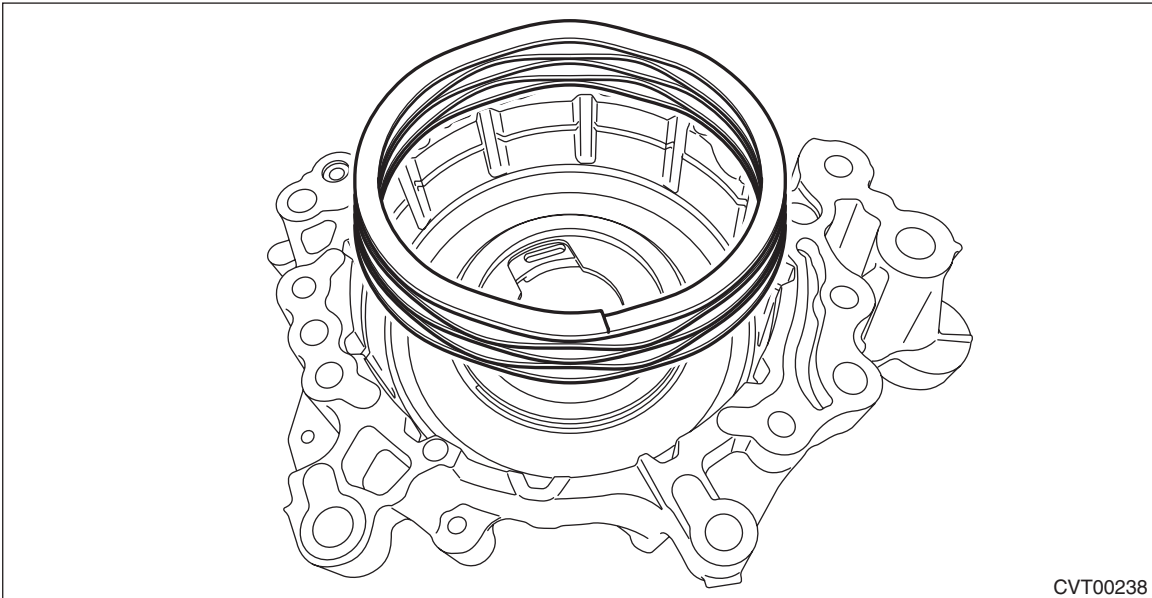


# Reverse Brake Assembly

CONTINUOUSLY VARIABLE TRANSMISSION

4) Install the spring retainer.

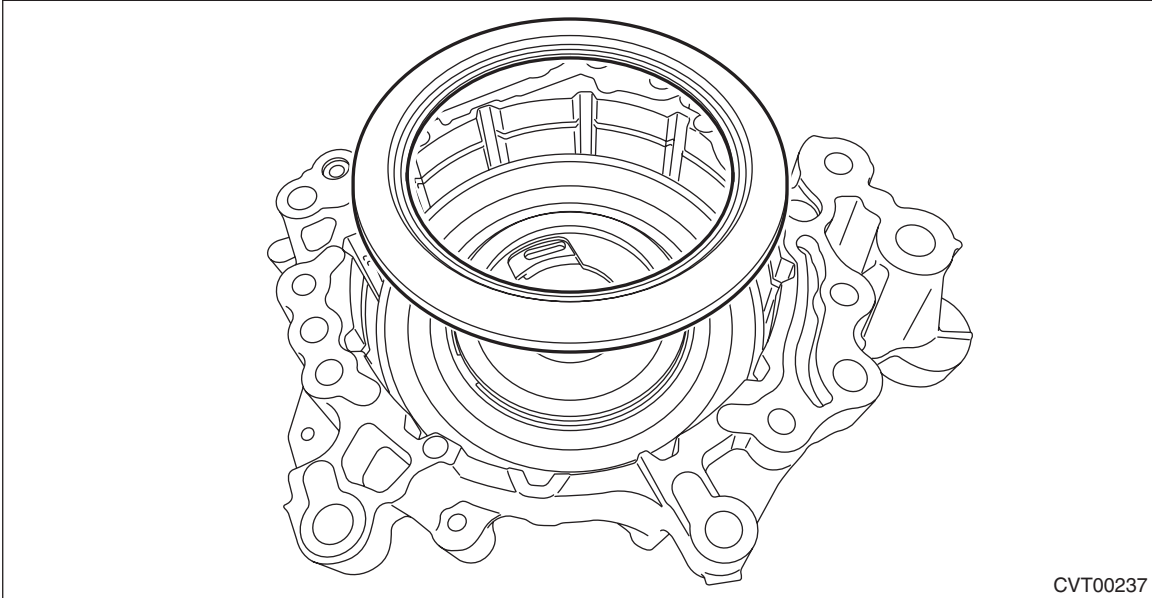


5) Compress the return spring using the ST to install the snap ring.  
ST 18762AA001 COMPRESSOR SPECIAL TOOL

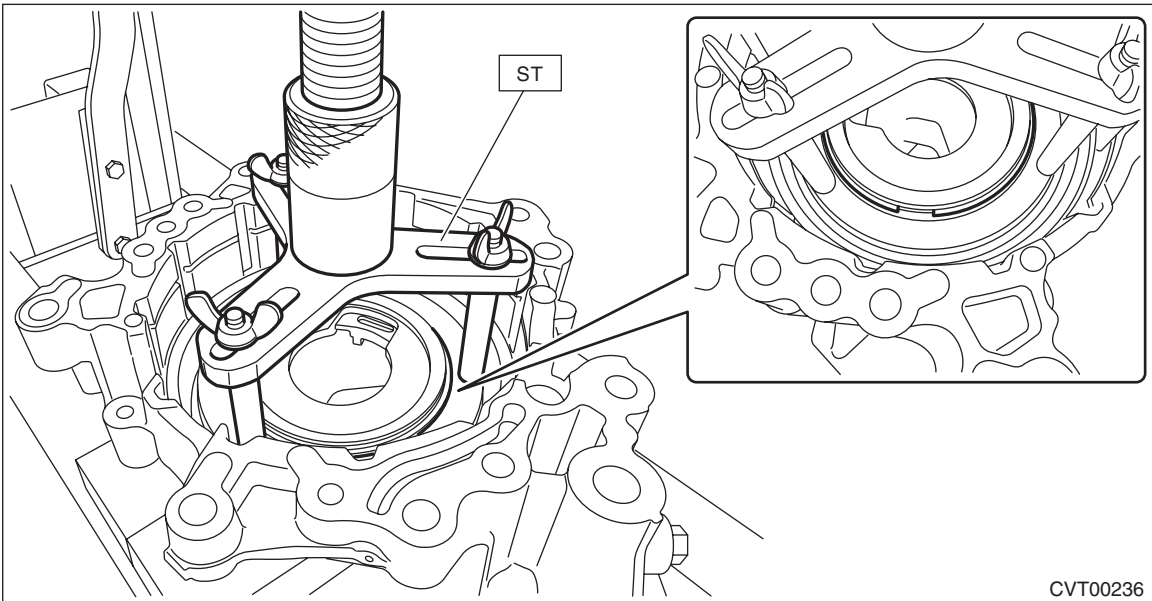

## Reverse Brake Assembly

### CONTINUOUSLY VARIABLE TRANSMISSION

6) Check the operation of reverse brake piston by blowing compressed air intermittently from the reverse brake housing hole.

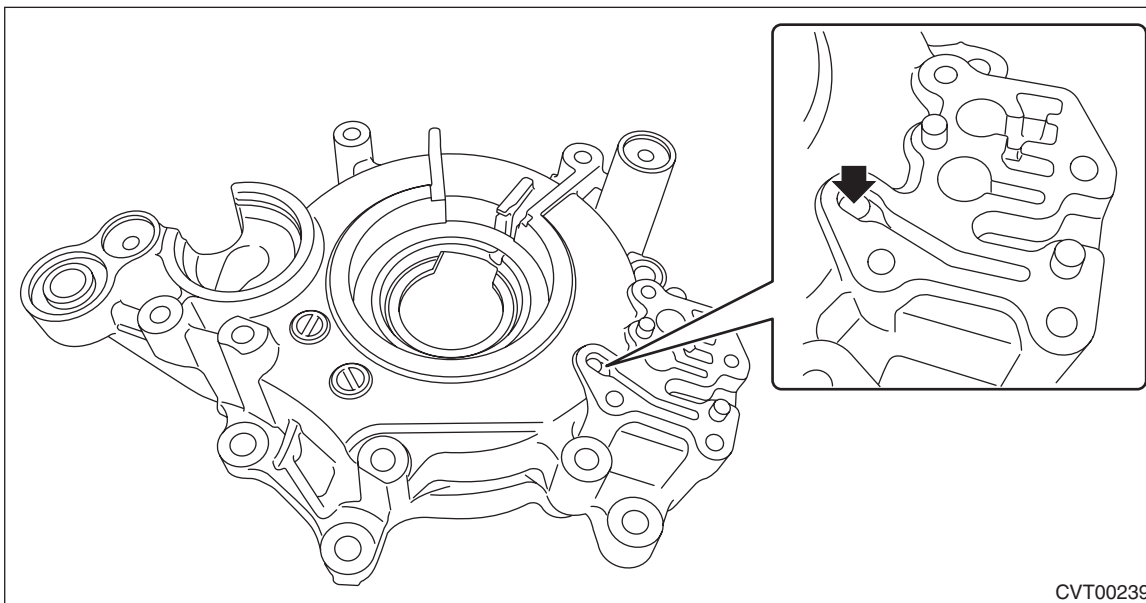

7) Place the driven plate, drive plate and retaining plate neatly in this order on surface table.

8) Set the dial gauge to retaining plate, and read its scale.

#### NOTE:


The value, which is read in the gauge at this time, is zero point.

9) Scale and record the weight “Z” of a flat board which will be put on retaining plate.

#### NOTE:

- Use a stiff board which does not bend against load as a flat board to be put on retaining plate.
- Use a flat board weighing less than 29 N (3.0 kgf, 6.5 lb).

10) Put the flat board on retaining plate.

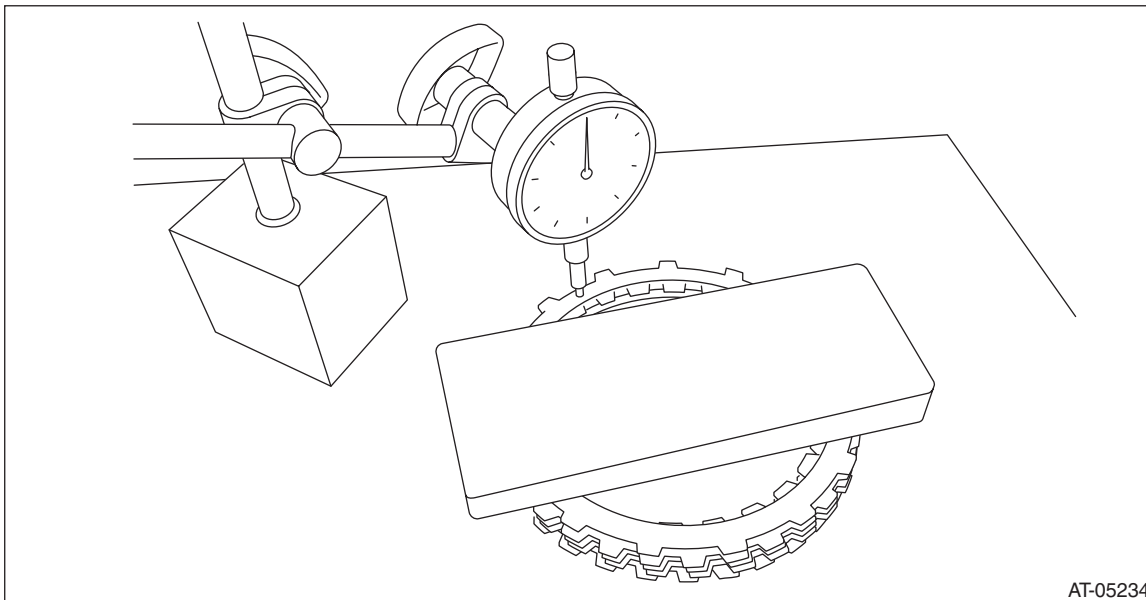

11) Using the following formula, read the push/pull gauge, and calculate “N”.

$$N = 29 \text{ N (3.0 kgf, 6.5 lb)} - Z$$

29 N (3.0 kgf, 6.5 lb) : Load applied to clutch plate

Z: Flat board weight


## Reverse Brake Assembly

CONTINUOUSLY VARIABLE TRANSMISSION

12) Press the center of retaining plate by applying a force of “N” using push/pull gauge, and then measure and record the compression amount “A”.

NOTE:

Measure at four points with a 90° interval and calculate the average.

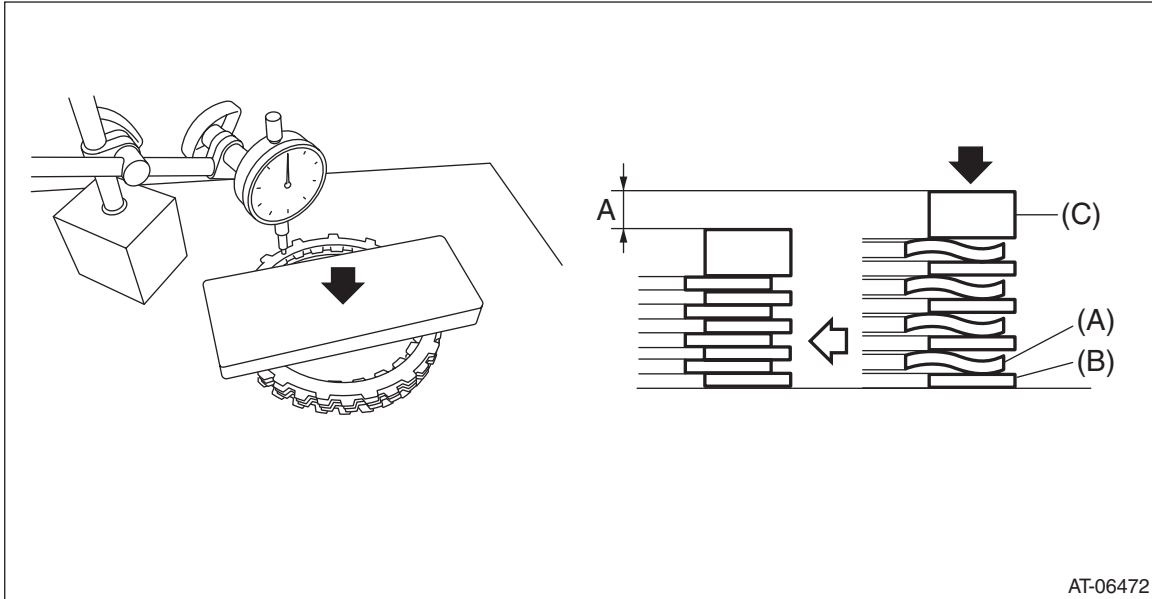


- (A) Drive plate
- (B) Driven plate
- (C) Retaining plate

13) Install the dish plate, drive plate, driven plate, retaining plate and snap ring to the reverse brake housing.

NOTE:

Install the dish plate in the correct direction.

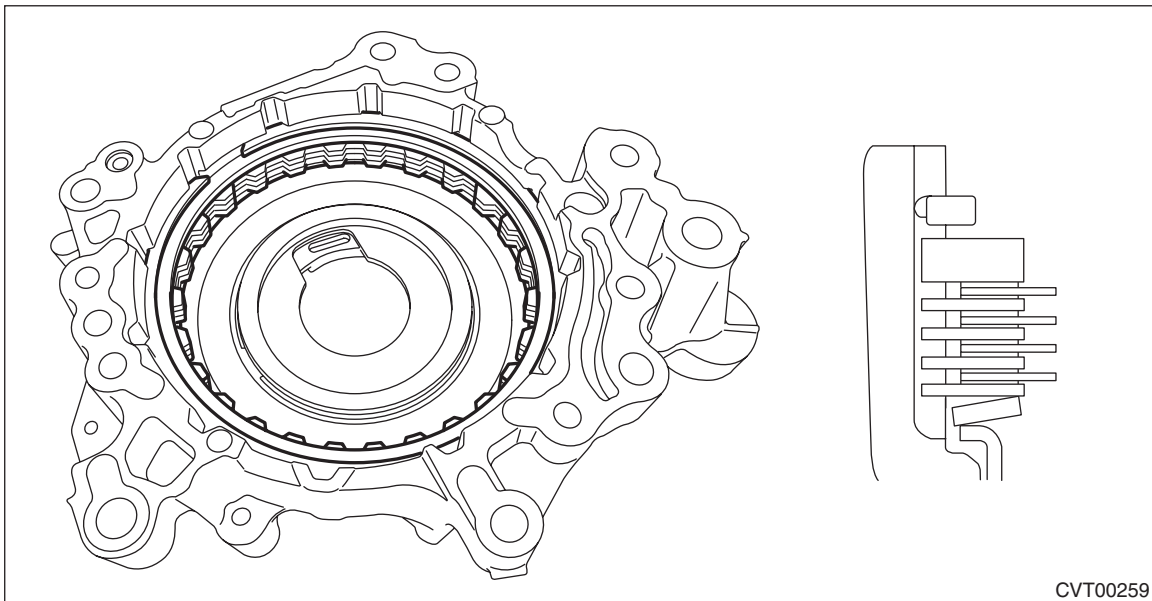




# Reverse Brake Assembly

## CONTINUOUSLY VARIABLE TRANSMISSION

14) Measure and record the clearance “B” between the retaining plate and snap ring.

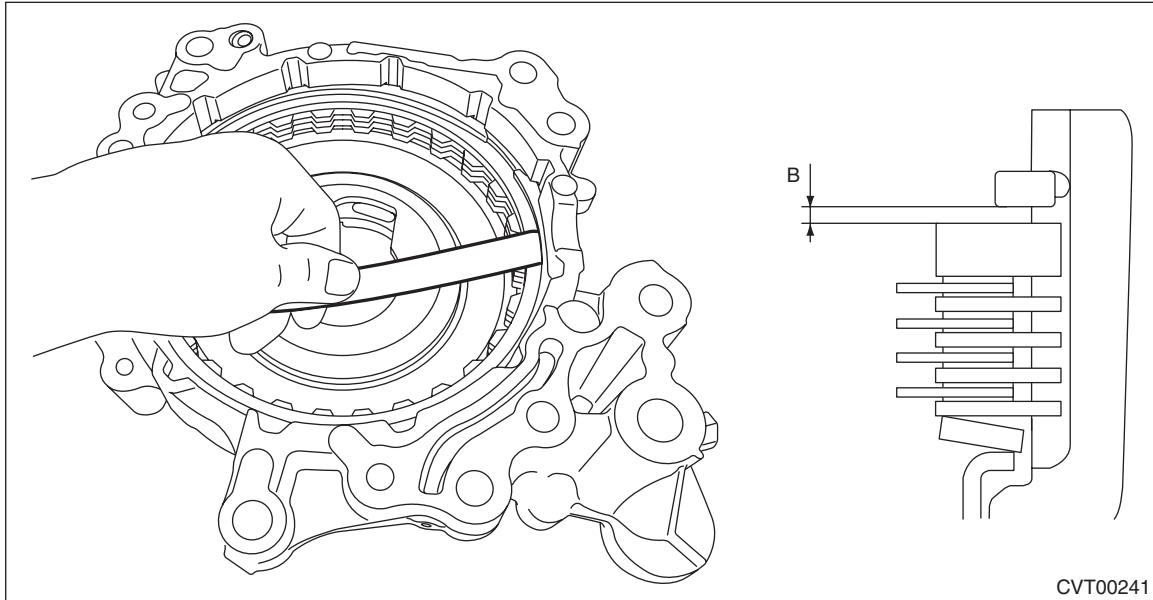

15) Piston stroke calculation

Calculate with A and B dimensions recorded before. If it exceeds the limit, replace with a new drive plate and adjust within the initial standard value.

$$S \text{ mm (in)} = A + B$$

S: Piston stroke

A: Compression amount of drive plate and dish plate

B: Clearance between retaining plate and snap ring

**Initial standard:**

**2.3 — 2.7 mm (0.091 — 0.106 in)**

**Limit thickness:**

**2.9 mm (0.114 in)**

Retaining plate	
Part No.	Thickness mm (in)
31567AB750	4.2 (0.165)
31567AB800	4.4 (0.173)
31567AB810	4.6 (0.181)
31567AB820	4.8 (0.189)

## E: INSPECTION

- Inspect the drive plate facing for wear and damage.
- Check the driven plate for discoloration (burnt color).
- Check for worn snap ring, fatigue or damaged return spring or deformed spring retainer.
- Make sure the clearance between retaining plate and snap ring of reverse brake is within the limit. If it exceeds the limit, replace with a new drive plate and select and adjust the retaining plate within the initial standard value. <Ref. to CVT(TH58A)-298, ASSEMBLY, Reverse Brake Assembly.>
- Check the oil pump shaft for damage.