
ELECTRICAL WIRING DIAGRAMS

SYSTEM INDEX

CELICA SUPRA

1986 Model (Page 1 to Page 5)


SYSTEMS	LOCATION	SYSTEMS	LOCATION
Air Conditioner, Cooler and Heater	 2-3	Radio and Tape Player	 5-2
Auto Antenna	 5-1	Rear Window Defogger	 2-8
Back-up Lights	 2-8	Rear Wiper and Washer	 3-7
Charging	 1-8	Remote Control Mirrors with Heater	 4-8
Cigarette Lighter	 5-1	Starting	 1-1
Clock	 5-1	Stop Lights	 3-4
Combination Meter	 2-6	Sun Roof	 3-2
Cruise Control	 3-3	Taillights and Illumination	 4-2
Door Locks	 5-3	TCCS	 1-4
ECT (Electronic Control Transmission)	 1-6	Theft Deterrent System	 5-5
Fog Lights	 2-1	Trip Computer	 4-7
Front Wiper and Washer	 3-6	Turn Signal and Hazard	 3-5
Headlights	 4-4	Unlock and Seat Belt Warning	 4-7
Headlight Cleaner	 3-8		
Horn	 3-6		
Interior Lights	 4-5		
Power Source	 1-1		
Power Windows	 3-1		




Power Source



Starting

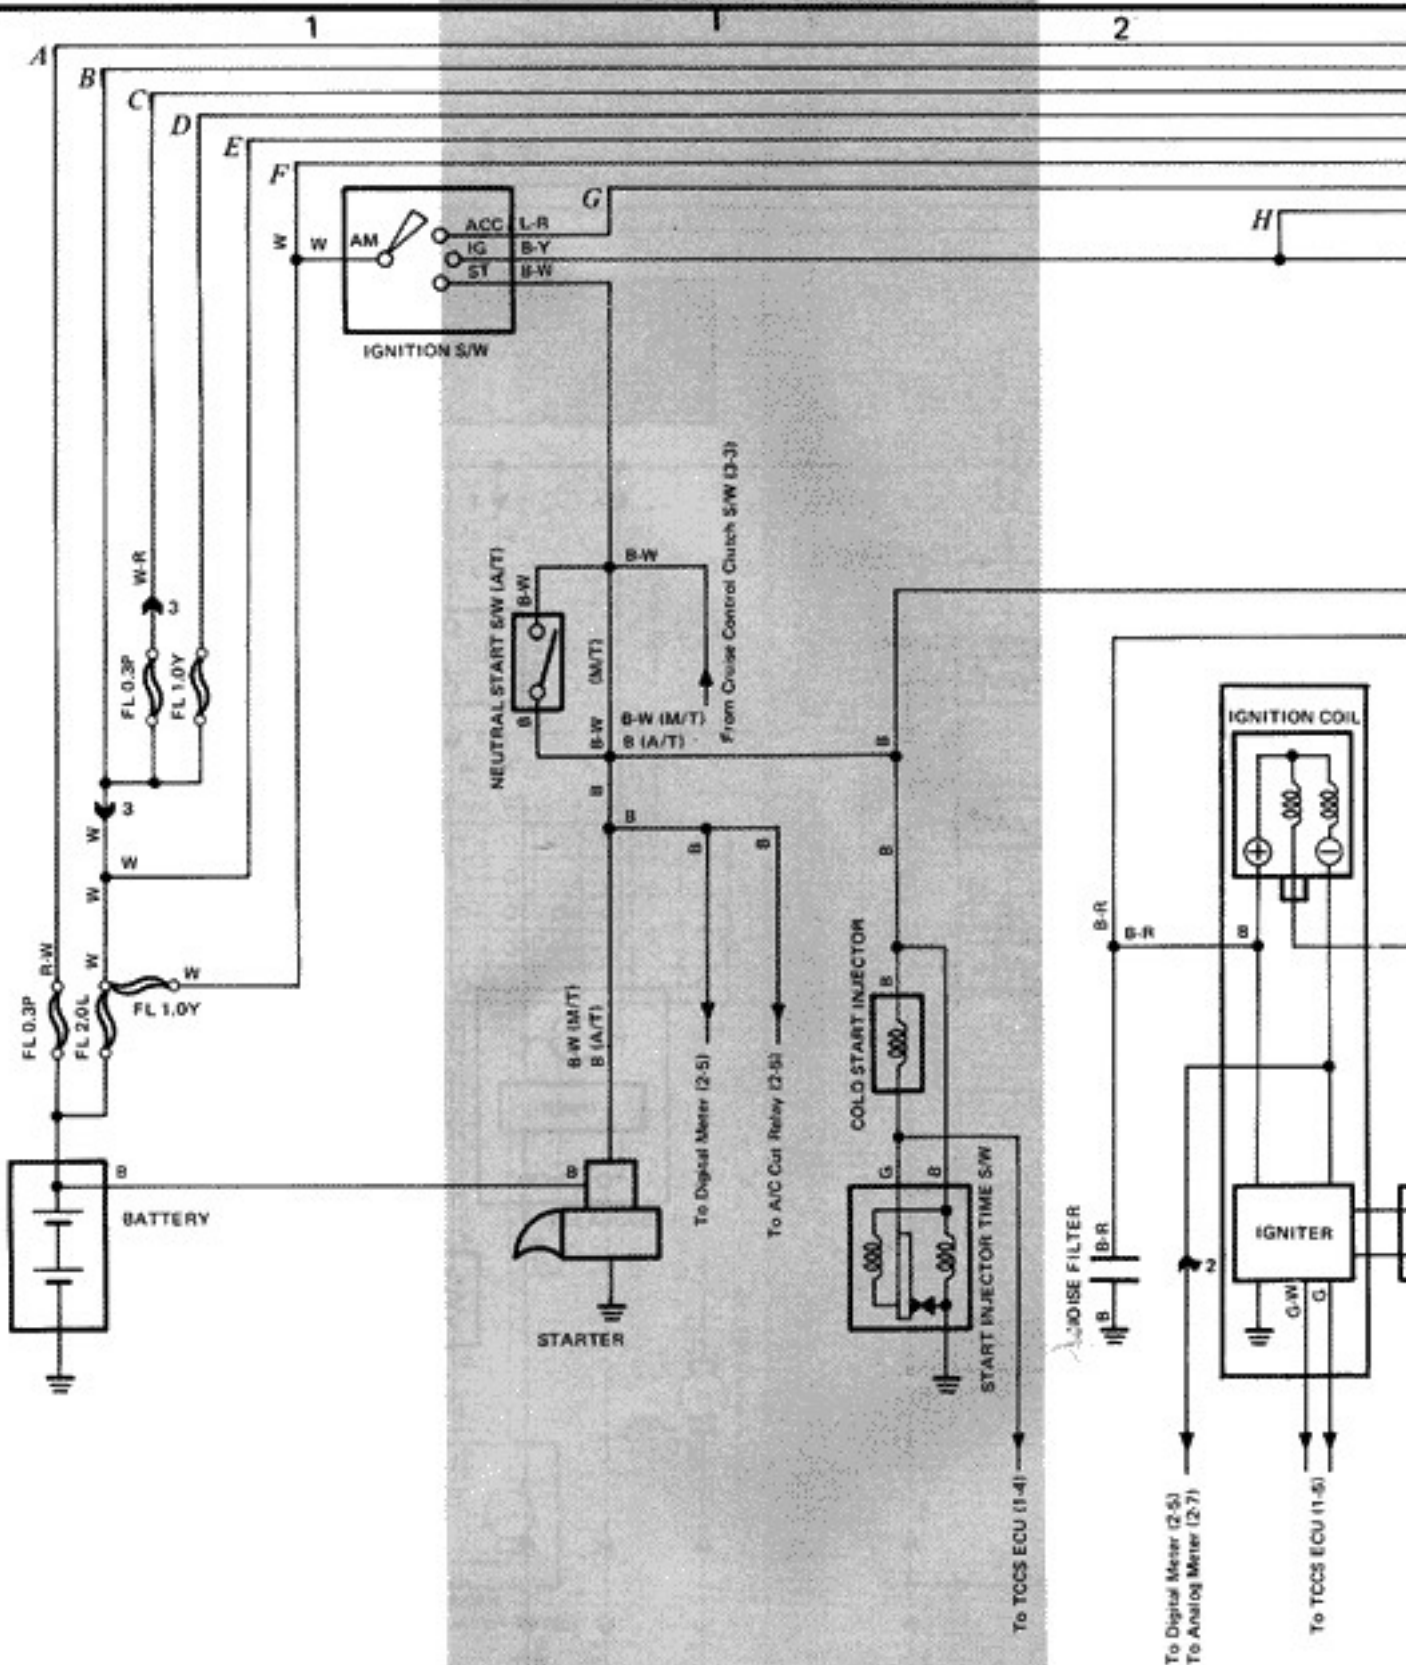


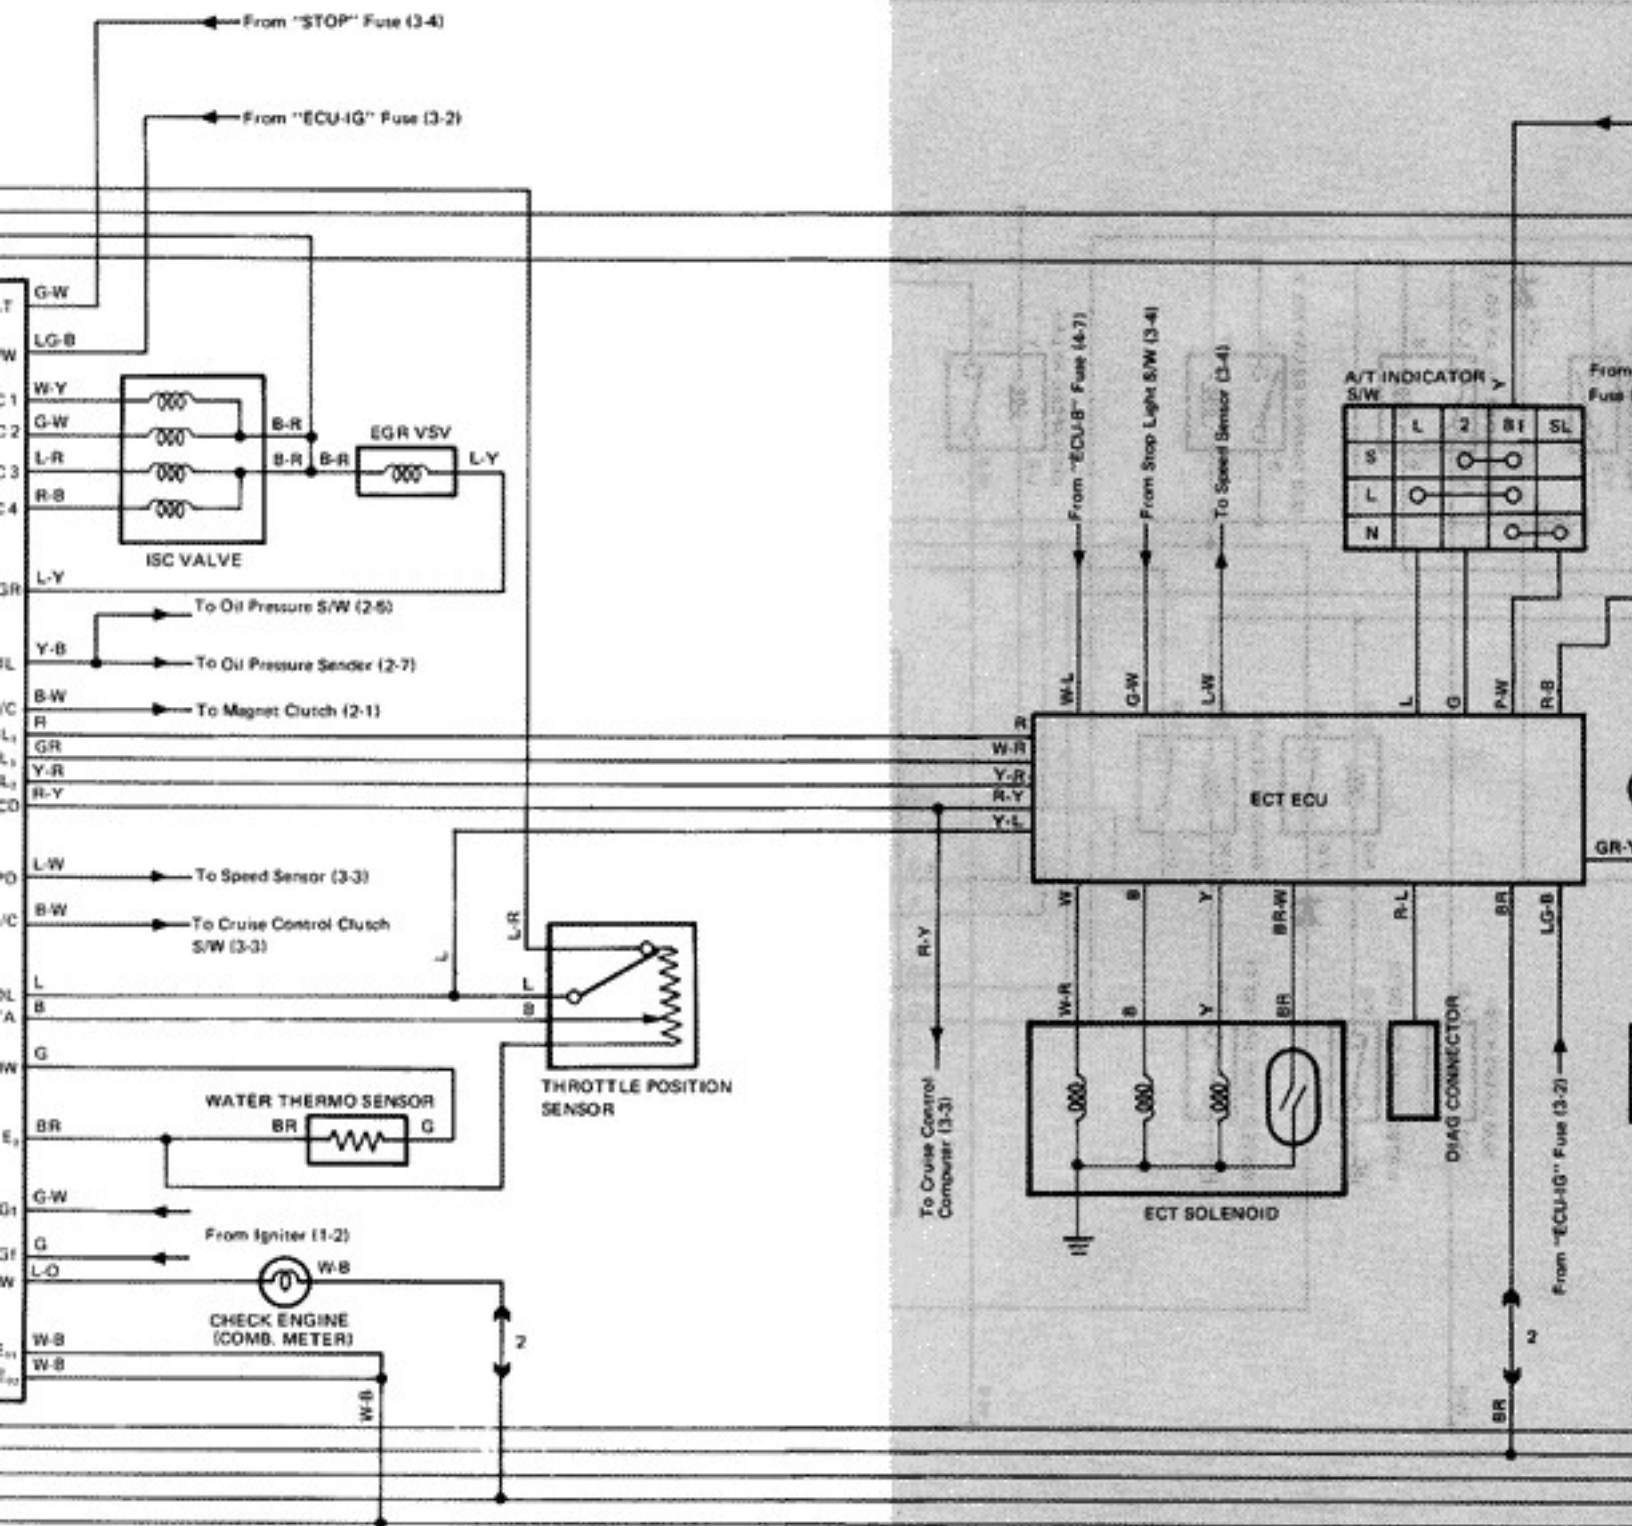

onic Control Transmission)



Charging

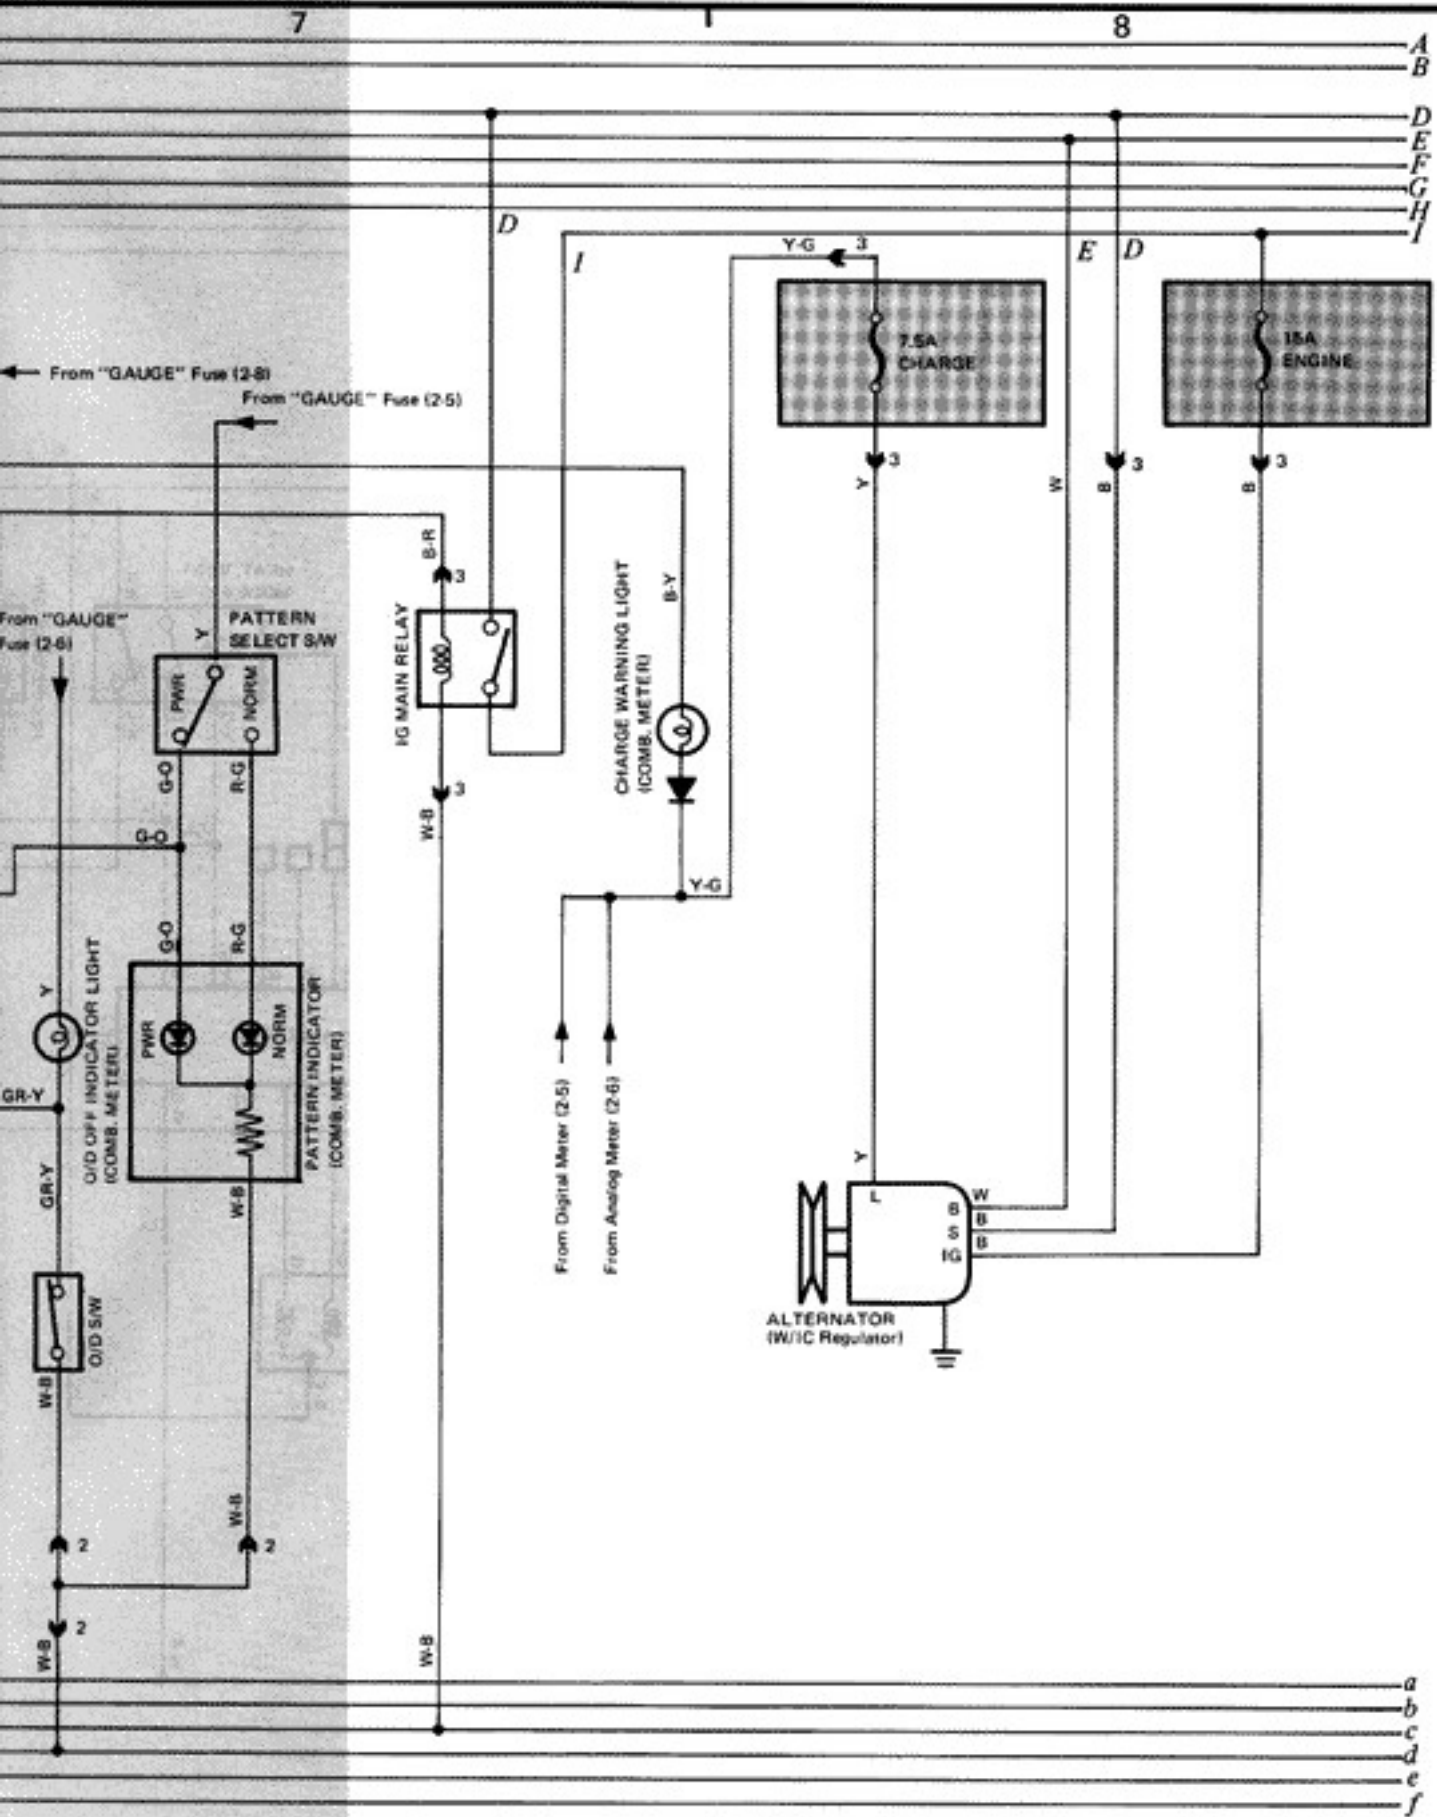


e = Located on right side of air intake chamber

f = Located in back panel near door key cylinder

2 CELICA SUPRA (Cont'd)



Fog Lights

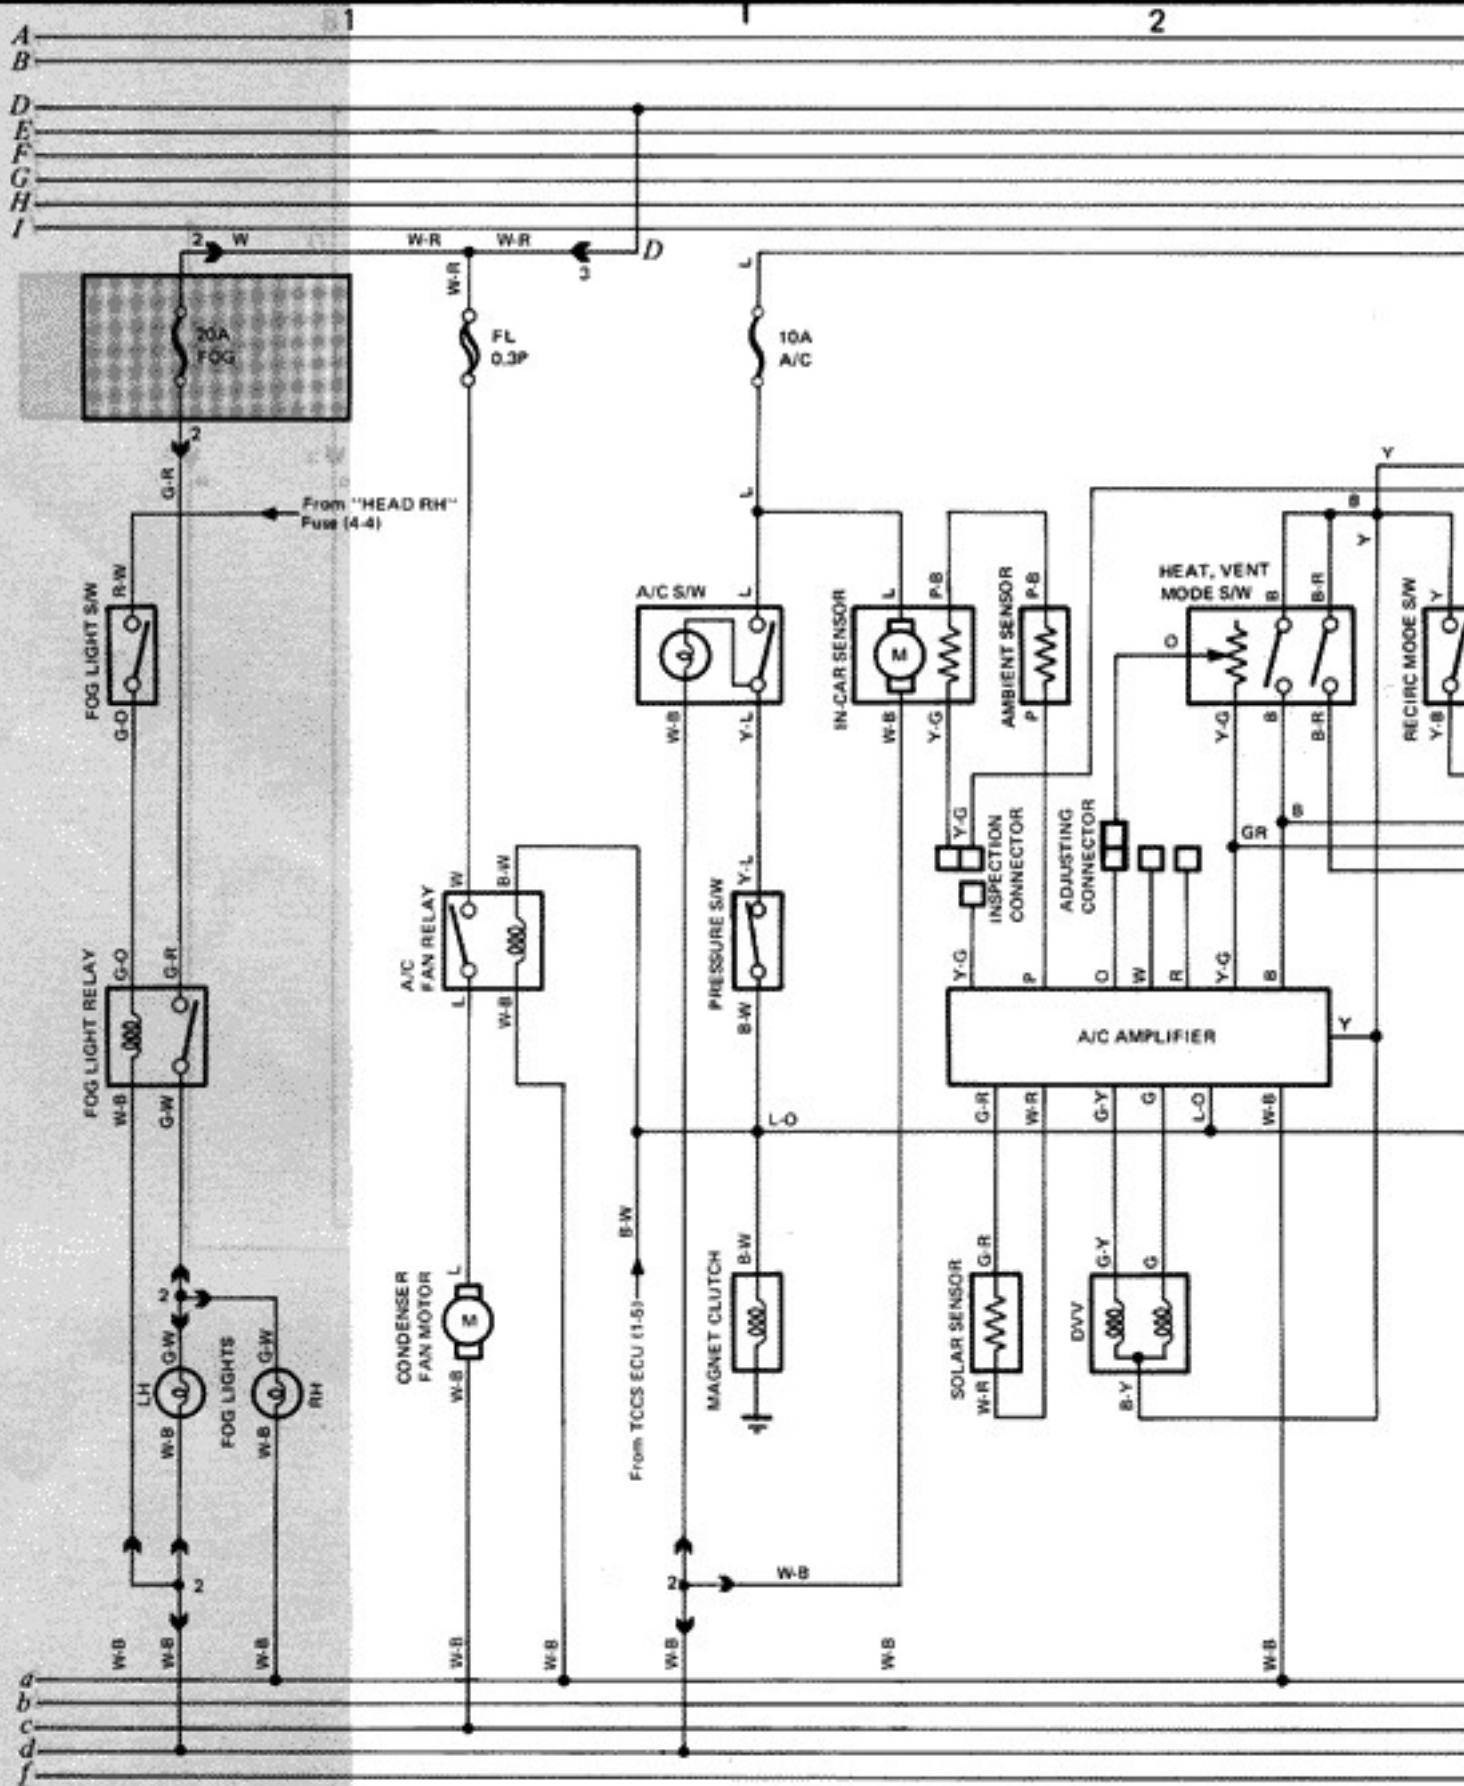

Ground points Q = Located under right front pillar


b = Located under left front pillar




Air Conditioner, Cooler and Heater


3

4

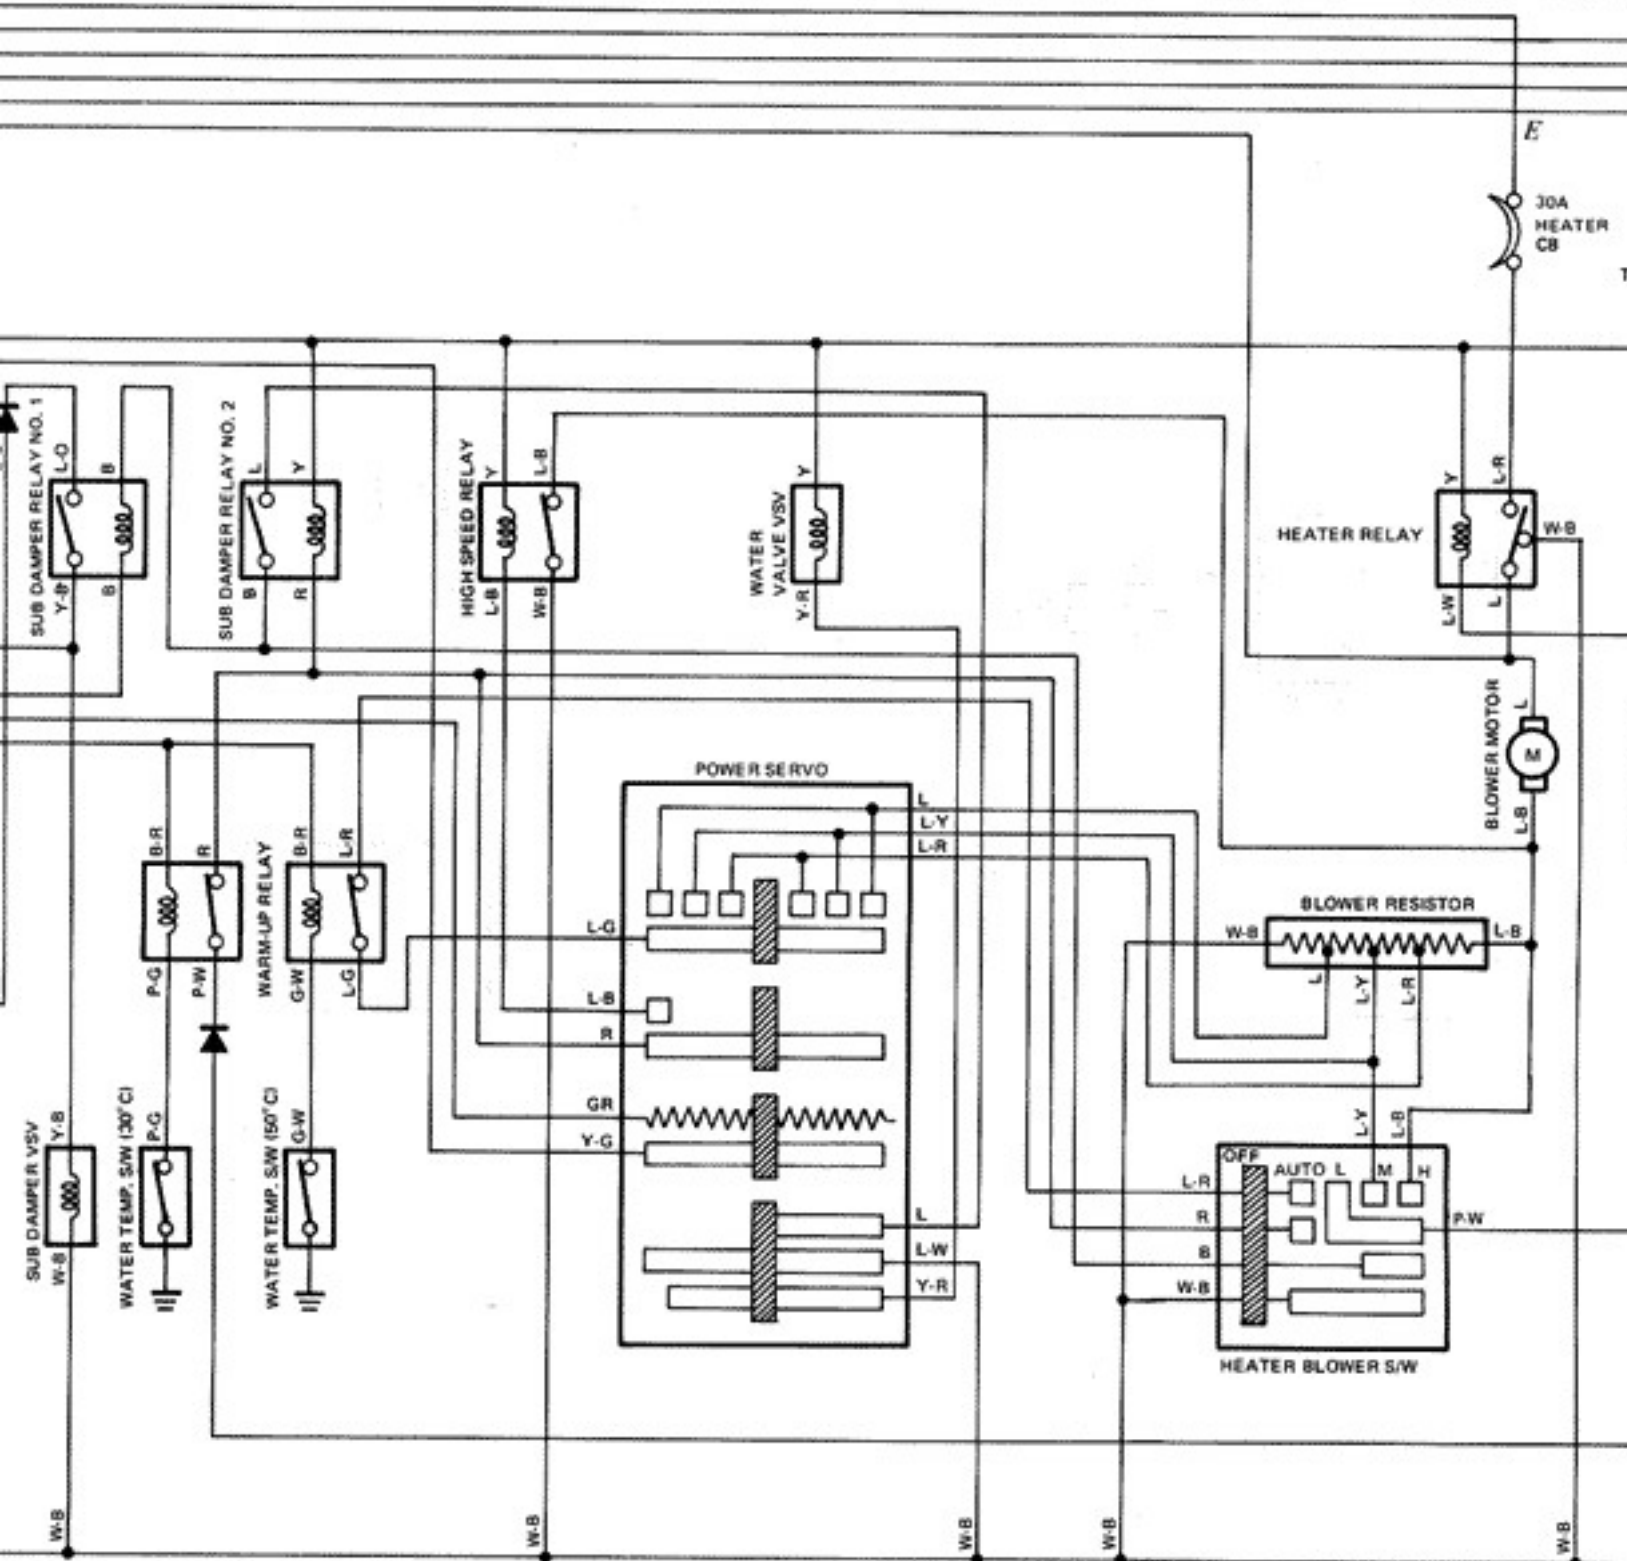



Combination Meter

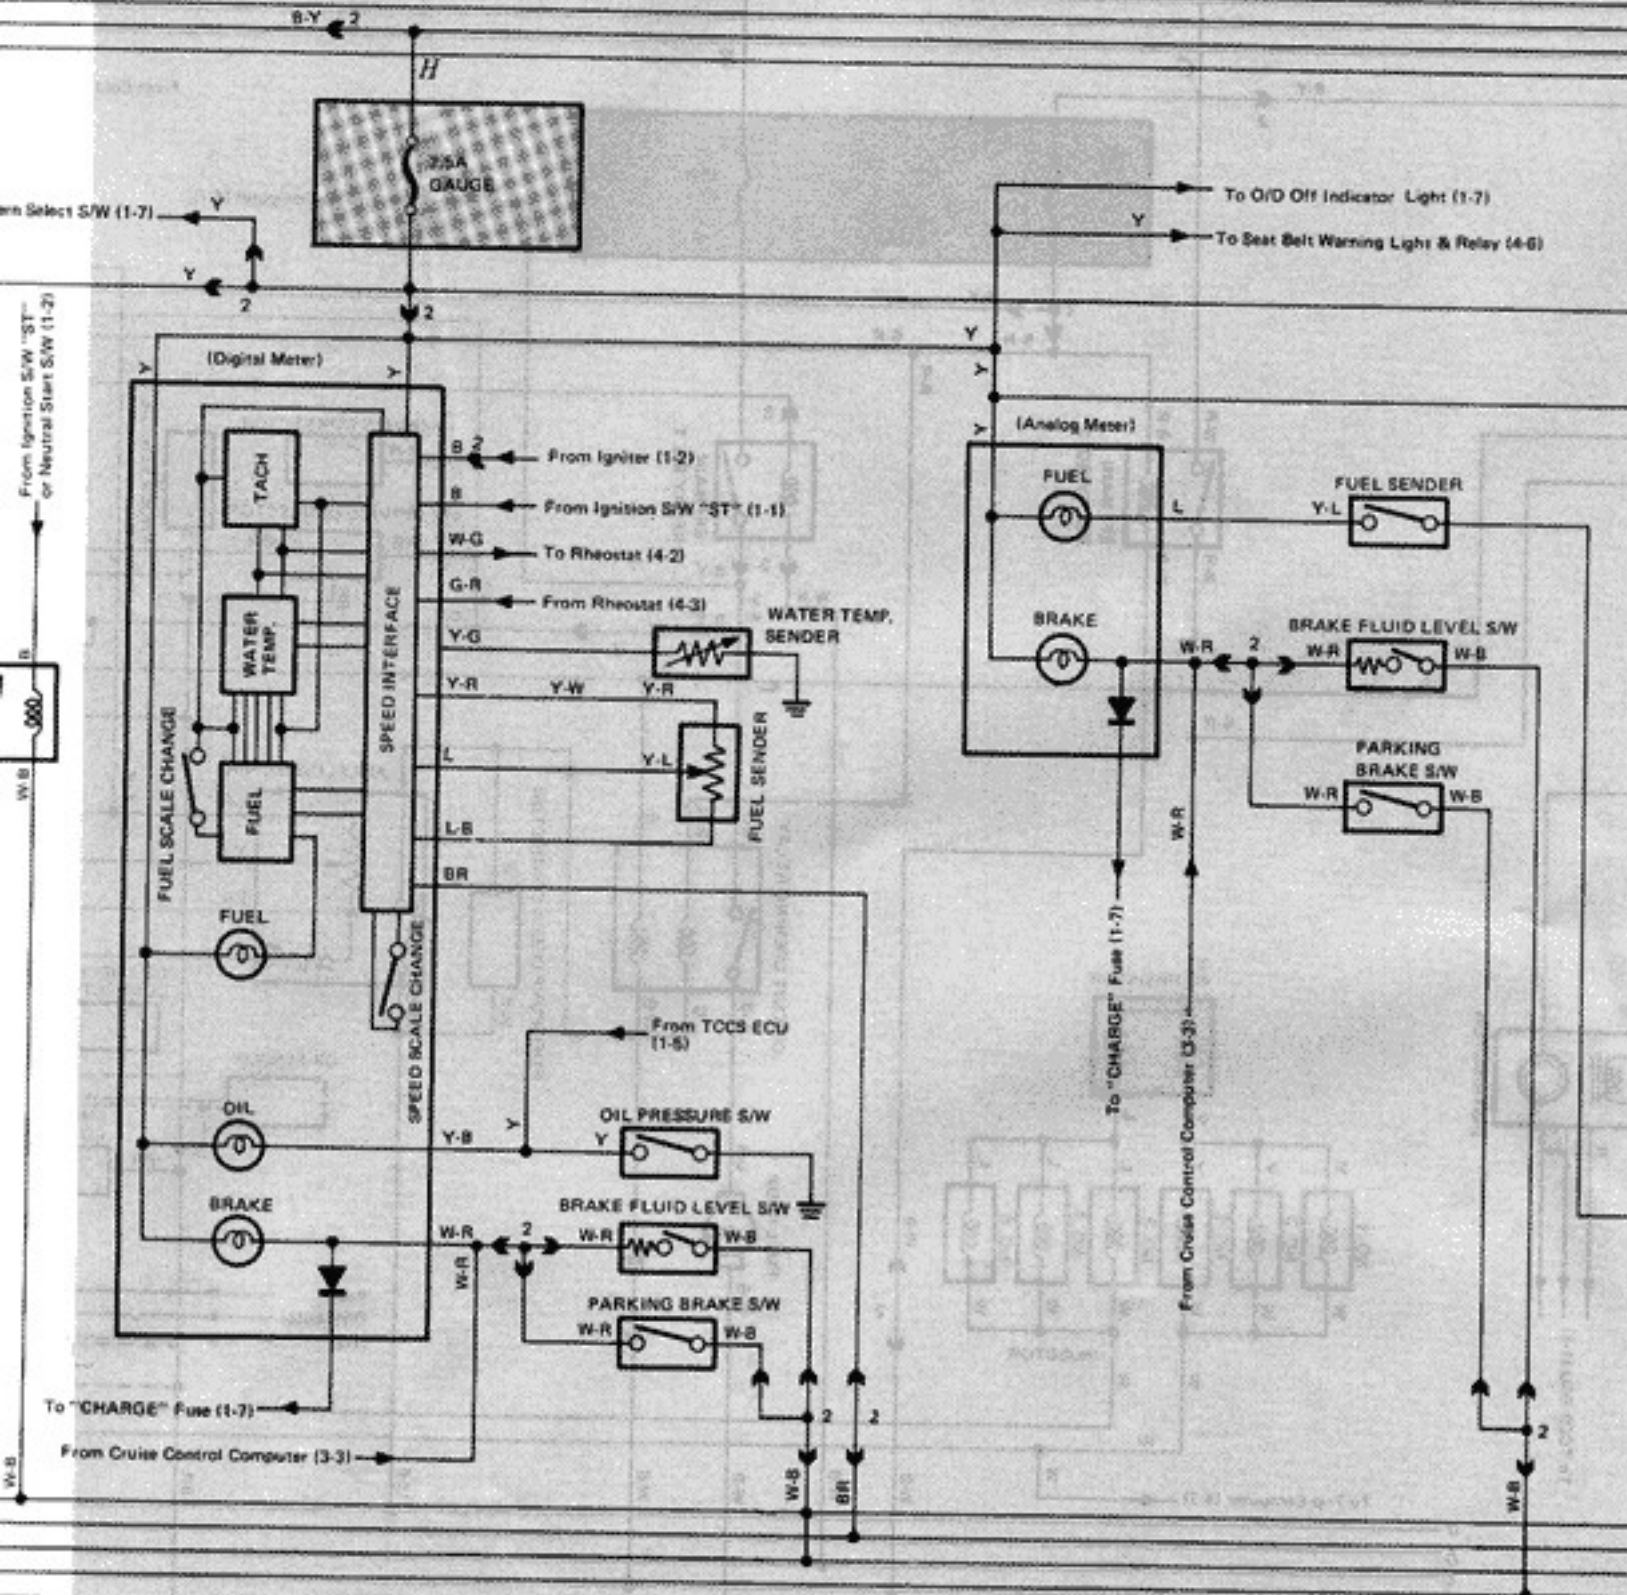




Rear Window Defogger



Back-up Lights

8

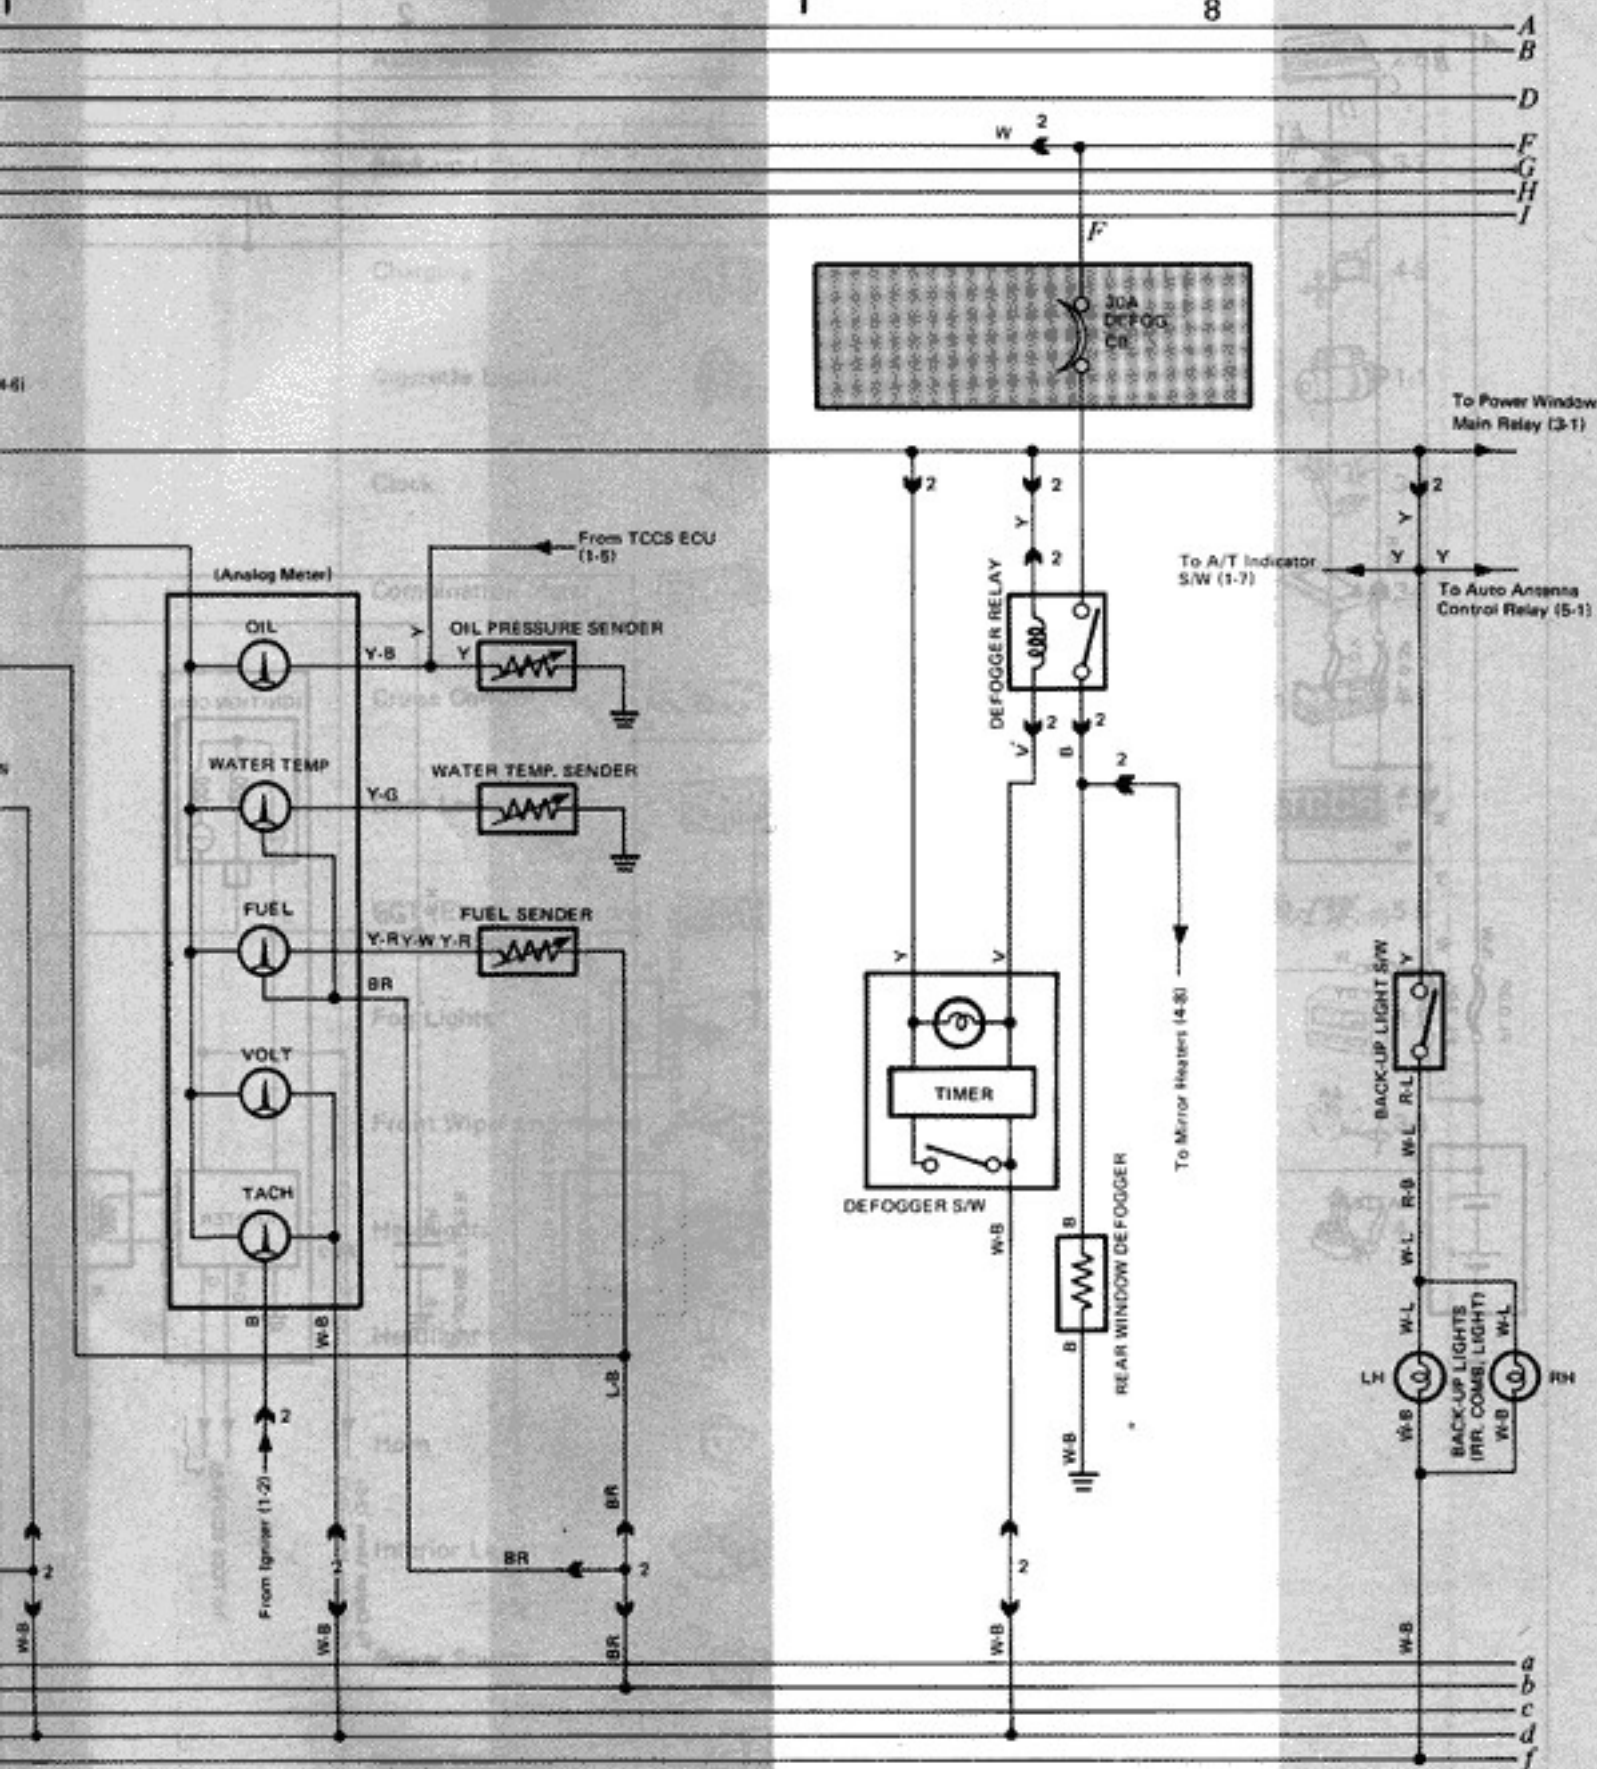


CELICA SUPRA (Cont'd)



Power Windows



Sun Roof

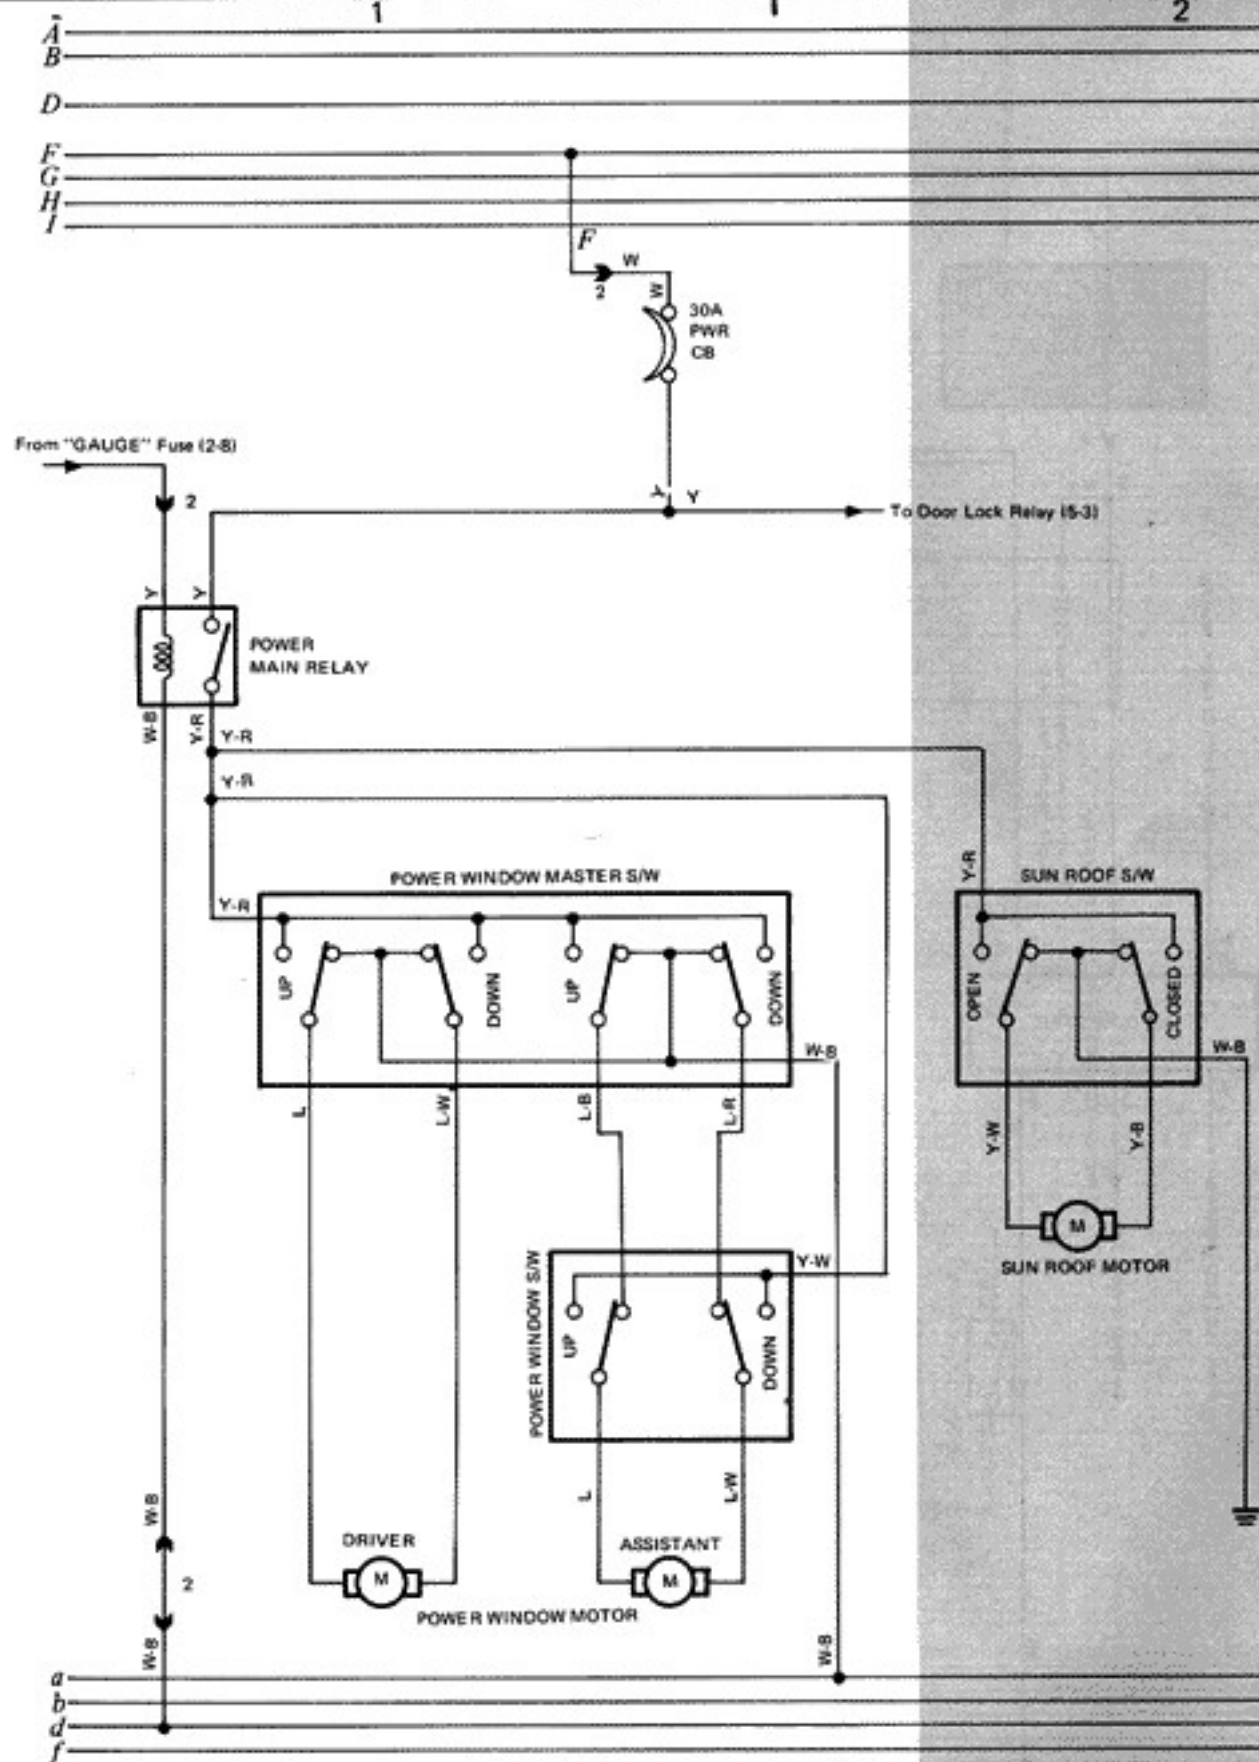

Ground points

a = Located under right front pillar


b = Located under left front pillar




Cruise Control



Stop Lights

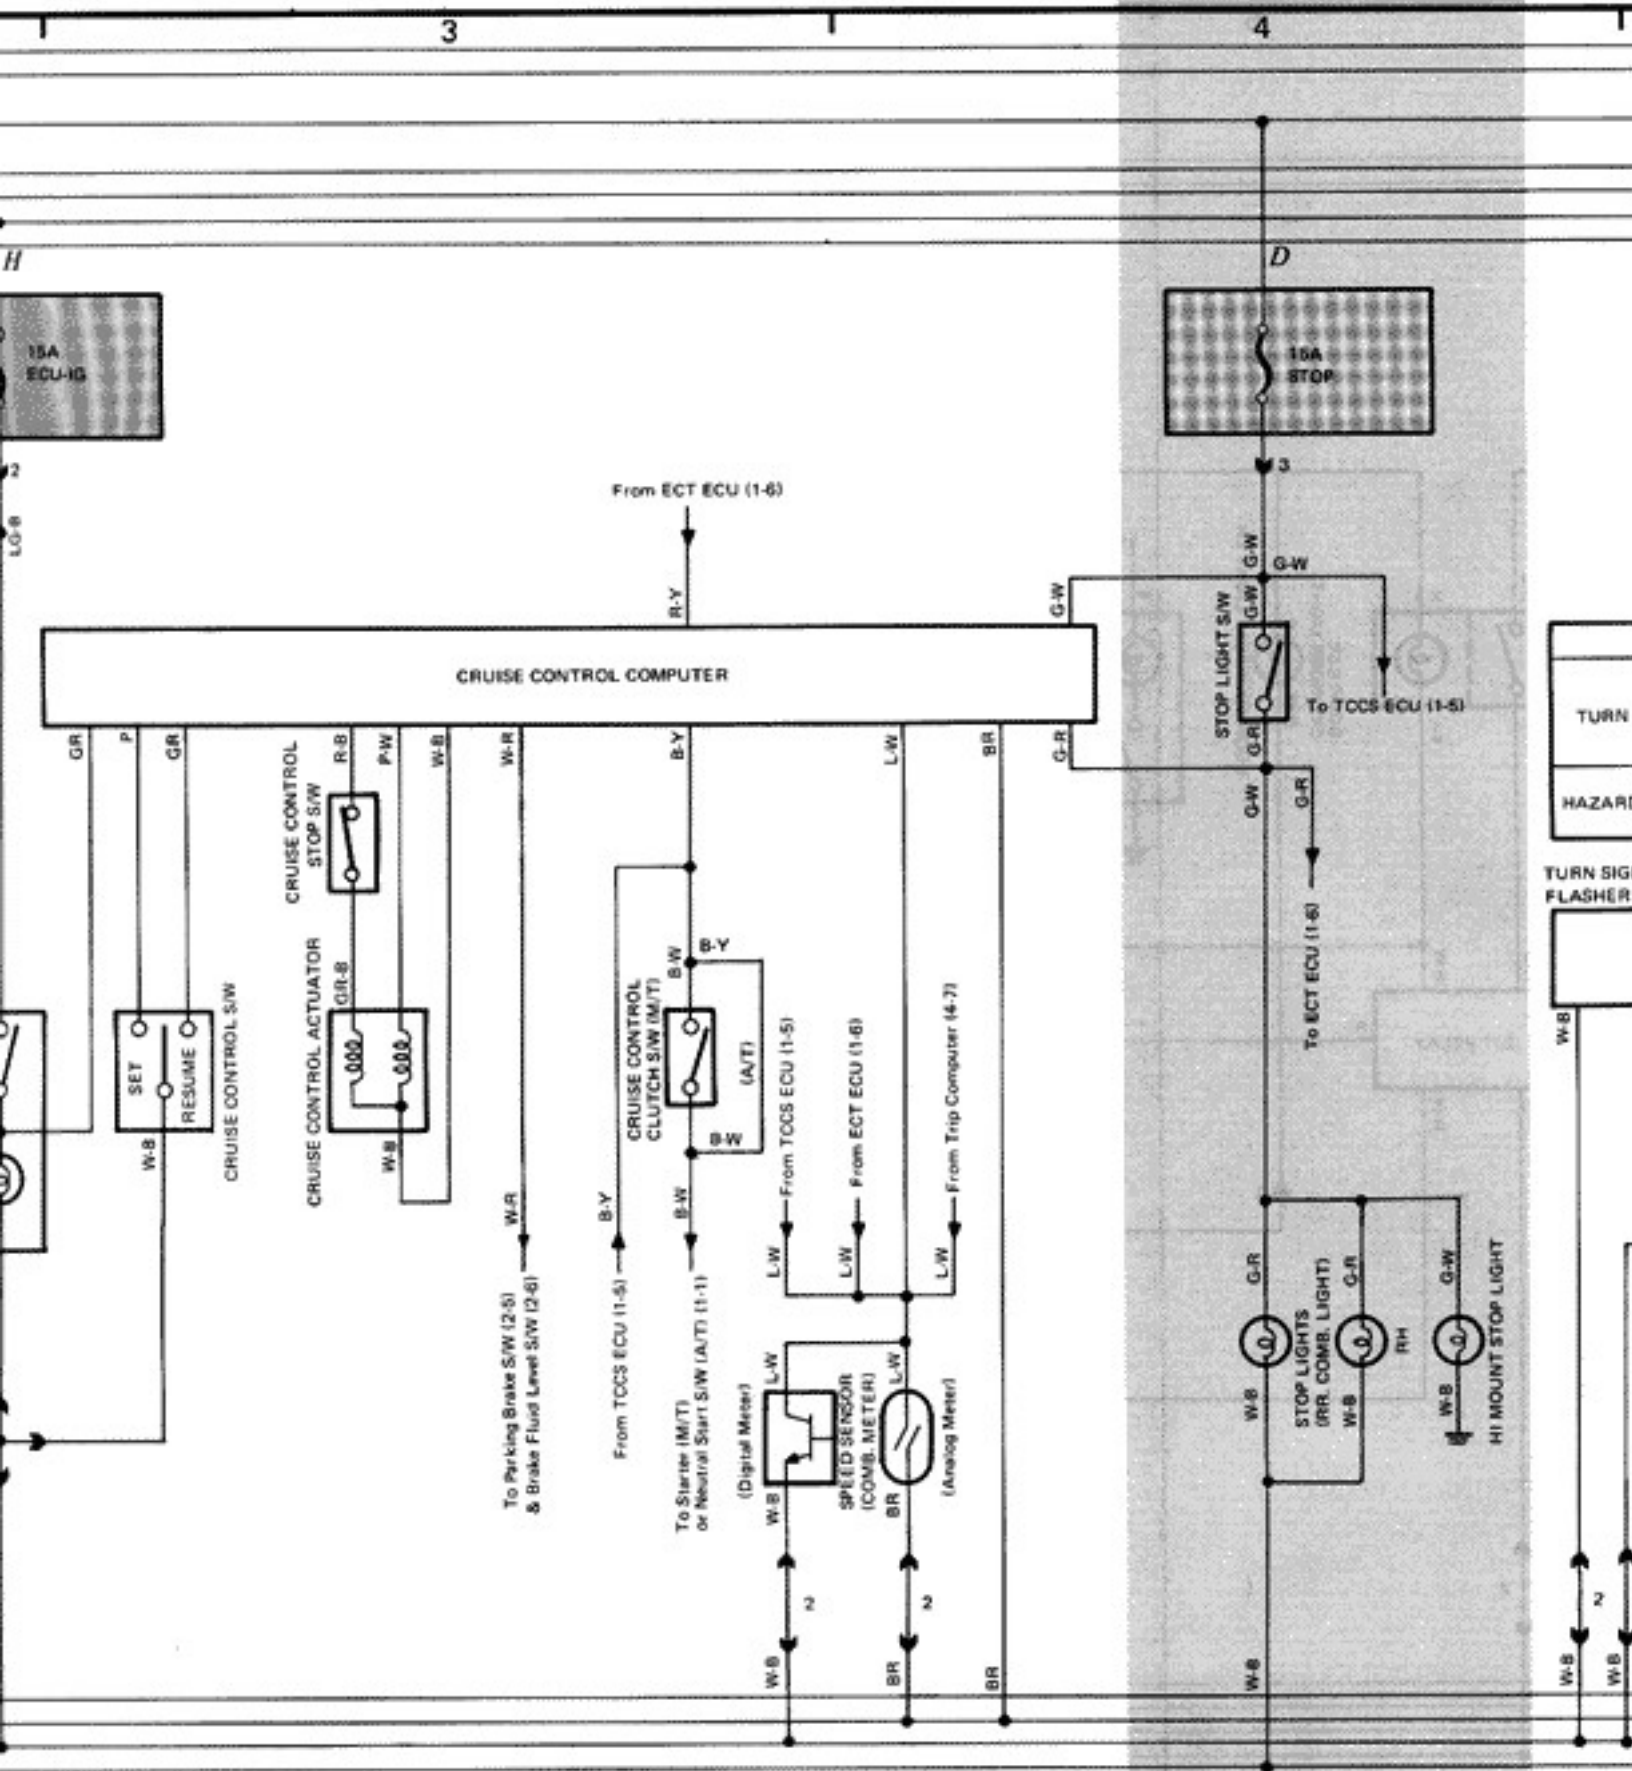

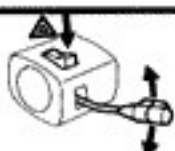


Turn Signal and Hazard



Horn

5


6

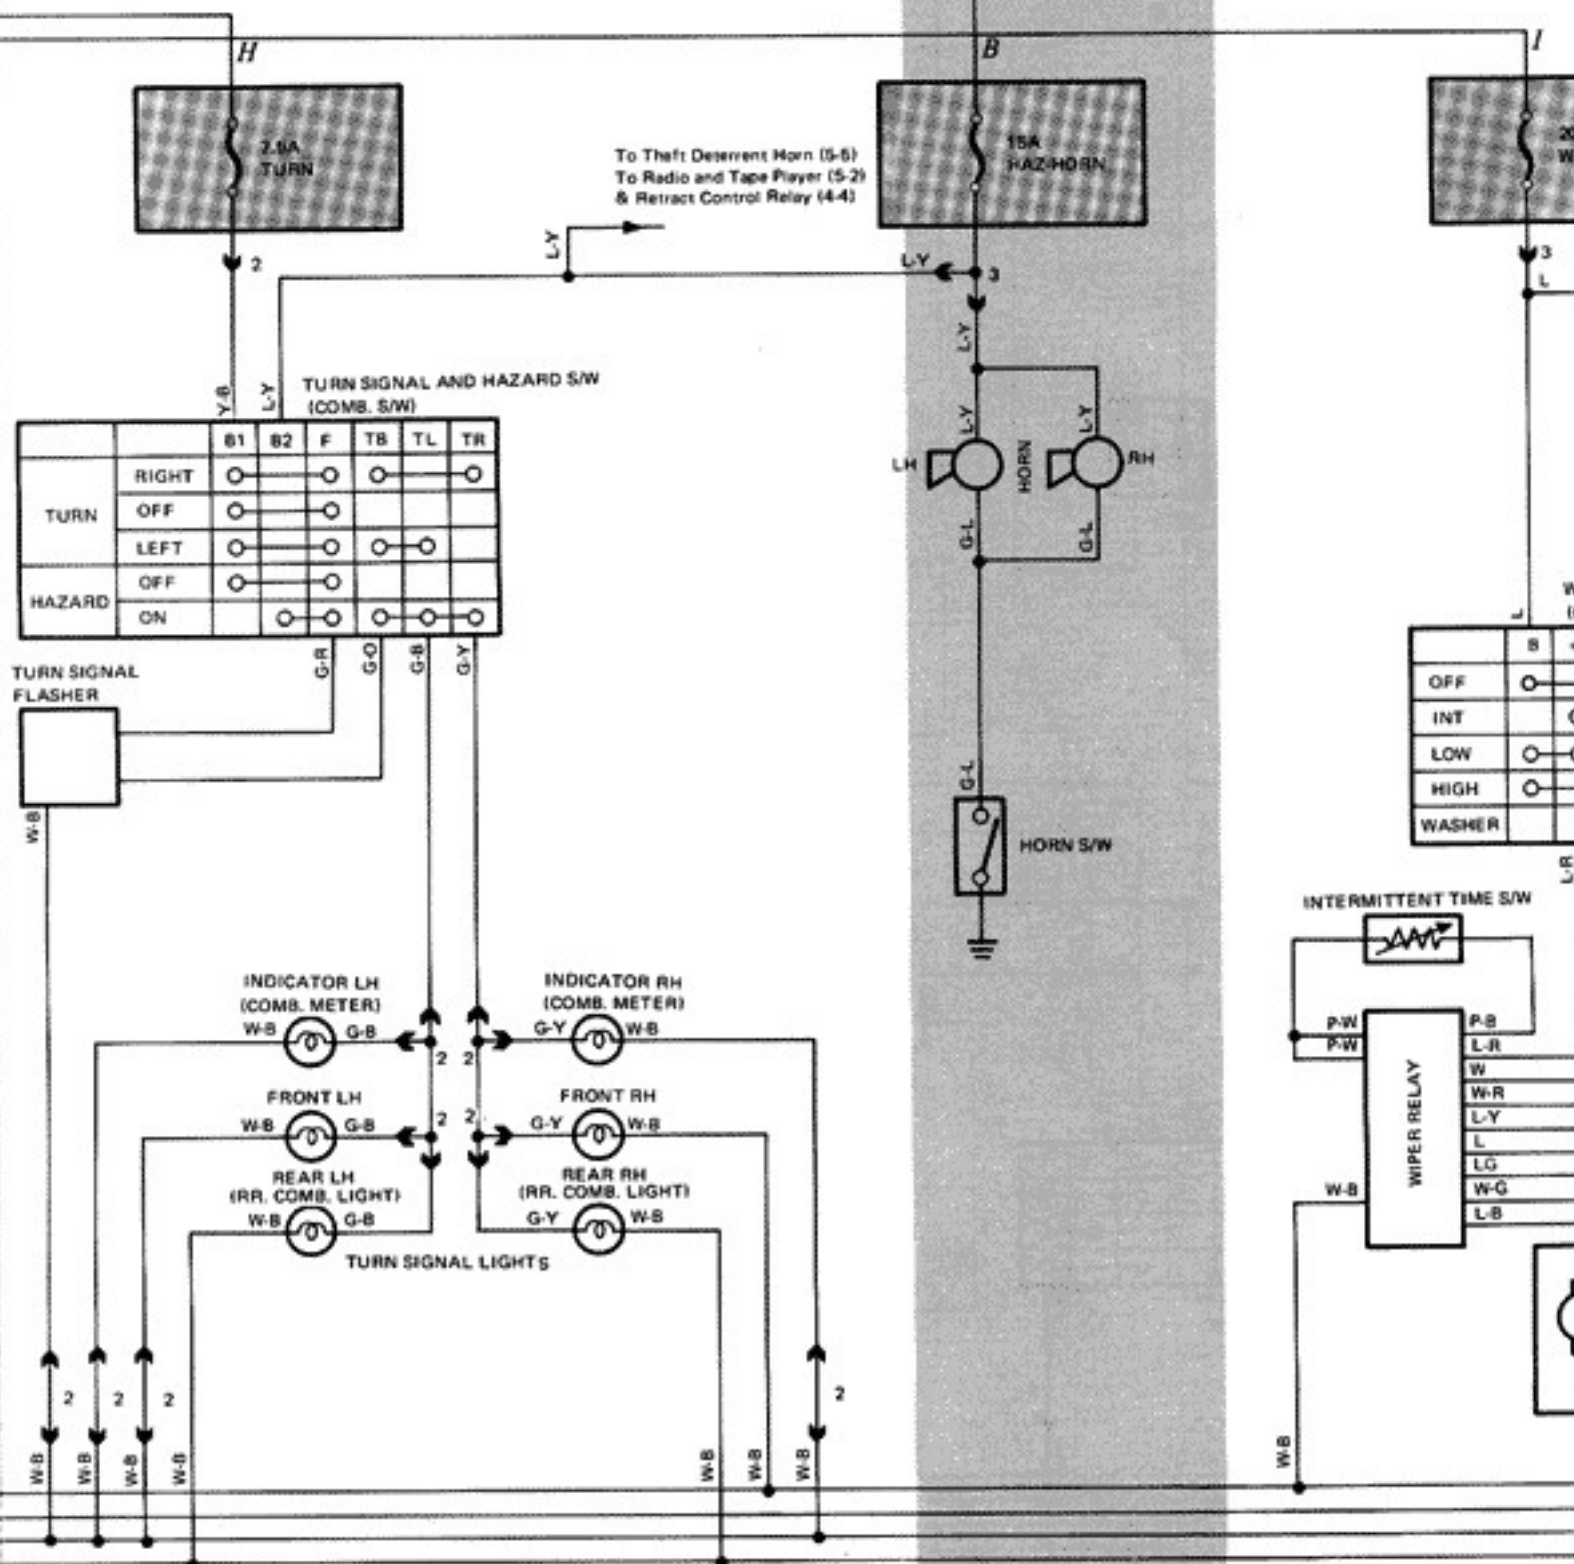

Front Wiper and Washer

Rear Wiper and Washer

Headlight Cleaner

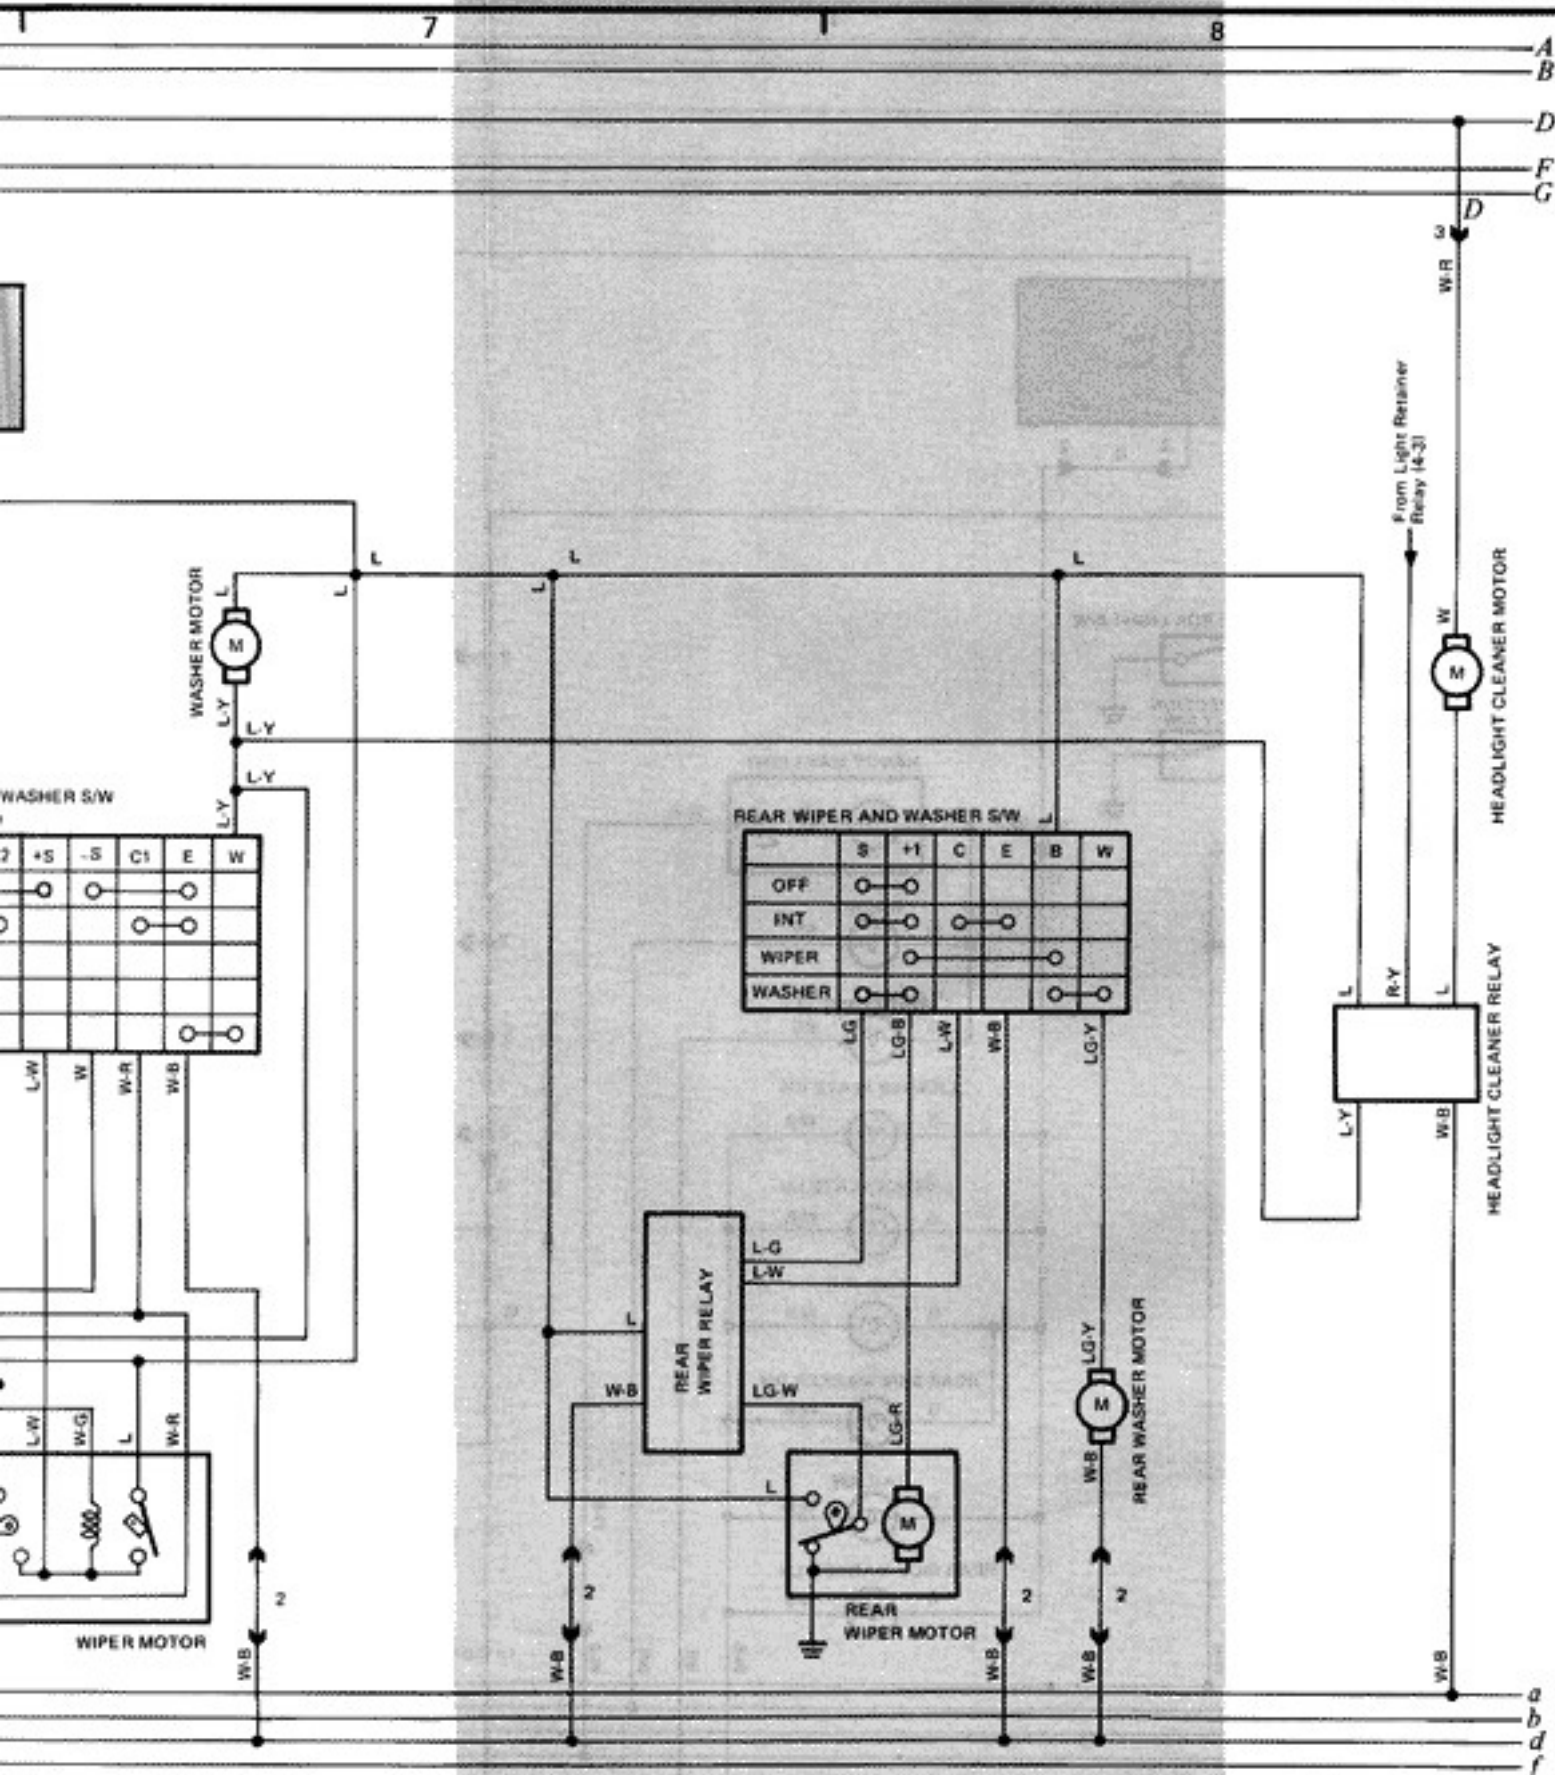

4 CELICA SUPRA (Cont'd)




Taillights and Illumination

A
B
D
F
G

1

1

2

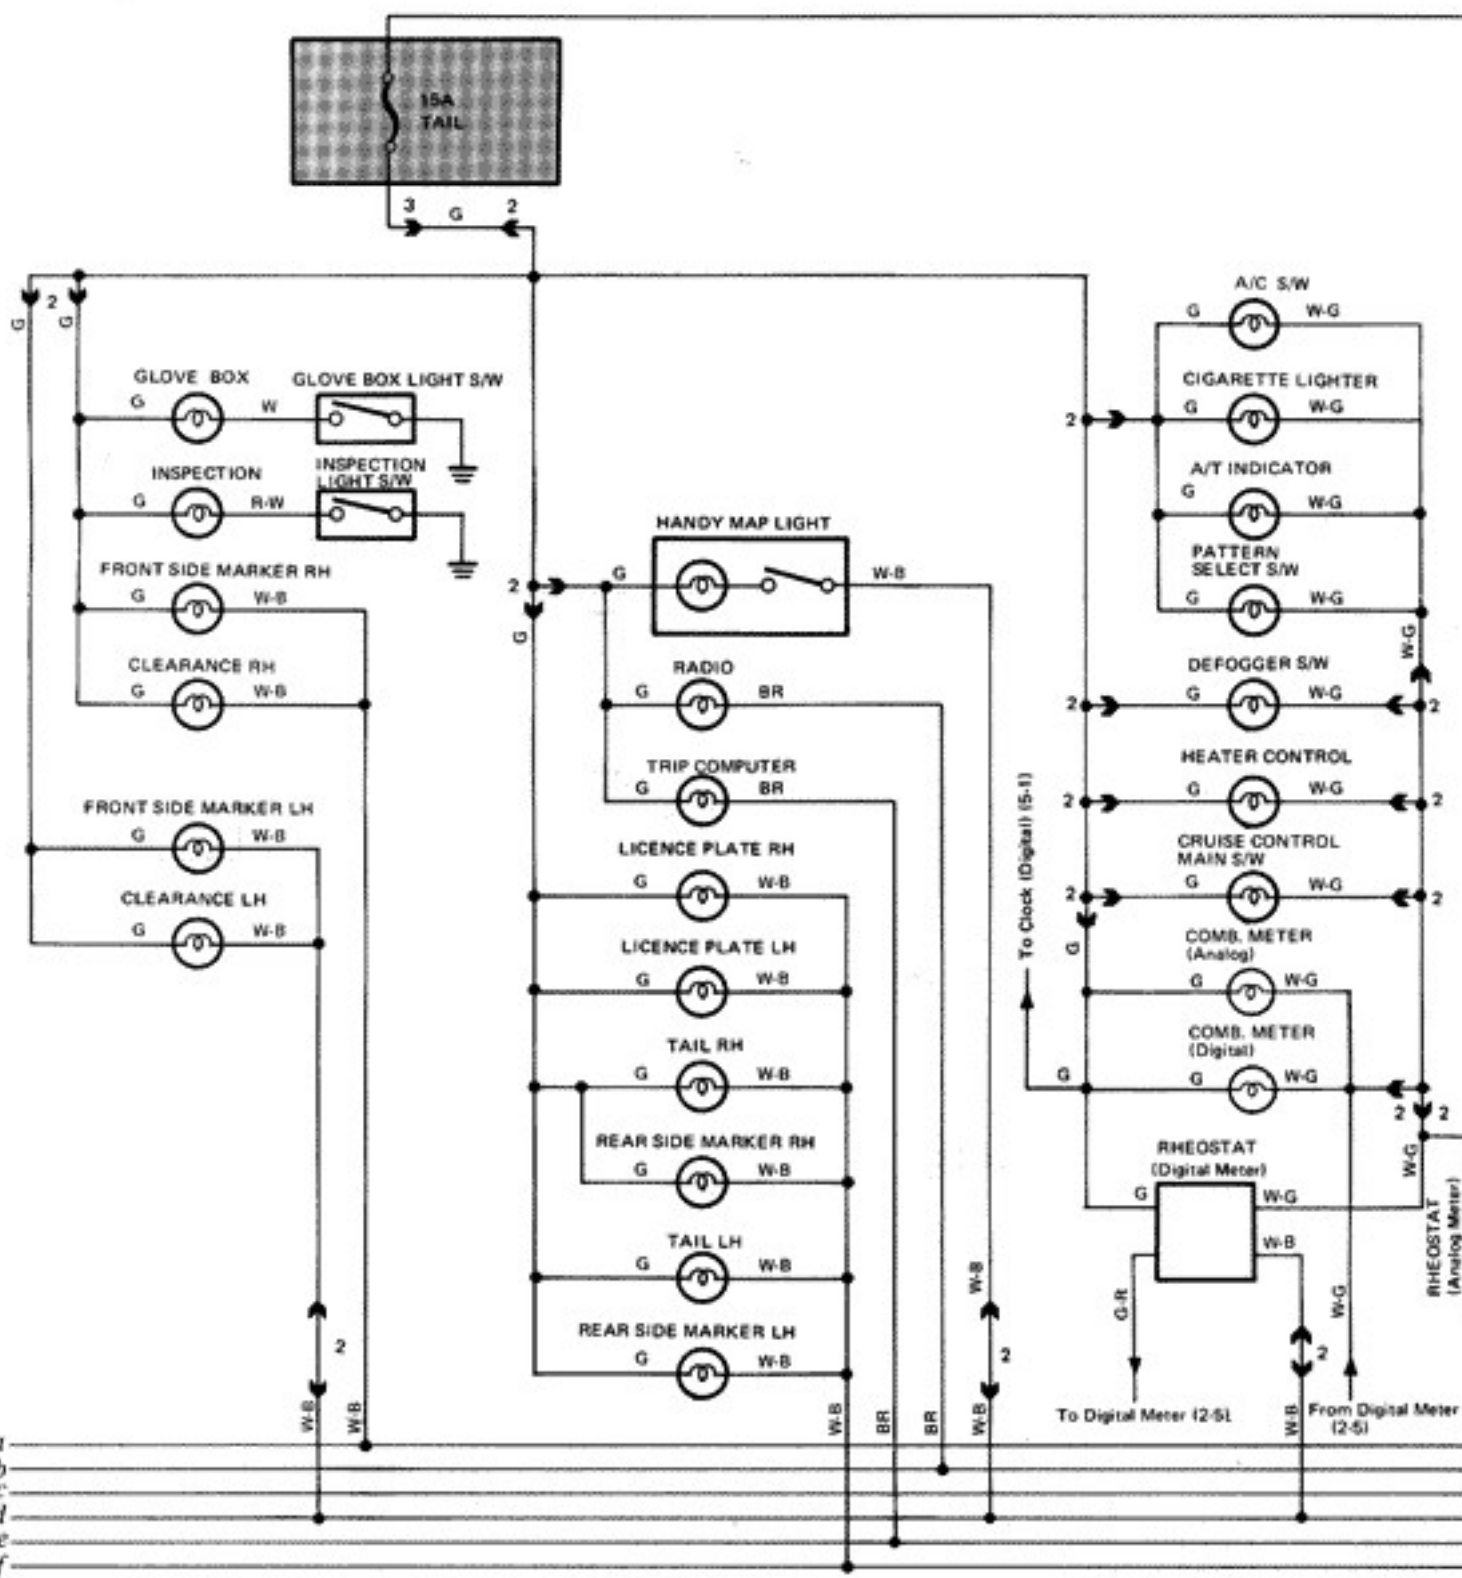


Ground points

a = Located under right front pillar

b = Located under left front pillar



Headlights

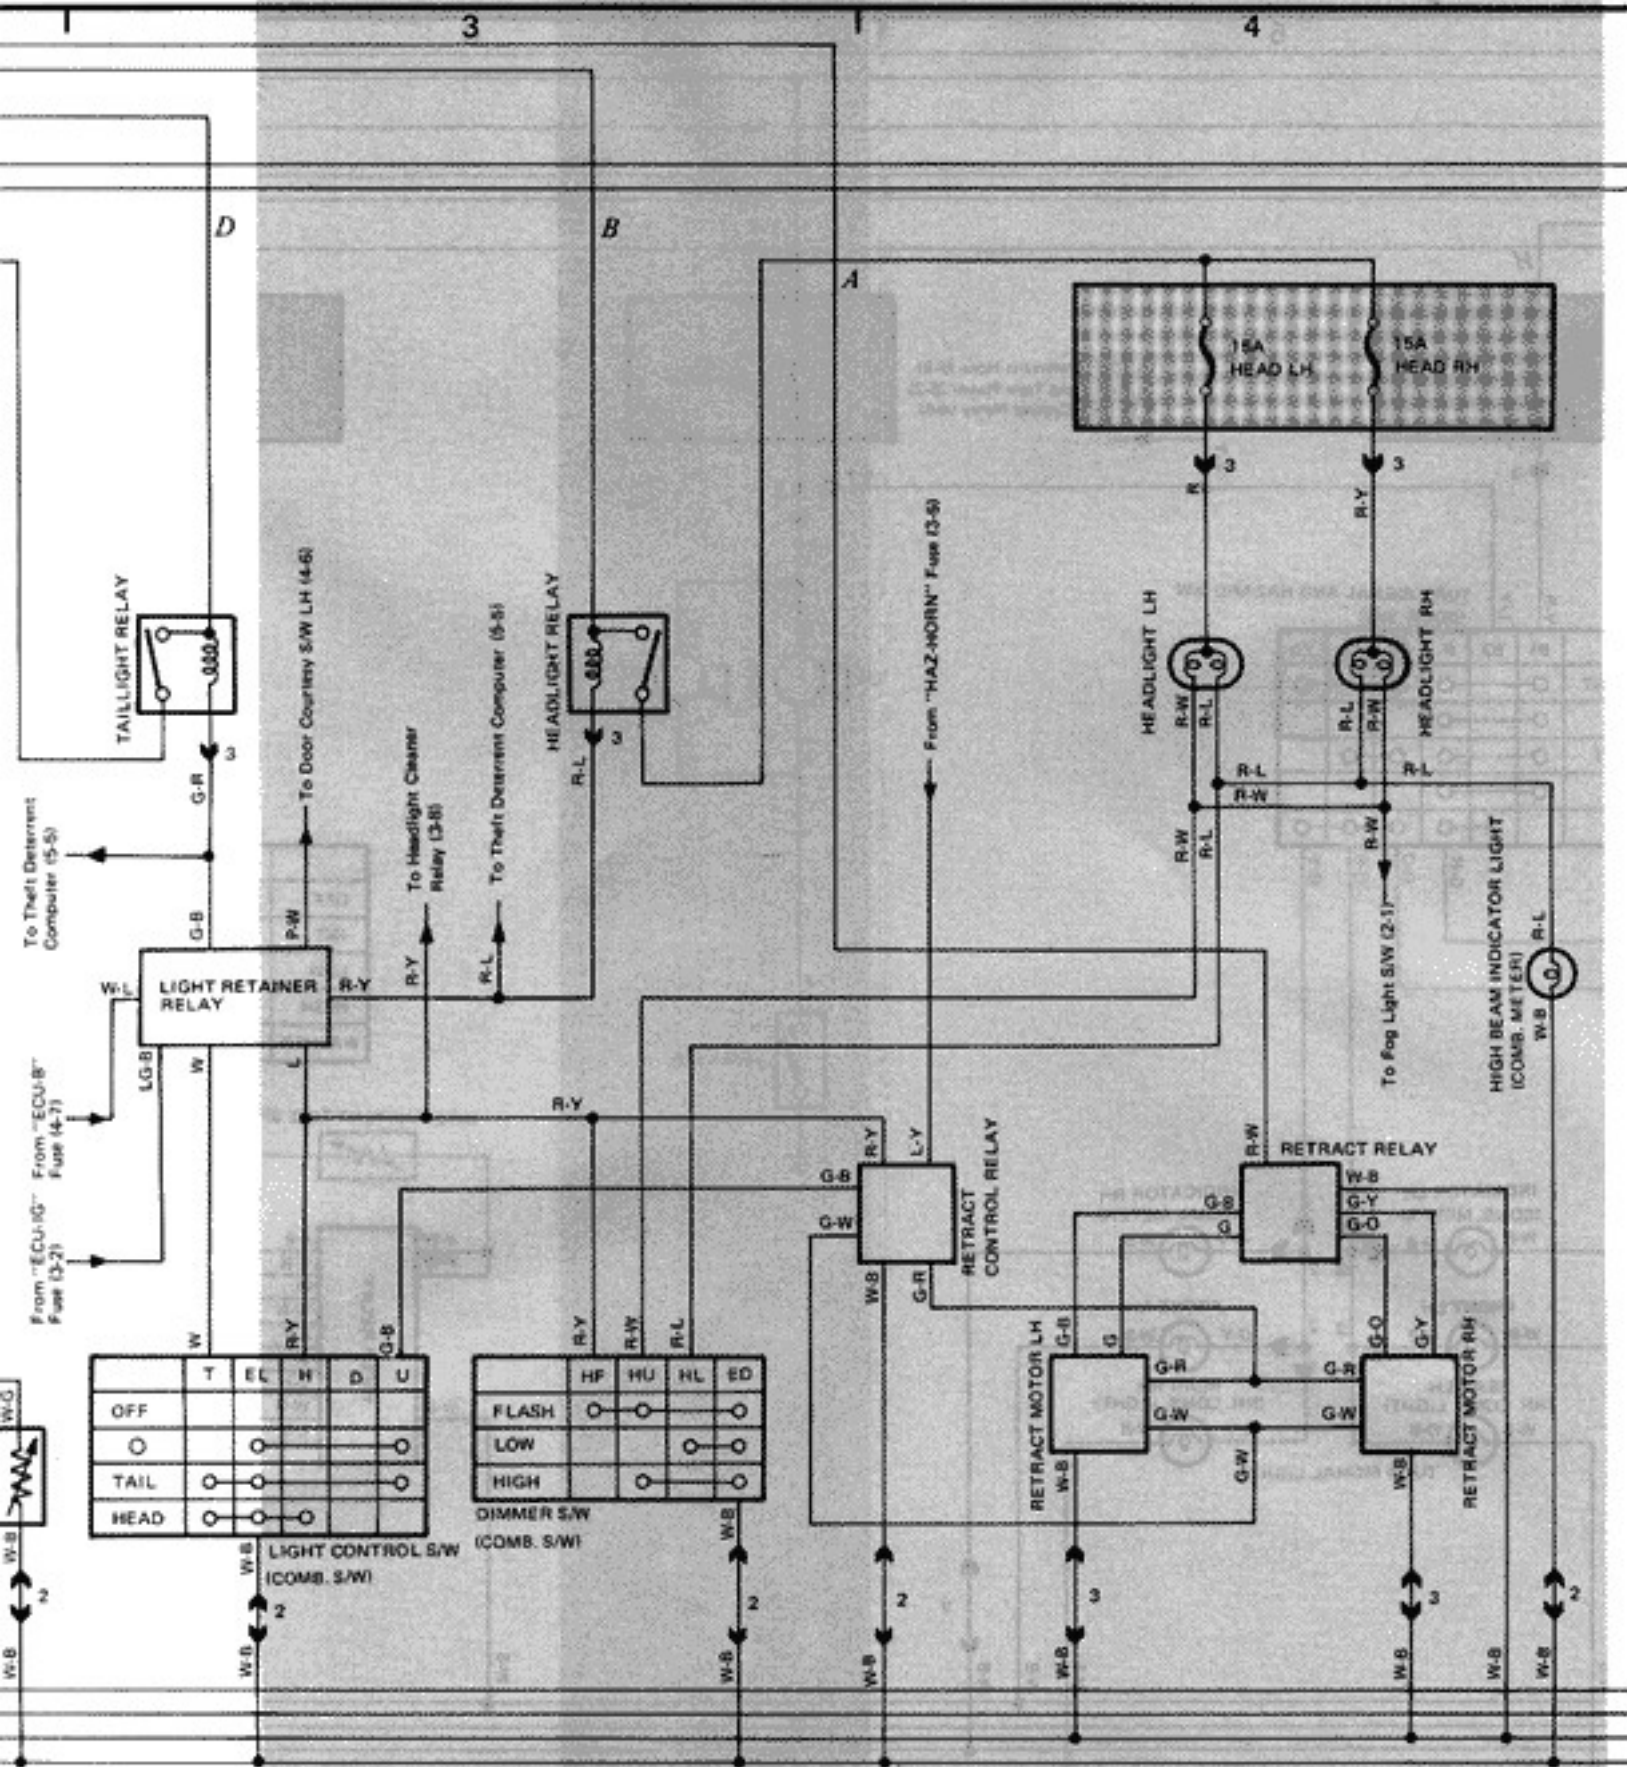




Interior Lights



5

6

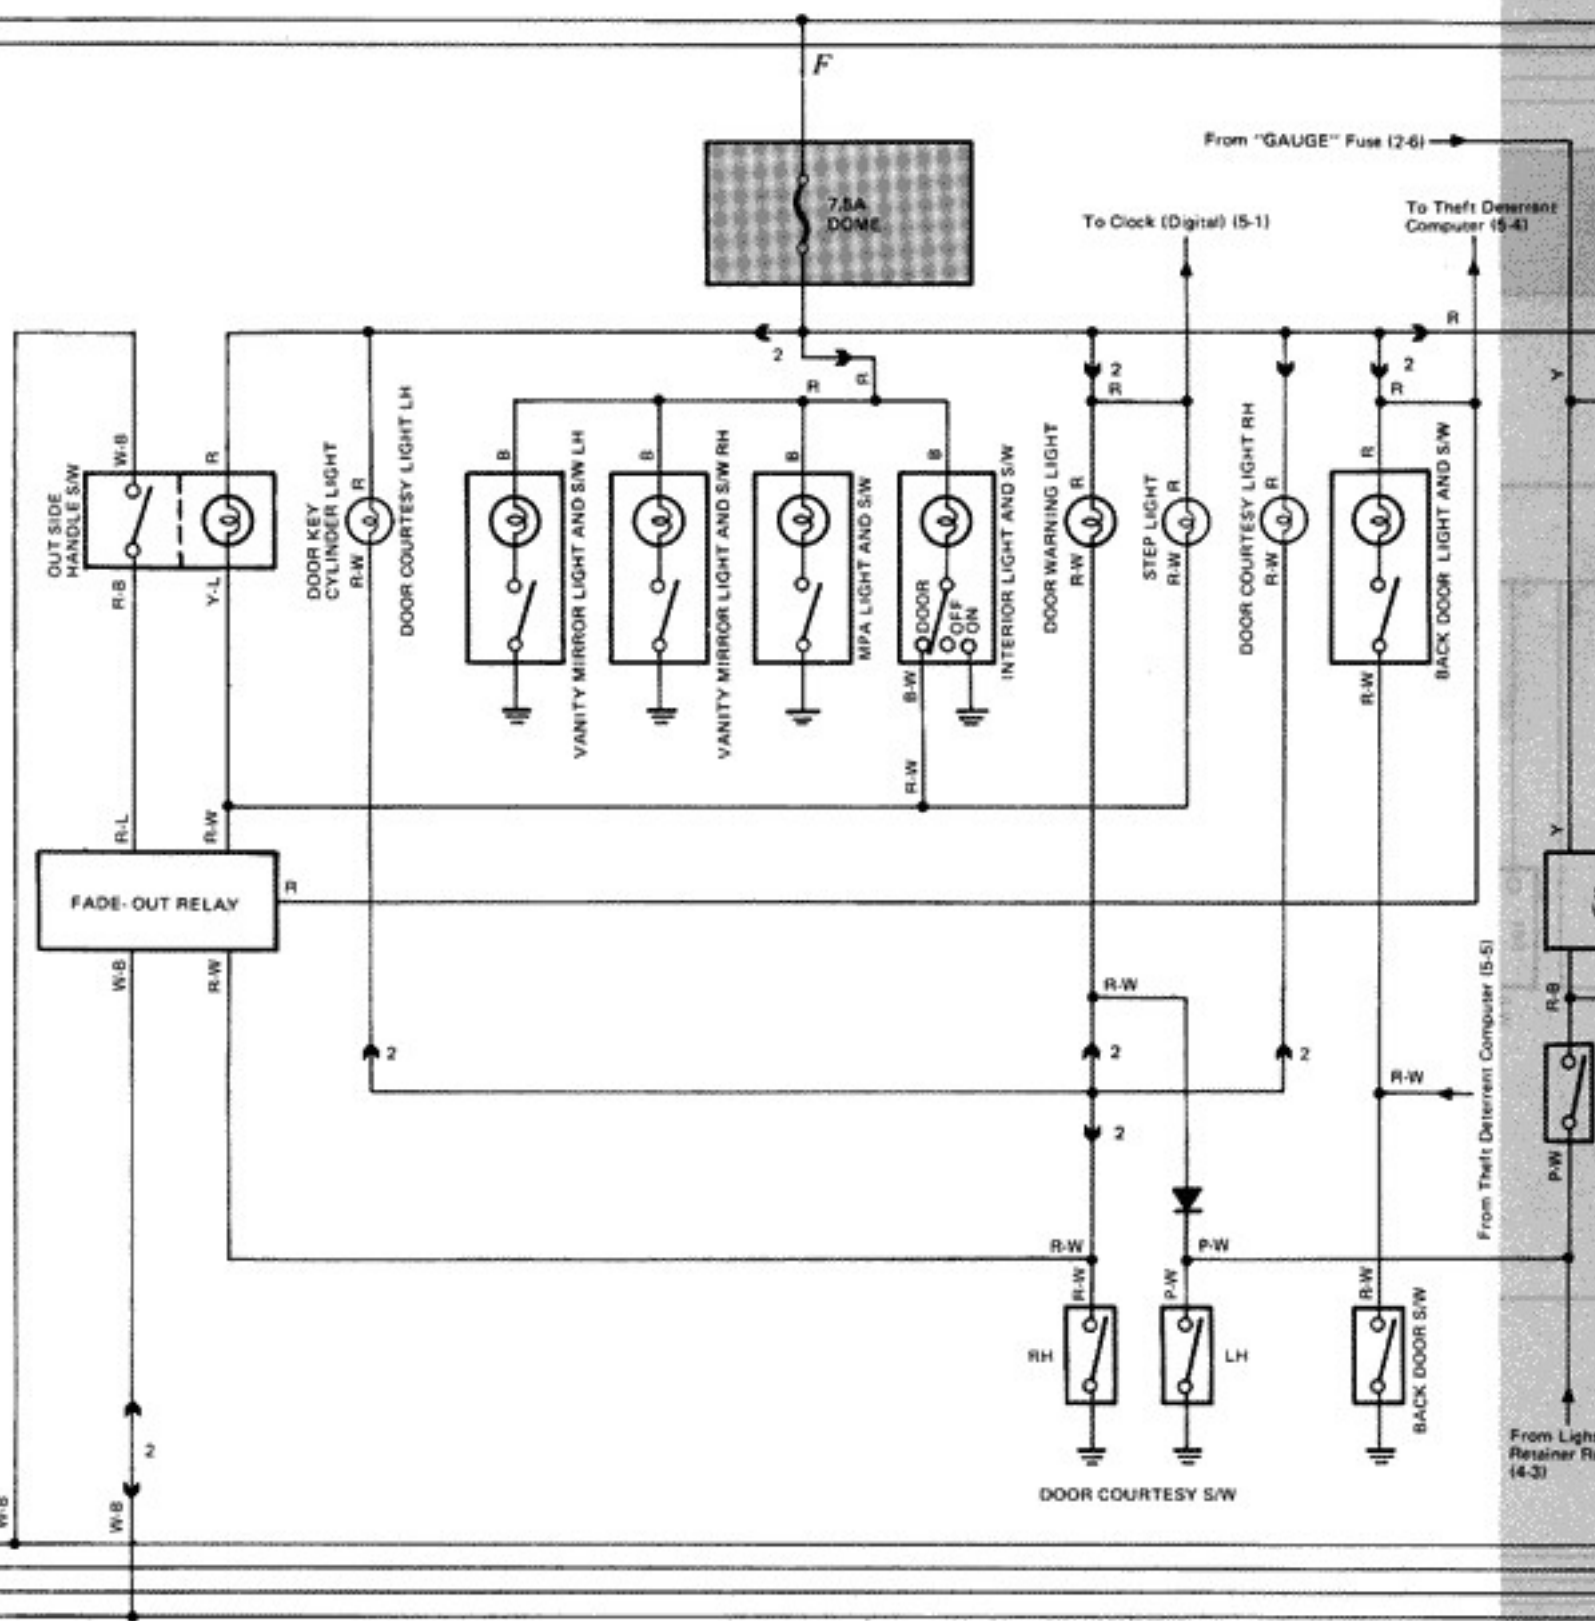

$\hat{e}$ = Located on right side of air intake chamber

$\hat{f}$ = Located in back panel near door key cylinder


Unlock and
Seat Belt Warning



Trip Computer



Remote Control Mirrors with Heater

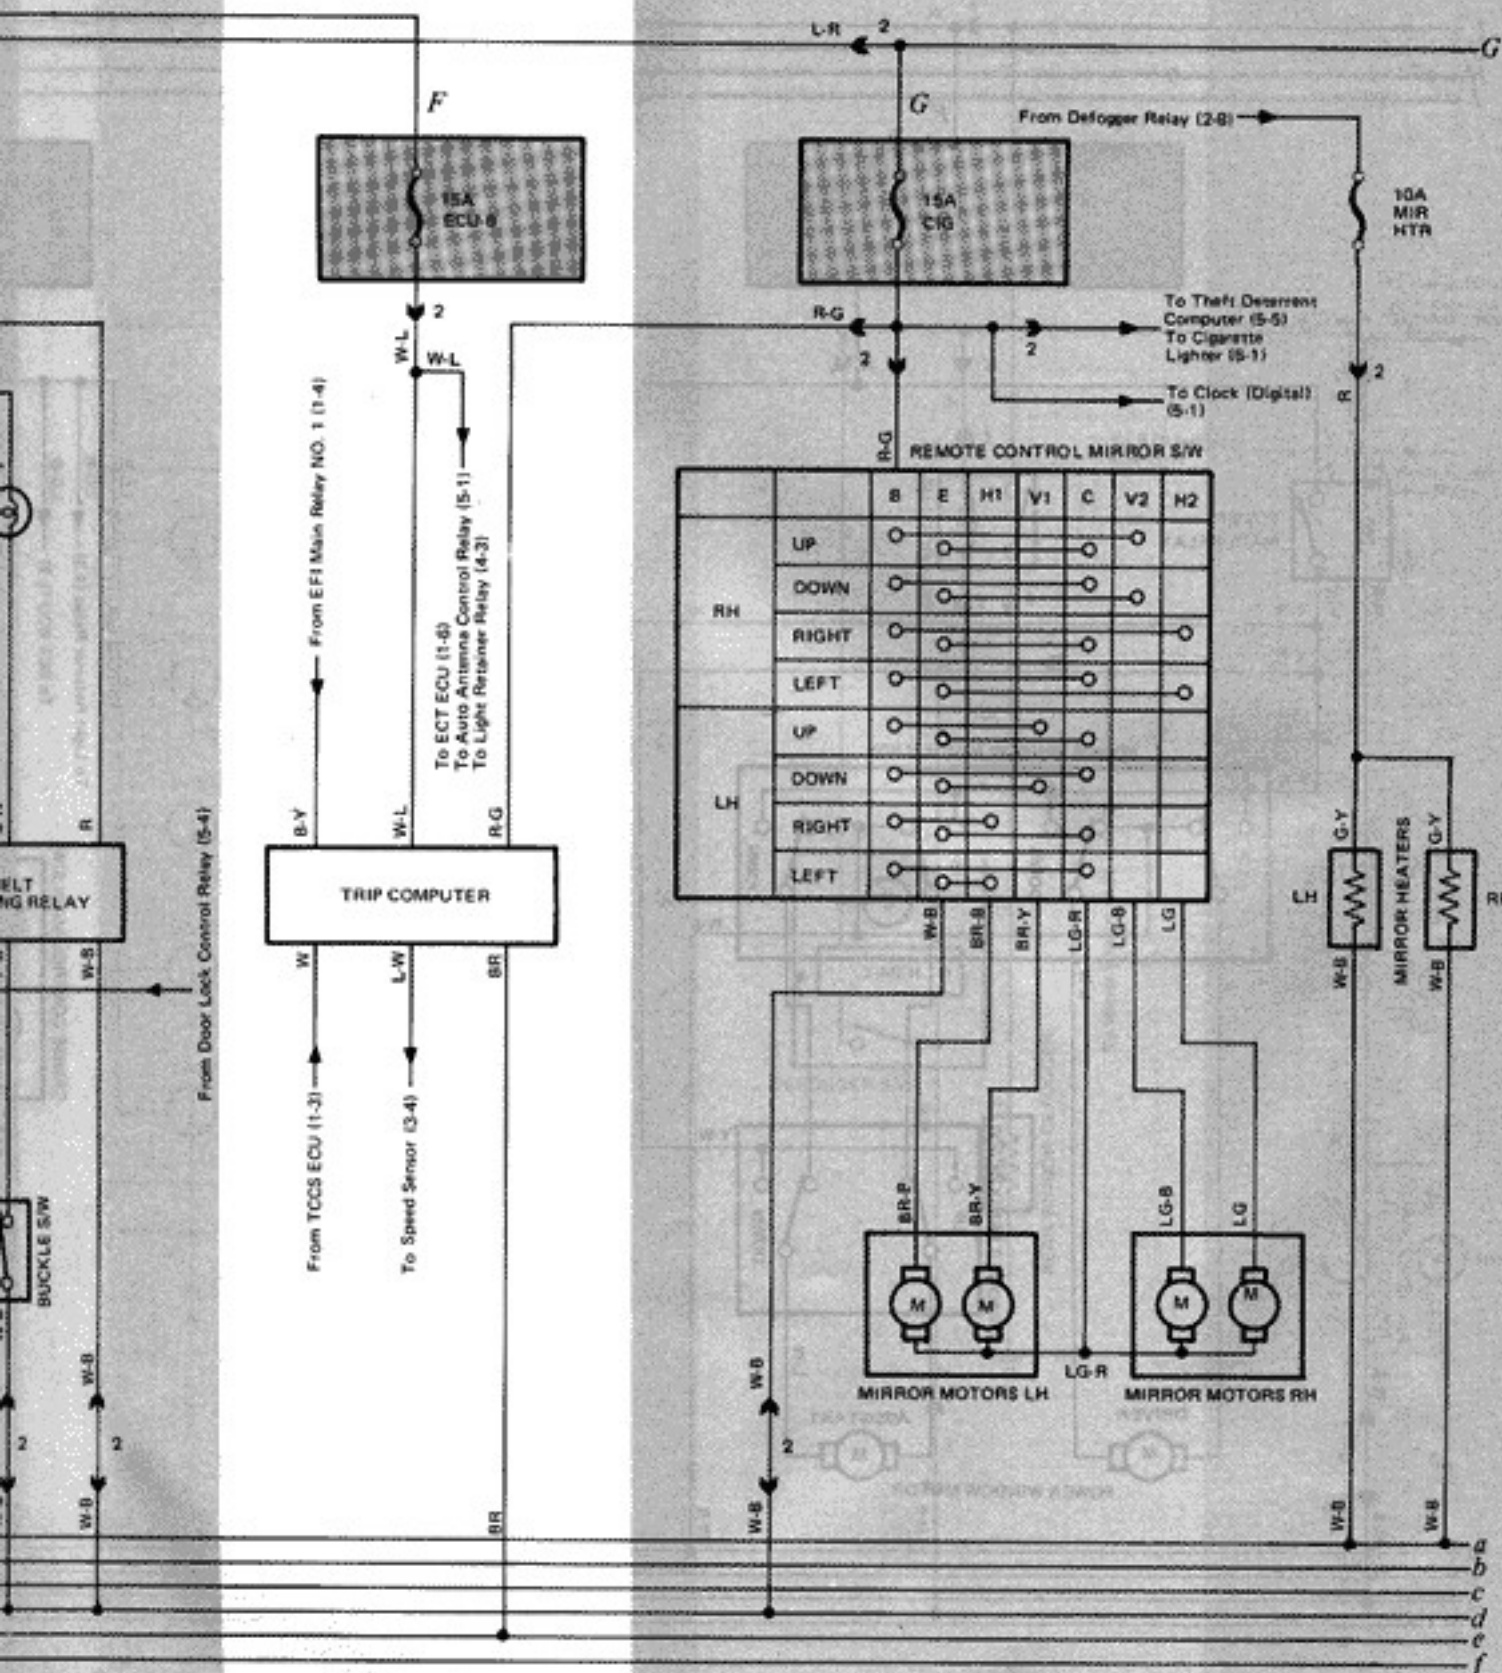

CELICA SUPRA (Cont'd)



Clock




Cigarette Lighter



Auto Antenna



Radio and Tape Player

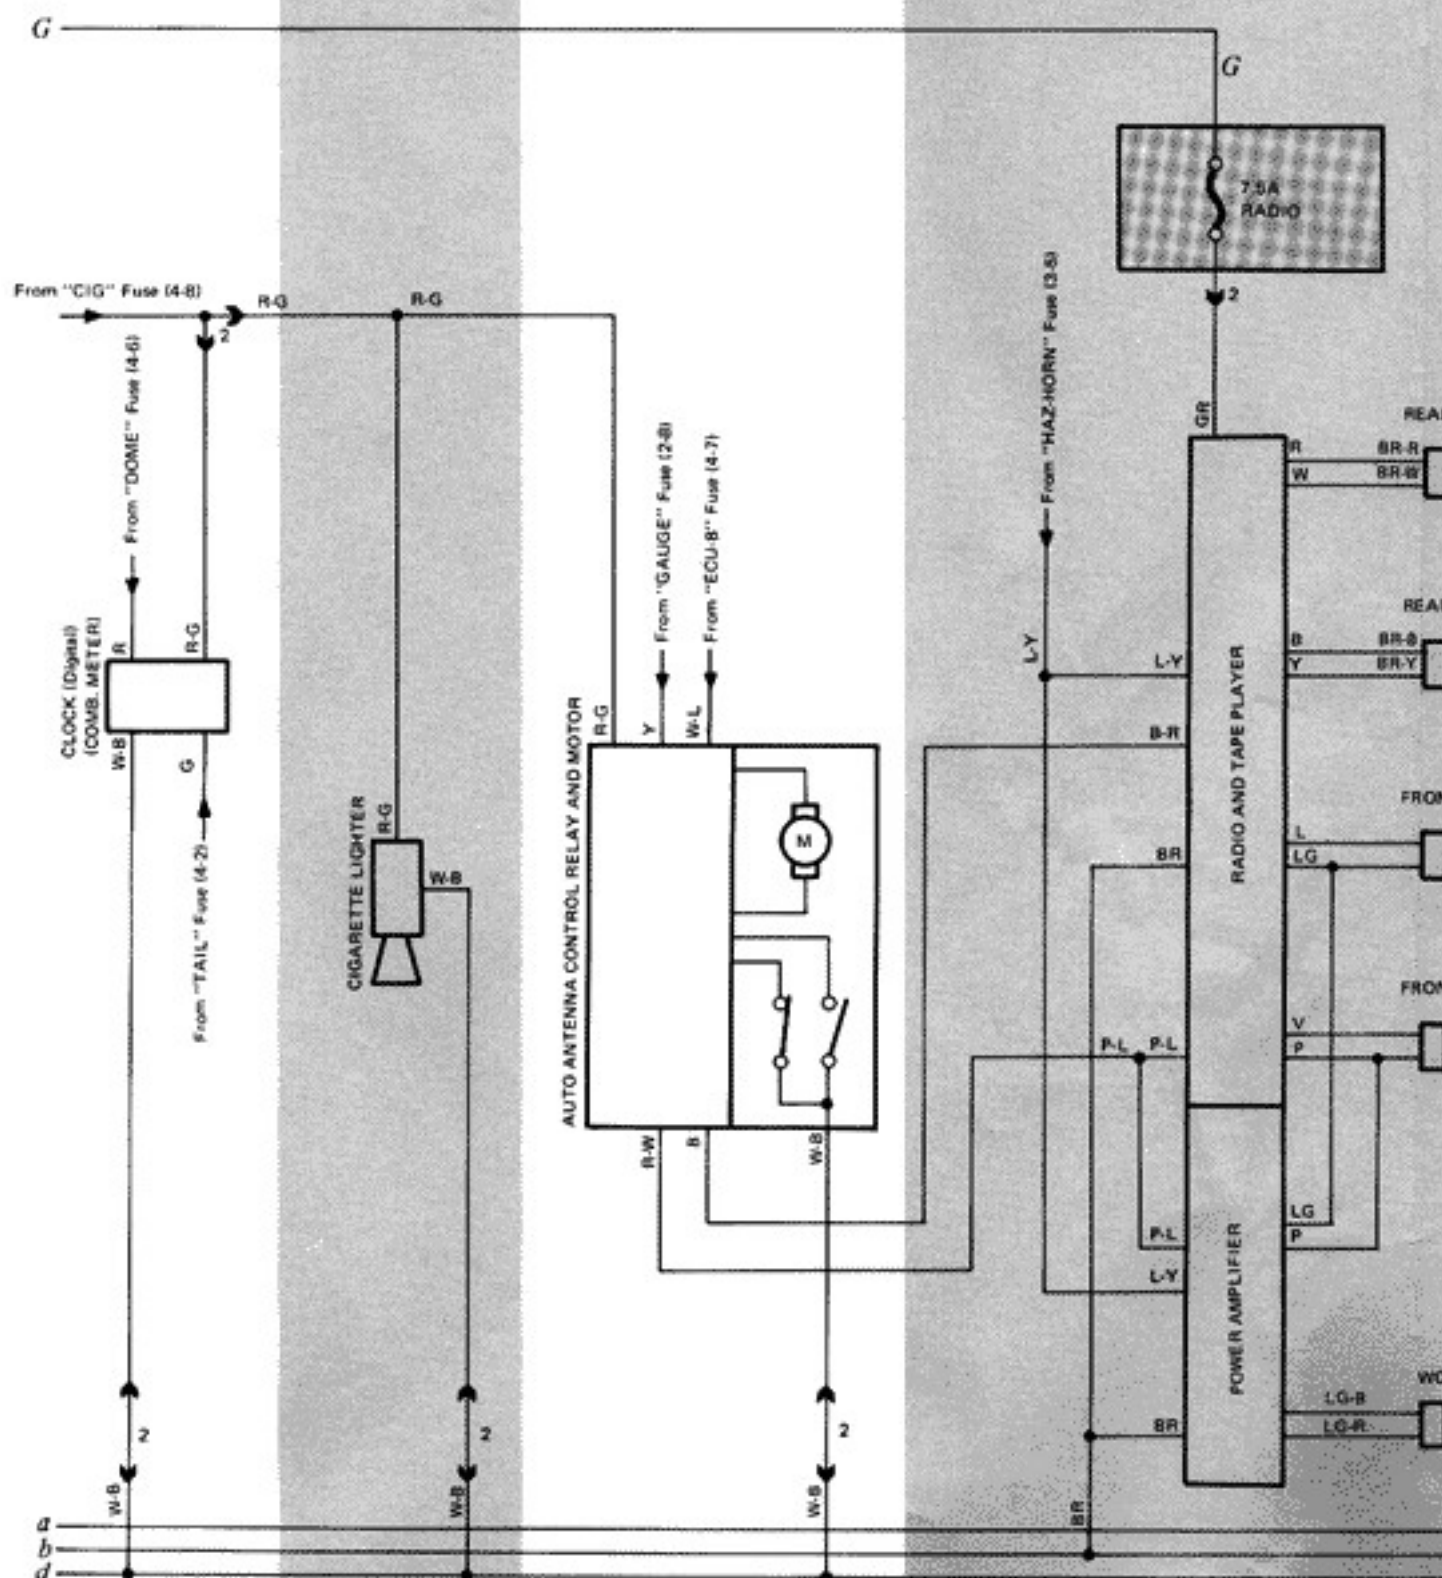

Ground points


a = Located under right front pillar

b = Located under left front pillar

d = Located on left front fender apron near junction block No. 3



Door Locks

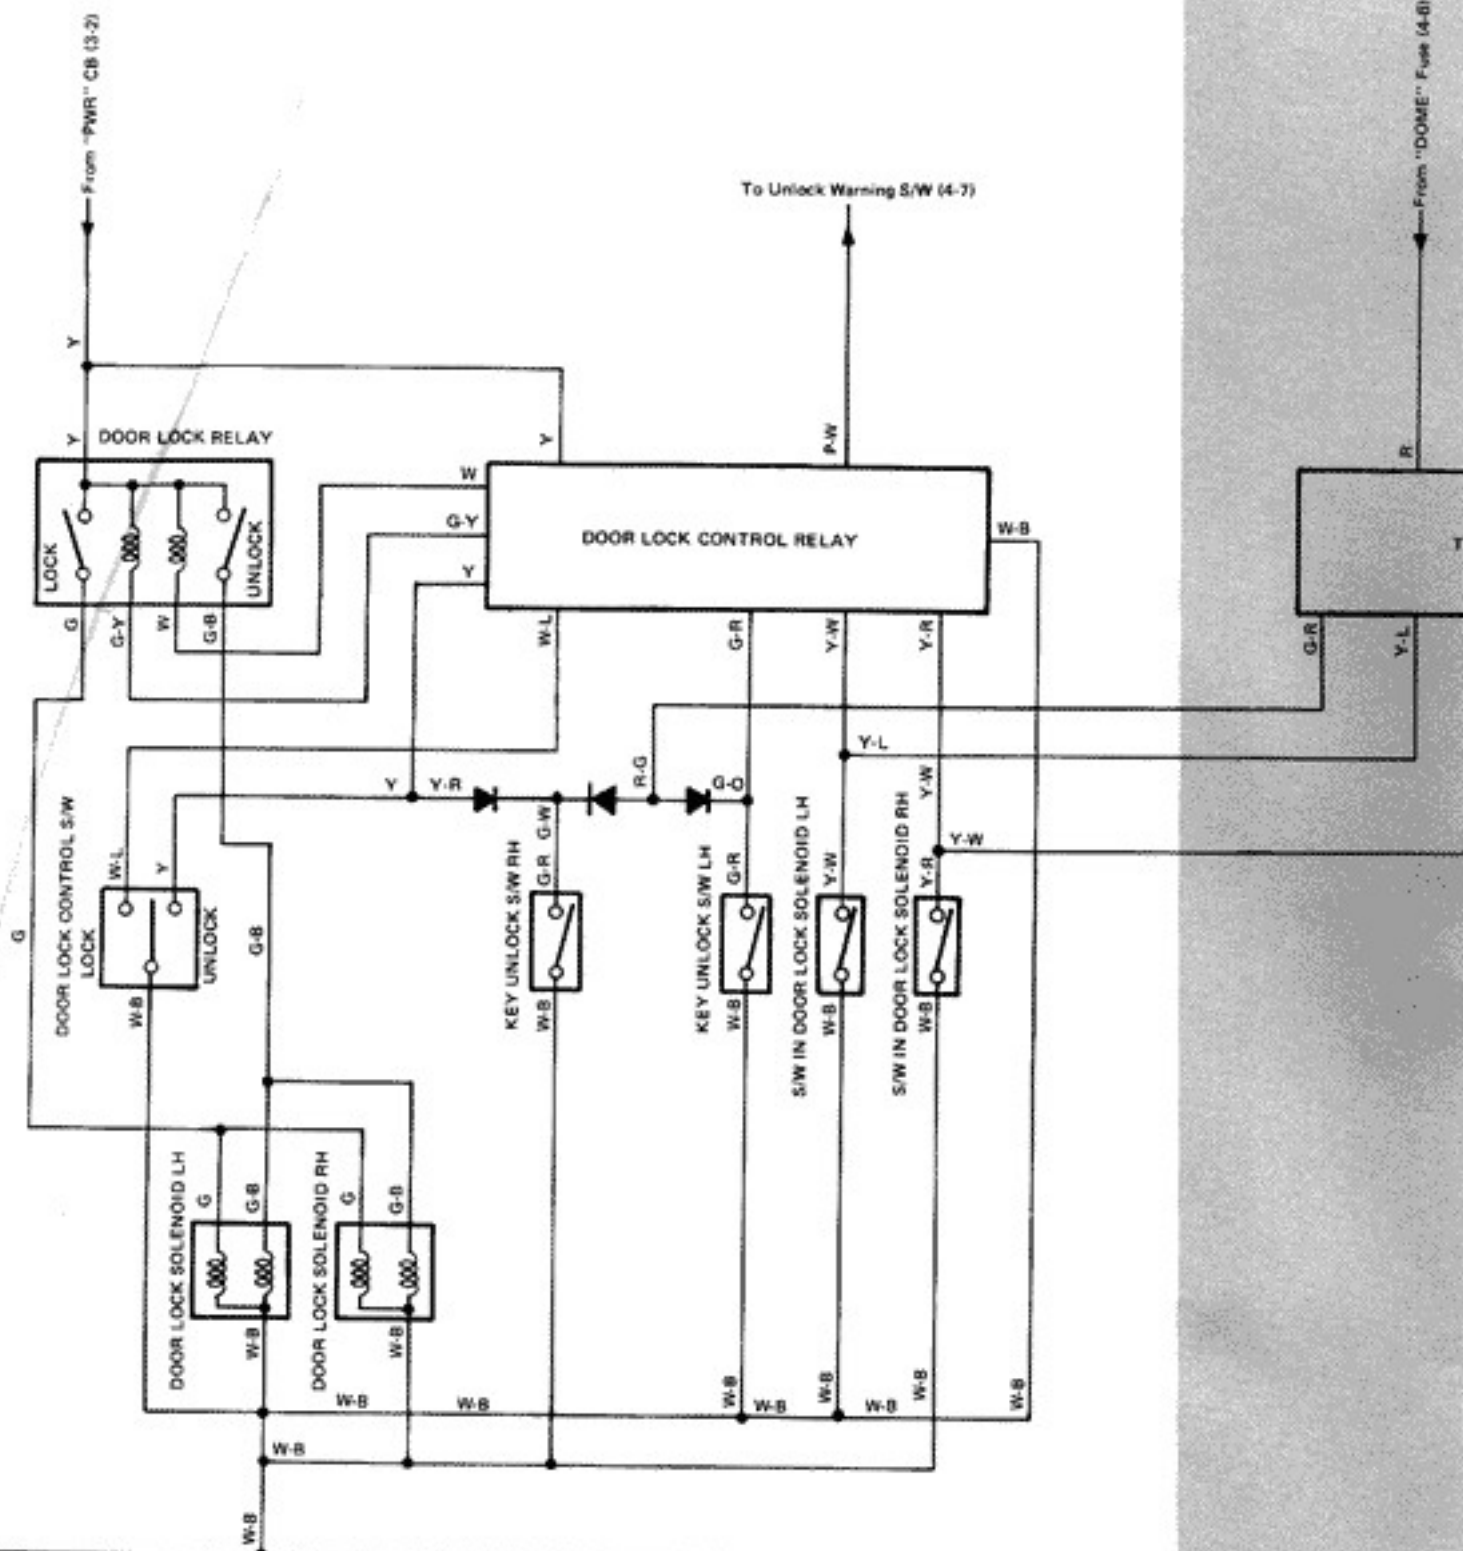



Theft Deterrent System

