

## 2. Differential Gear Oil


### A: INSPECTION

- 1) Lift up the vehicle.
- 2) Remove the filler plug, and then check the gear oil. Replace the gear oil if it is contaminated, deteriorated or cloudy. <Ref. to DI-19, REPLACEMENT, Differential Gear Oil.>
- 3) Check that the gear oil level is within  $-5\text{ mm}$  ( $-0.2\text{ in}$ ) from the bottom of the filler plug hole. If the level is low, make sure that there is no oil leakage and refill up to the bottom of filler plug hole.

#### NOTE:


On VA1-types at factory settings, the oil level may be within  $-14\text{ mm}$  ( $-0.6\text{ in}$ ) from the bottom of the filler plug. This is at normal level, requiring no oil re-fill.

- T-type

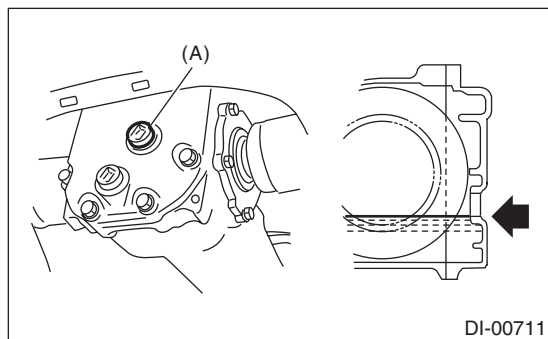

(A) Filler plug

- VA1-type

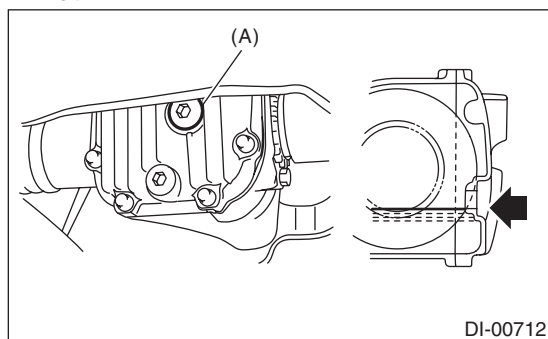

(A) Filler plug

- 4) Install the filler plug.

#### NOTE:

- For the T-type, degrease the thread portion sufficiently and apply liquid gasket to the filler plug.

#### Liquid gasket:

**THREE BOND 1105 (Part No. 004403010) or equivalent**

- For VA-type, use a new gasket.

#### Tightening torque:

##### T-type:

**49 N·m (5.0 kgf-m, 36.1 ft-lb)**

##### VA-type:

**50 N·m (5.1 kgf-m, 36.9 ft-lb)**


### B: REPLACEMENT

#### CAUTION:

- Gear oil is extremely hot just after driving. Be wary of receiving burns.
- Be careful not to spill the differential gear oil on exhaust pipe. If gear oil is spilled, wipe it off completely.

- 1) Lift up the vehicle.
- 2) Remove the drain plug and filler plug, and drain the gear oil.


- T-type

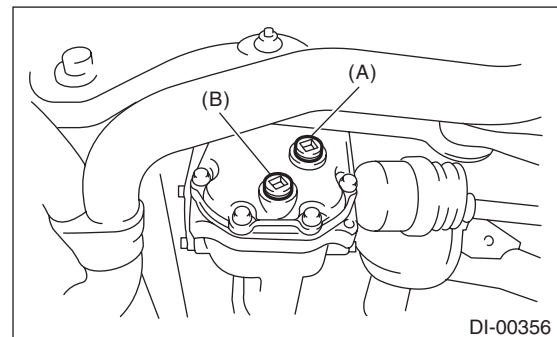

(A) Filler plug

(B) Drain plug

- VA1-type

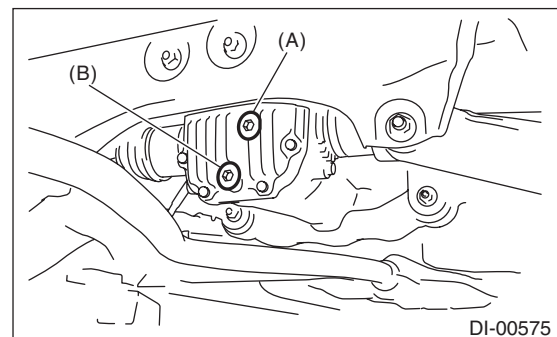

(A) Filler plug

(B) Drain plug

# Differential Gear Oil

## DIFFERENTIALS

3) Tighten the drain plug.

### NOTE:

- For the T-type, degrease the thread portion sufficiently and apply liquid gasket to the drain plug.

### Liquid gasket:

**THREE BOND 1105 (Part No. 004403010) or equivalent**

- For VA-type, use a new gasket.

### Tightening torque:

#### T-type:

**49 N·m (5.0 kgf-m, 36.1 ft-lb)**

#### VA-type:

**50 N·m (5.1 kgf-m, 36.9 ft-lb)**

4) Fill the differential carrier with gear oil to the bottom of filler plug.

### NOTE:

Carefully refill gear oil while watching the level. Excessive or insufficient oil must be avoided.


### Recommended gear oil:

**<Ref. to DI-2, SPECIFICATION, General Description.>**

### Oil capacity:

**0.8 L (0.8 US qt, 0.7 Imp qt)**


- T-type

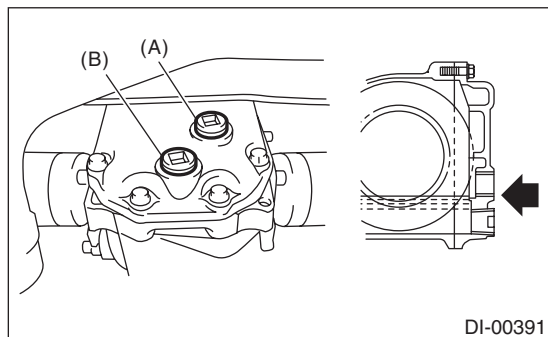

(A) Filler plug

(B) Drain plug

- VA1-type

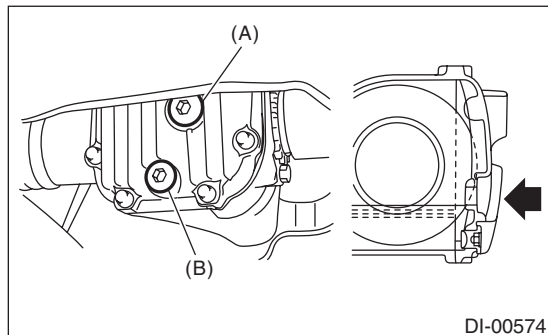

(A) Filler plug

(B) Drain plug

5) Install the filler plug.

### NOTE:

- For the T-type, degrease the thread portion sufficiently and apply liquid gasket to the filler plug.

### Liquid gasket:

**THREE BOND 1105 (Part No. 004403010) or equivalent**

- For VA-type, use a new gasket.

### Tightening torque:

#### T-type:

**49 N·m (5.0 kgf-m, 36.1 ft-lb)**

#### VA-type:

**50 N·m (5.1 kgf-m, 36.9 ft-lb)**