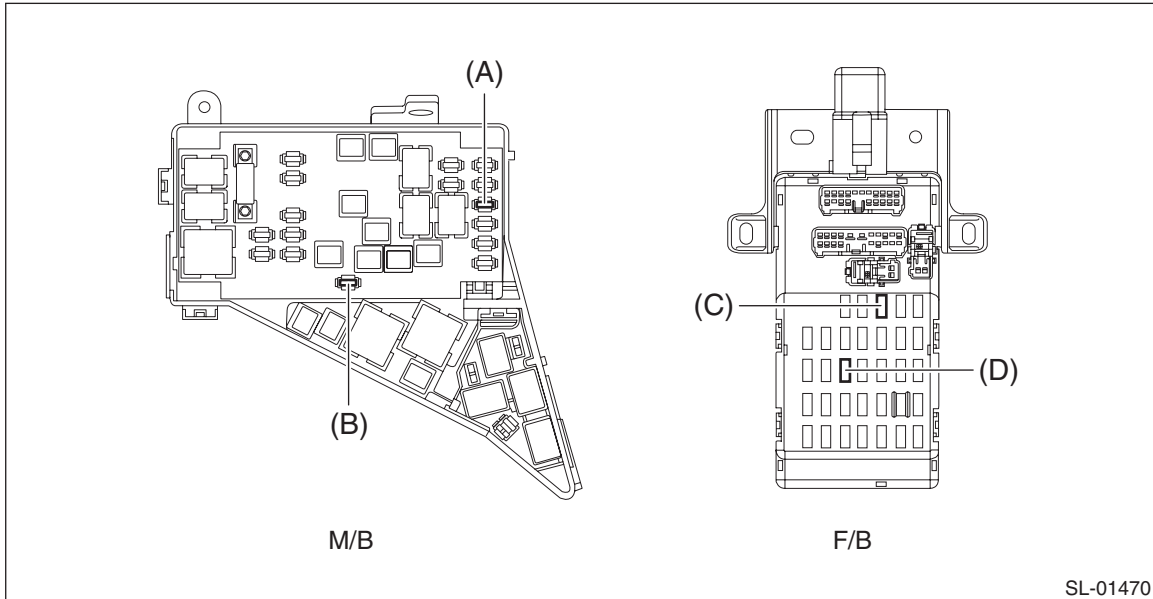


2. Relay and Fuse

A: LOCATION



Main fuse box	Fuse 15 A (turn signal and hazard unit, body integrated unit)	(A)
	Fuse 20 A (body integrated unit, immobilizer antenna)	(B)
Relay & fuse box	Fuse 15 A (body integrated unit)	(C)
	Fuse 10 A (keyless entry CM, TPMS & keyless entry CM)	(D)

NOTE:

For other related fuses, refer to the wiring diagram.

- Gasoline engine model: <Ref. to WI(w/o HEV)-16, Power Supply Circuit.>
- HEV model: <Ref. to WI(HEV)-21, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

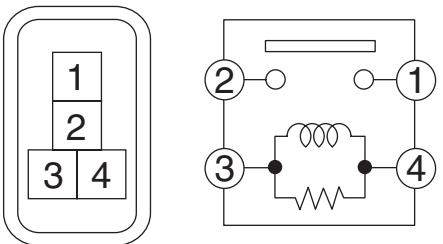
- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

NOTE:

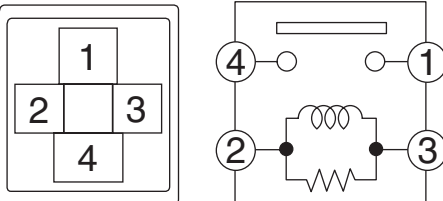
If the fuse is blown again, check the system wiring harness.

2. CHECK RELAY

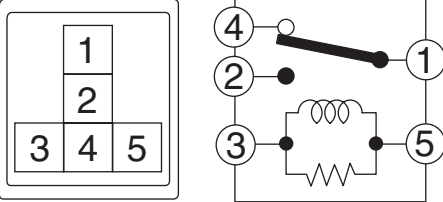
- 1) Check the resistance between relay terminals.

Terminal No.	Inspection conditions	Standard	Circuit
1 — 2	Always	1 MΩ or more	
1 — 2	Apply battery voltage between terminals 4 and 3.	Less than 1 Ω	

LI-01273

Terminal No.	Inspection conditions	Standard	Circuit
1 — 4	Always	1 MΩ or more	
1 — 4	Apply battery voltage between terminals 2 and 3.	Less than 1 Ω	

AC-02796

Terminal No.	Inspection conditions	Standard	Circuit
1 — 2	Always	1 MΩ or more	
1 — 4	Always	Less than 1 Ω	
1 — 2	Apply battery voltage between terminals 3 and 5.	Less than 1 Ω	

SL-01566

- 2) Replace the relay if the inspection result is not within the standard value.