


7. Front Arm

A: REMOVAL

- 1) Lift up the vehicle, and then remove the front wheels.
- 2) Remove the bolts and clips, and remove the under cover - front.

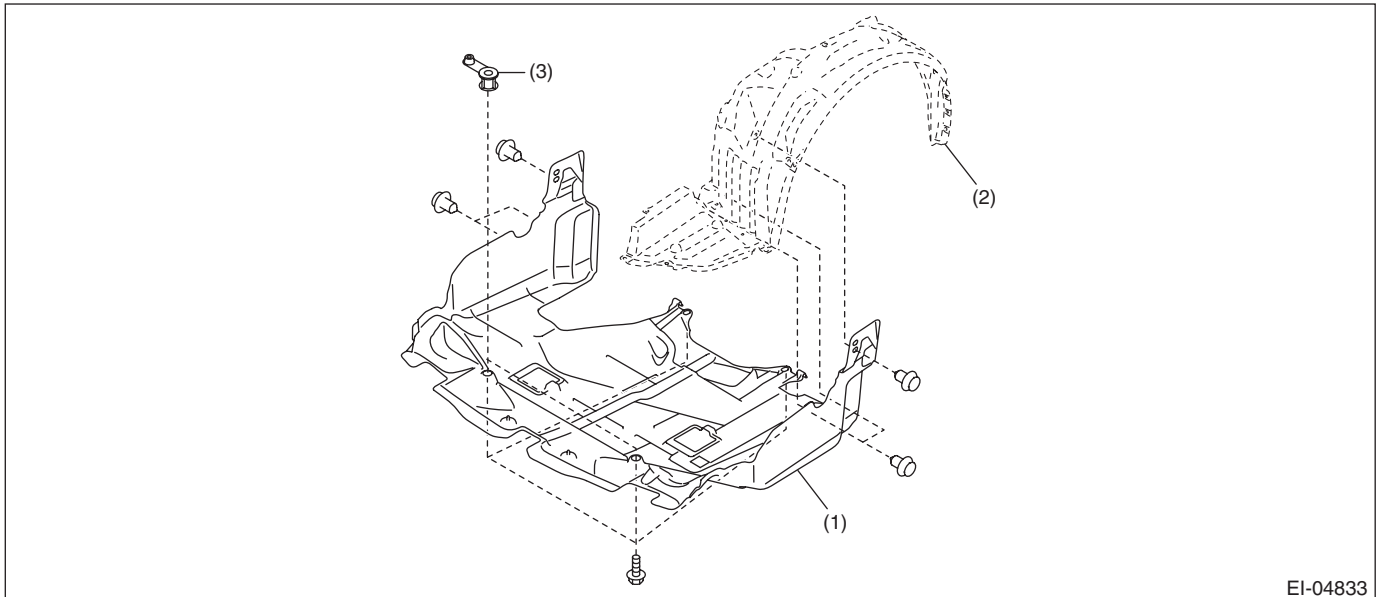

EI-04833


(1) Under cover - front

(2) Mud guard - front

(3) Plate cover - rear (XV model)

- 3) Remove the front arm assembly.

- (1) Remove the bolt, and then detach the front support.
- (2) Remove the bolts and nuts, and then remove the front arm rear plate.
- (3) Remove the nut and disconnect the stabilizer link assembly.
- (4) Pull out the cotter pin (a), remove the castle nut (b), and remove the ball joint assembly from front arm assembly.
- (5) Remove the nuts, pull out the flange bolt, and remove the front arm assembly.

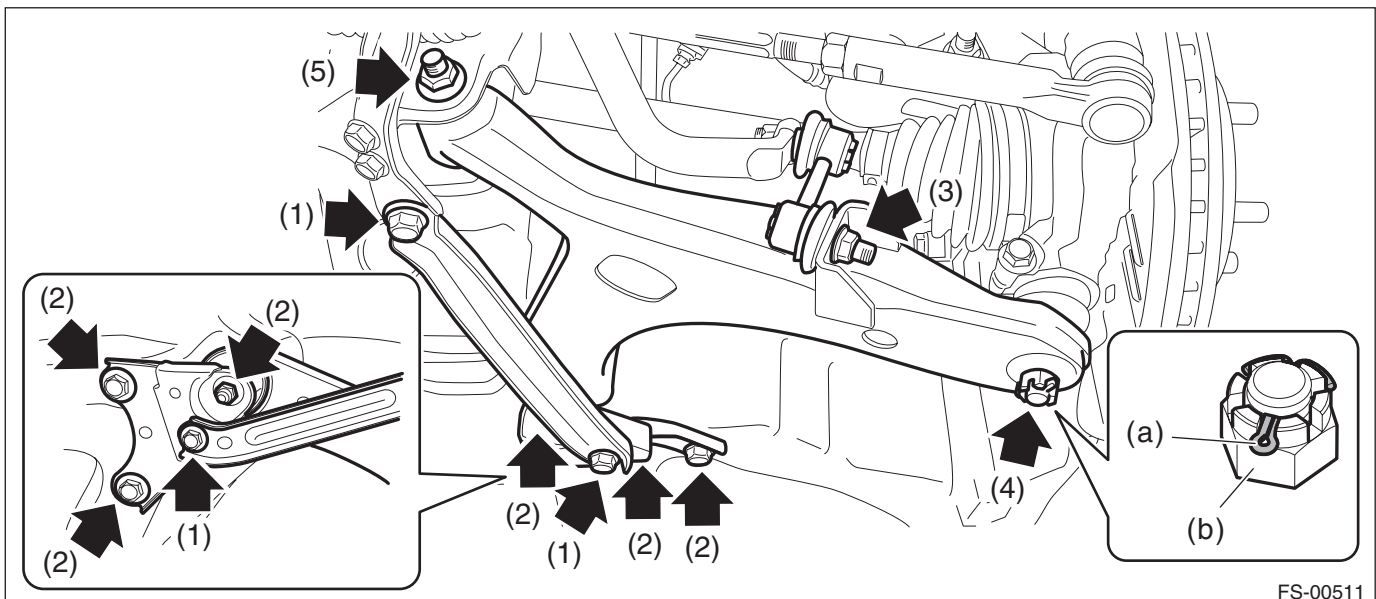


FS-00511

B: INSTALLATION

- 1) Before installation, inspect the following items and replace any faulty part with a new one.
 - Check the front arm assembly for damage or cracks, and replace if defective.
 - Visually check the bushing for abnormal cracks, fatigue or damage.
 - Visually check the dust cover on the ball joint assembly for damage.
- 2) Using new self-locking nuts and flange bolts, temporarily tighten the front arm assembly to the front cross-member assembly.
- 3) Install the ball joint assembly to the housing assembly - front axle.

CAUTION:

Before tightening, make sure the bottom surface of the housing assembly - front axle and the stepped section of ball joint are in contact.

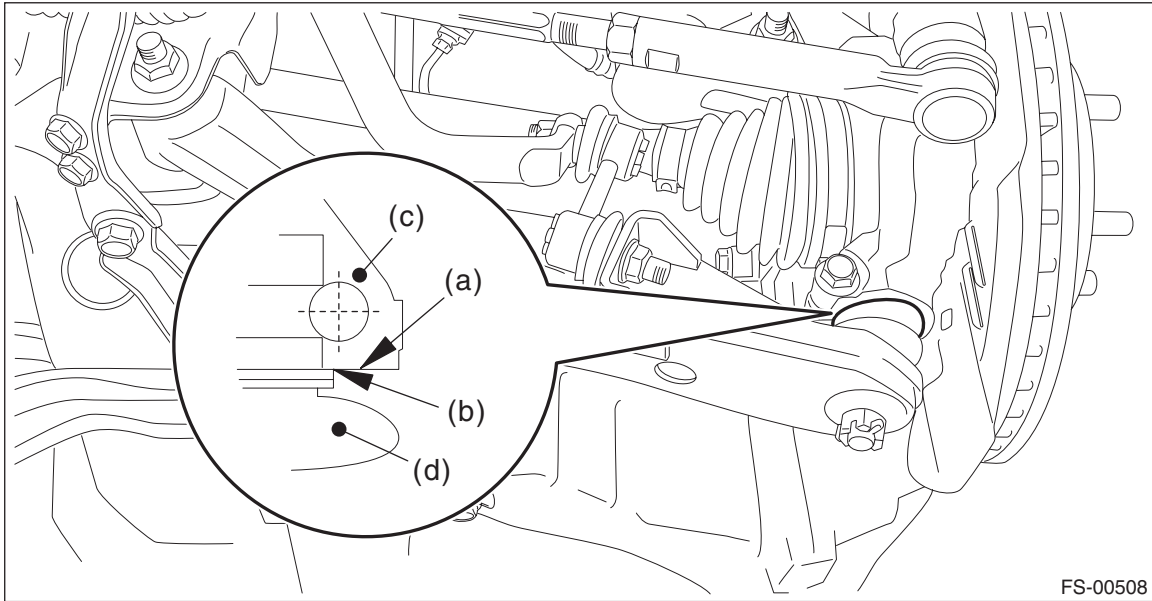

- (a) Bottom surface of housing ASSY - front axle (c) Housing ASSY - front axle (d) Ball joint ASSY
(b) Raised section of ball joint

Tightening torque:

50 N·m (5.10 kgf-m, 36.9 ft-lb)

- 4) Install the stabilizer link assembly.

Tightening torque:


Except for XV model: 38 N·m (3.87 kgf-m, 28.0 ft-lb)

XV model: 60 N·m (6.12 kgf-m, 44.3 ft-lb)

5) Install the under cover - front.

CAUTION:

Install the under cover so that the under cover front end (b) comes inside of the bumper face - front (a).

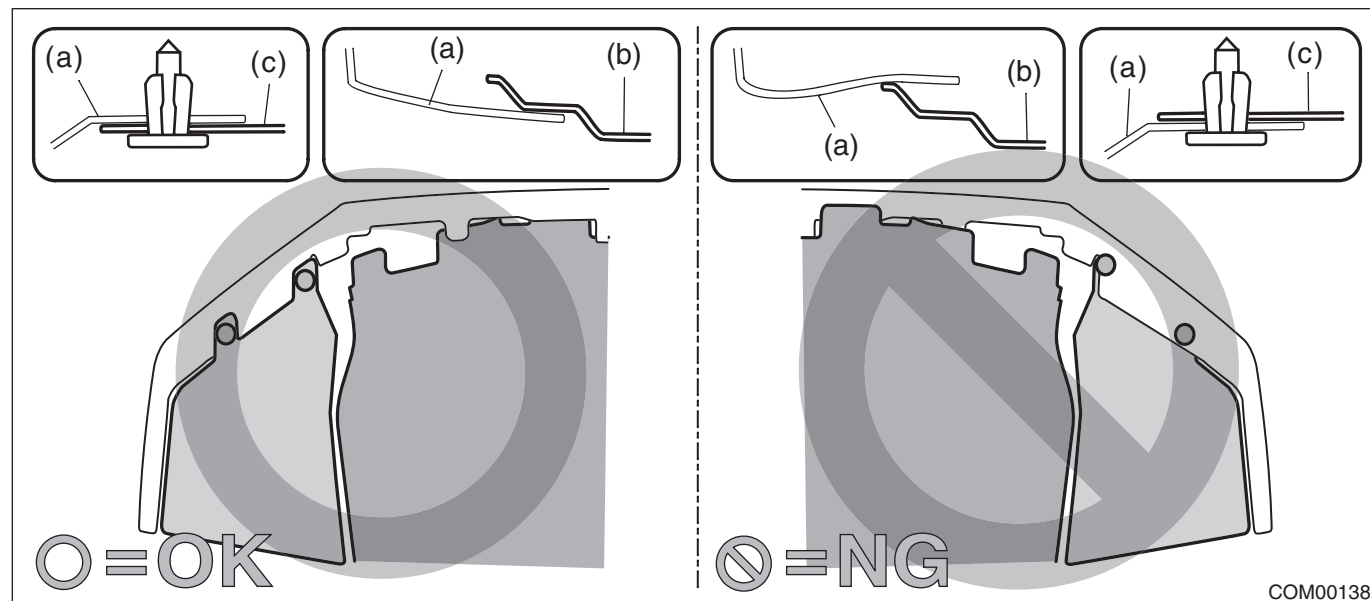

Tightening torque:

18 N·m (1.84 kgf-m, 13.3 ft-lb)

6) Install the front wheels.

Tightening torque:

Except for C4 model: 120 N·m (12.24 kgf-m, 88.5 ft-lb)

C4 model: 100 N·m (10.20 kgf-m, 73.8 ft-lb)

7) Unload the vehicle from the lift, and tighten the bolt which secures the front arm assembly to the front crossmember assembly while the wheels are in full contact with the ground and the vehicle is at curb weight.

Tightening torque:

Busing front - front arm: 95 N·m (9.7 kgf-m, 70.1 ft-lb)

Busing rear - front arm: 110 N·m (11.22 kgf-m, 81.1 ft-lb)

8) Inspect the wheel alignment and adjust if necessary.

- Inspection: <Ref. to FS-7, INSPECTION, Wheel Alignment.>
- Adjustment: <Ref. to FS-12, ADJUSTMENT, Wheel Alignment.>

CAUTION:

When the wheel alignment has been adjusted, perform the following VDC setting mode.

- Model without EyeSight: VDC sensor midpoint setting mode <Ref. to VDC-26, VDC SENSOR MID-POINT SETTING MODE (MODELS WITHOUT EyeSight), ADJUSTMENT, VDC Control Module and Hydraulic Control Unit (VDCCM&H/U).>
- Model with EyeSight: Neutral of Steering Angle Sensor & Lateral G Sensor 0 point setting <Ref. to VDC-26, NEUTRAL OF STEERING ANGLE SENSOR & LATERAL G SENSOR 0 POINT SETTING (MODEL WITH EyeSight), ADJUSTMENT, VDC Control Module and Hydraulic Control Unit (VDC-CM&H/U).>
- Model with EyeSight: Longitudinal G sensor & lateral G sensor 0 point setting <Ref. to VDC-27, LONGITUDINAL G SENSOR & LATERAL G SENSOR 0 POINT SETTING MODE (MODEL WITH EyeSight), ADJUSTMENT, VDC Control Module and Hydraulic Control Unit (VDCCM&H/U).>

9) Perform reinitialization of the auto headlight beam leveler system. (Model with auto headlight beam leveler) <Ref. to LI-20, PROCEDURE, Auto Headlight Beam Leveler System.>

Front Arm

FRONT SUSPENSION


C: DISASSEMBLY

1. BUSHING FRONT - FRONT ARM

1) Put an alignment mark on the front arm assembly based on the split portion of the bushing intermediate plate of the busing front - front arm.

CAUTION:

Always put an alignment mark for aligning the position on bushing installation.

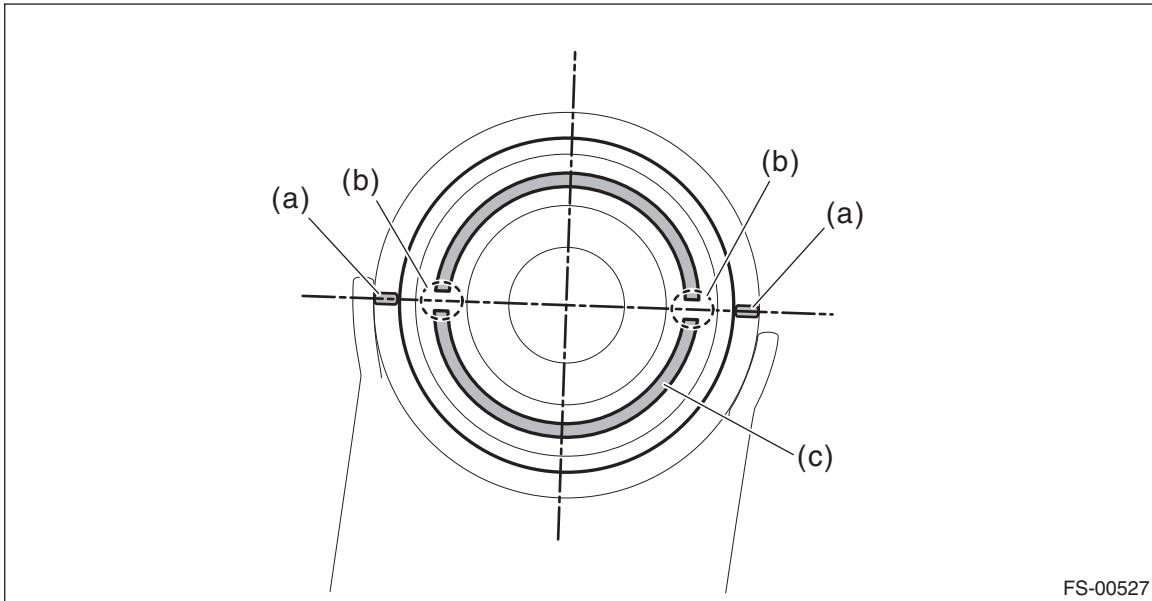

(a) Put an alignment mark.


(b) Split portion of bushing intermediate plate

(c) Bushing intermediate plate

2) Using the ST and a press, remove the busing front - front arm.

PREPARATION TOOL:

ST: INSTALLER & REMOVER SET (927680000)

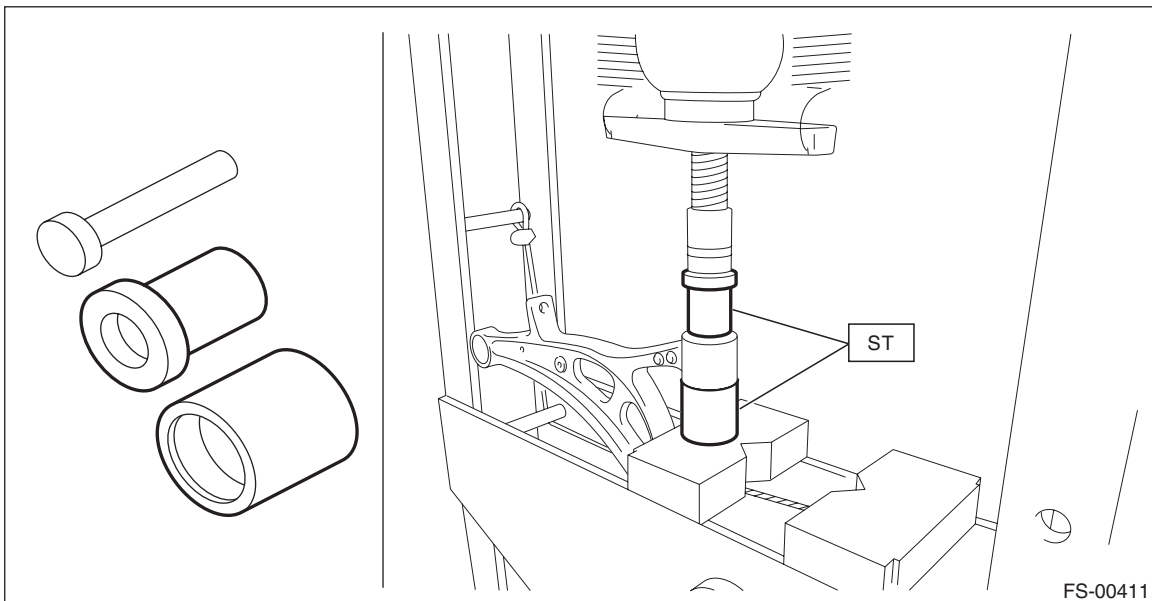


2. BUSHING REAR - FRONT ARM

- 1) Put an alignment mark on the front arm assembly based on the center of recess portion of the busing rear - front arm.
- 2) Using the ST and a press, remove the busing rear - front arm.

PREPARATION TOOL:

ST1: REMOVER (20299AG000)

ST2: BASE (20299AG010)

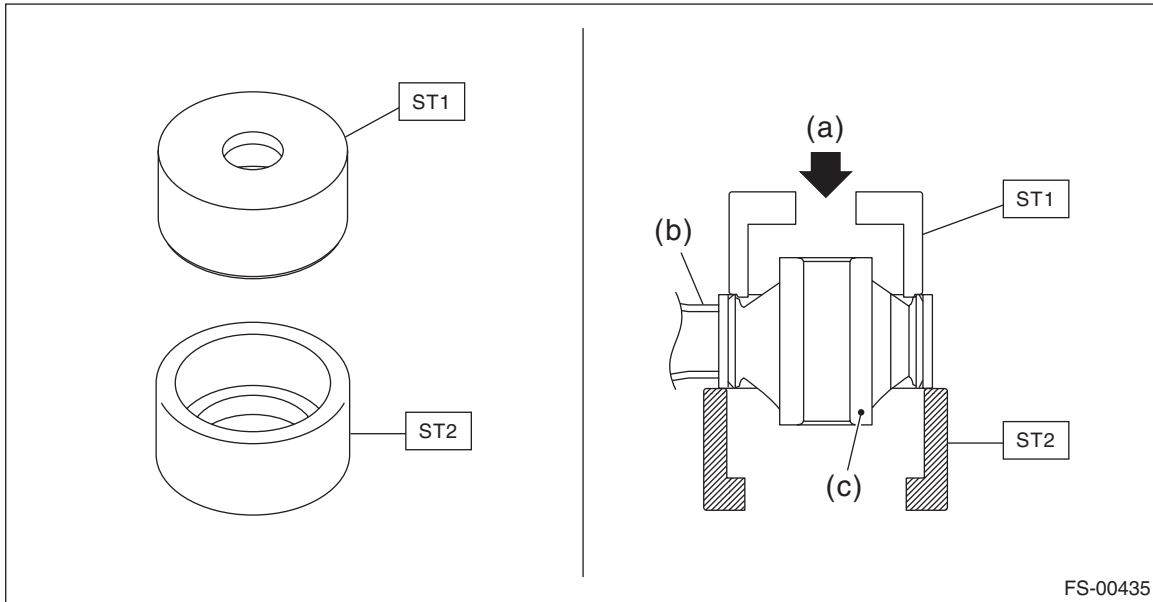

(a) Press

(b) Front arm ASSY

(c) Bushing rear - front arm

D: ASSEMBLY

1. BUSHING FRONT - FRONT ARM

- 1) Before assembly, inspect the following items and replace any faulty part with a new one.
 - Check the front arm assembly for damage or cracks, and replace if defective.
 - Visually check the bushing for abnormal cracks, fatigue or damage.
 - Visually check the dust cover on the ball joint assembly for damage.
- 2) Align the alignment mark on the front arm assembly to the split portion of the bushing intermediate plate of the busing front - front arm.


Front Arm

FRONT SUSPENSION

3) Using the ST and a press, assemble the bushing front - front arm.

PREPARATION TOOL:

ST: INSTALLER & REMOVER SET (927680000)

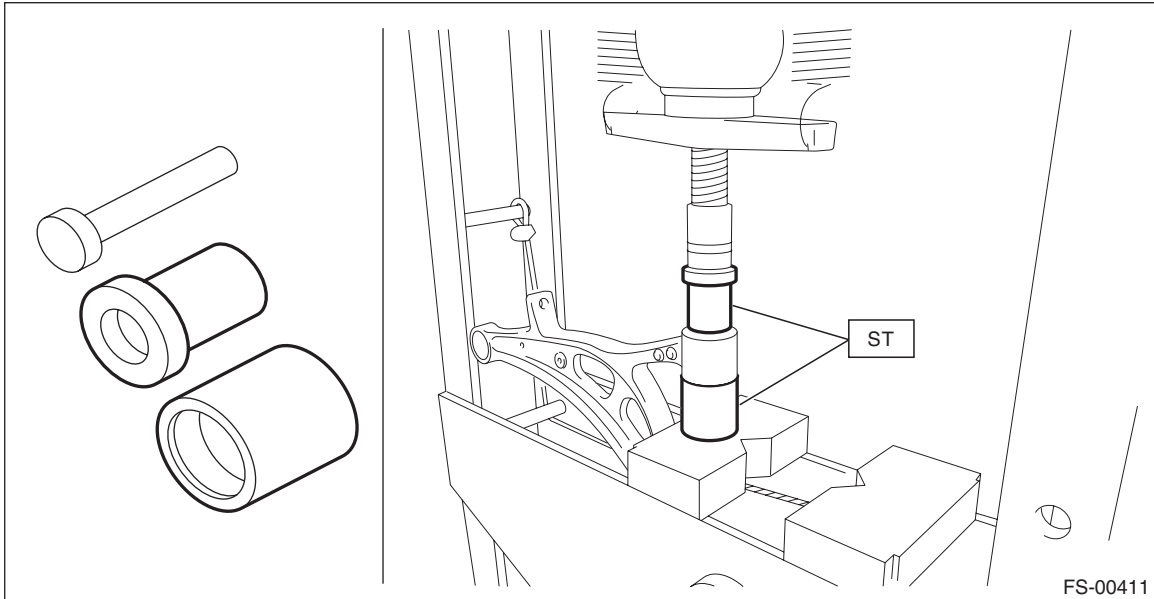


2. BUSHING REAR - FRONT ARM

1) Before installation, inspect the following items and replace any faulty part with a new one.

- Check the front arm assembly for damage or cracks, and replace if defective.
- Visually check the bushing for abnormal cracks, fatigue or damage.
- Visually check the dust cover on the ball joint assembly for damage.

2) Align a line extending from the center of recess portion with the ball joint after placing the protrusion (A) of recess portion to the ball joint side of the front arm assembly.

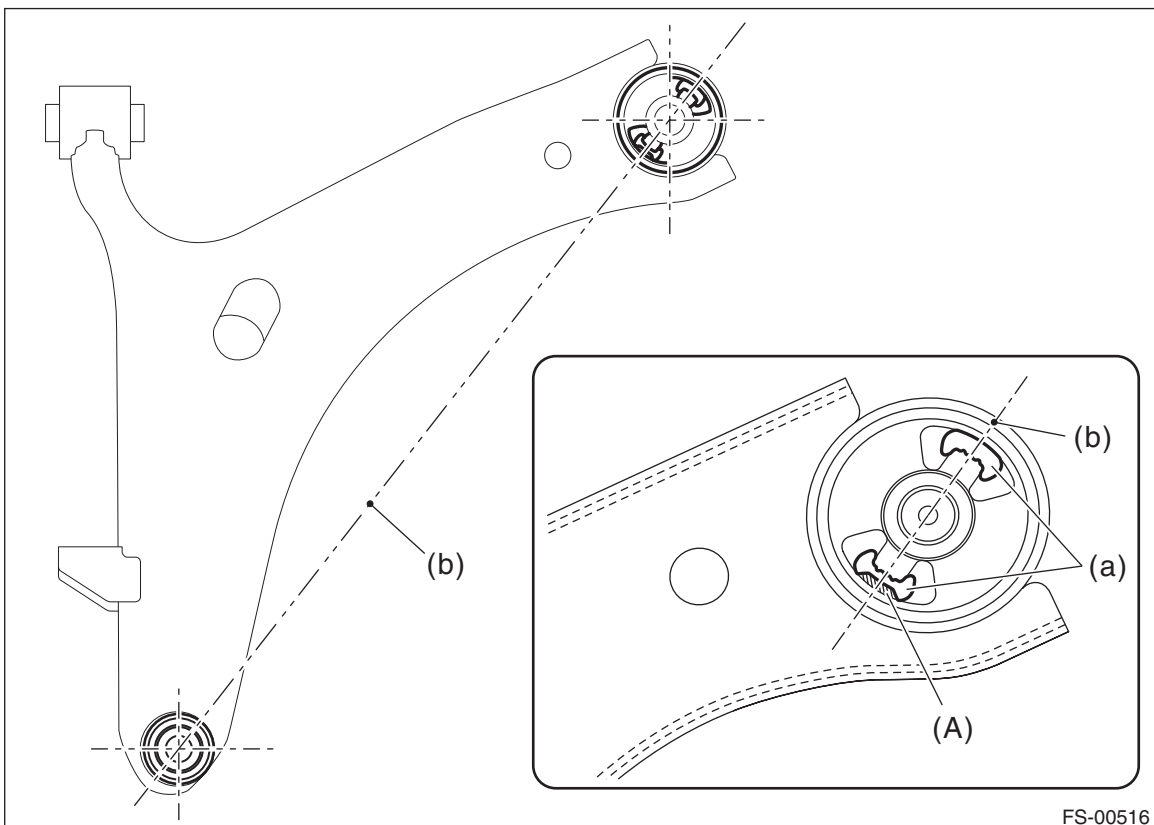


(a) Recess section

(b) Center line of recess section

3) Using the ST and a press, install the busing rear - front arm.

CAUTION:

Align the upper face of front arm assembly and the end of bushing during installation.

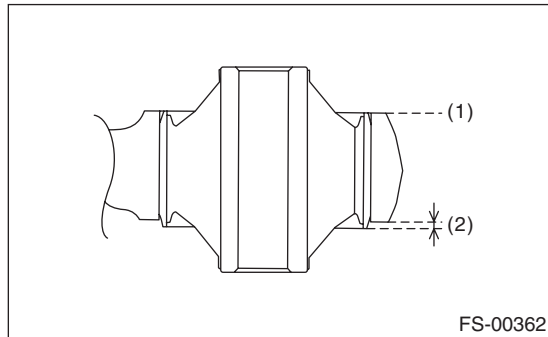


(1) Aligned

(2) Not aligned

PREPARATION TOOL:

ST1: REMOVER (20299AG000)

ST2: BASE (20299AG010)

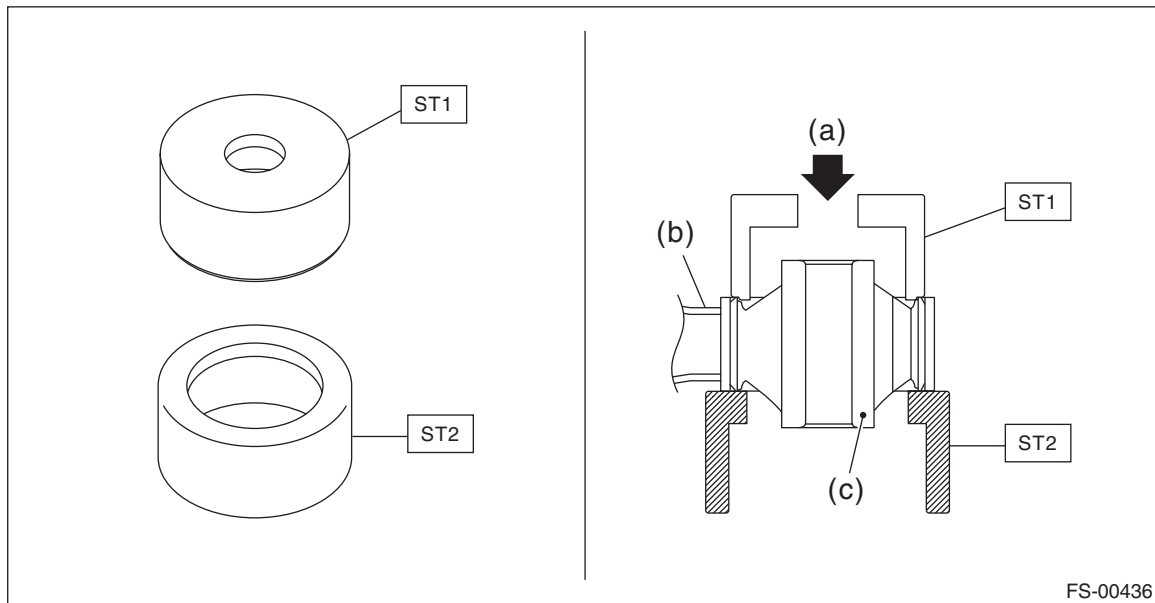

(a) Press

(b) Front arm ASSY

(c) Bushing rear - front arm