
1. General Description

A: SPECIFICATION

Model		Rear disc brake
Туре		Mechanical, drum in disc rear brakes
Effective drum diameter	mm (in)	170 (6.69)
Lining dimensions (Length × Width × Thickness)	mm (in)	147.7 × 30.0 × 3.5 (5.81 × 1.181 × 0.14)
Clearance adjustment		Manual adjustment
Lever stroke	Notches/N (kgf, lbf)	7 — 8/200 (20.4, 45)

B: COMPONENT

1. PARKING BRAKE (REAR DISC BRAKE)

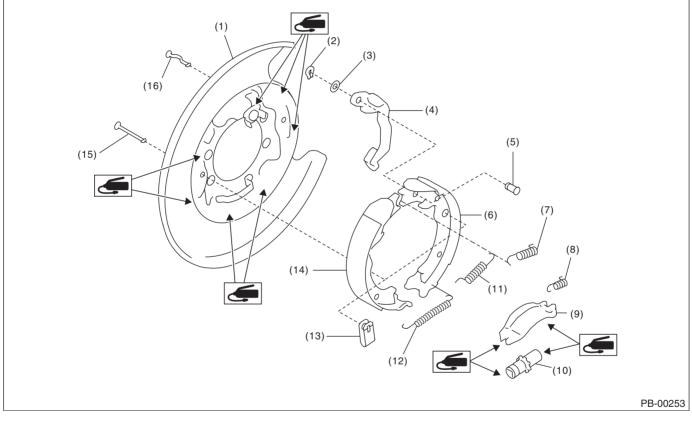


- (1) Back plate rear brake
- (2) Retainer rear brake
- (3) Spring washer rear brake
- (4) Parking lever rear
- (5) Pin parking lever
- (6) Parking brake shoe (secondary)
- (7) Spring secondary shoe return
- (8) Spring strut
- (9) Strut brake
- (10) Adjuster ASSY rear brake
- (11) Spring primary shoe return
- (12) Spring adjuster

- (13) Cup shoe hold-down
- (14) Parking brake shoe (primary)
- (15) Pin primary shoe hold-down
- (16) Pin secondary shoe hold-down

General Description

2. PARKING BRAKE LEVER & CABLE

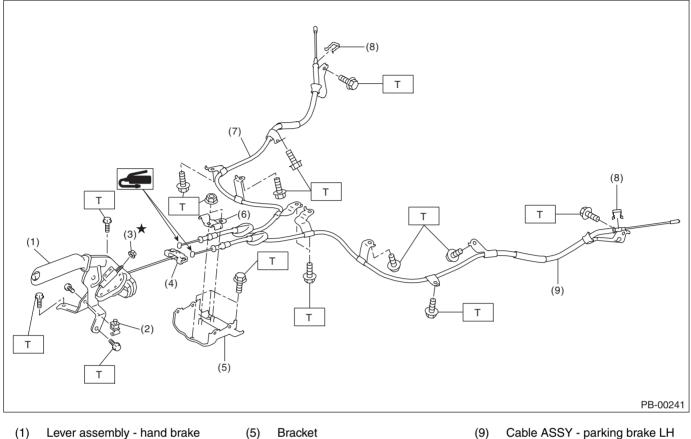

- Switch ASSY hand brake

- (2)
- Clamp A hand brake cable (6)
- Adjusting nut (self-locking nut) (3)
- Cable ASSY parking brake RH (7) (8) Clamp B - hand brake cable
- Tightening torque: N·m (kgf-m, ft-lb) T: 18 (1.84, 13.3)

C: CAUTION

(4)

Equalizer

· Wear appropriate work clothing, including a helmet, protective goggles and protective shoes when performing any work.

• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.

Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts. •

Use SUBARU genuine grease etc. or equivalent. Do not mix grease etc. of different grades or manufac-• turers.

- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points. •
- Make sure grease does not come into contact with the parking shoes. ٠

D: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.